

INSTALLATION

CONSTELLATION DRIVING LIGHT BAR 5001

PARTS INCLUDED

- Constellation Driving Light Bar A 1 Constellation Driving Light Bar B
- 1
- Adjustable Driving Light Mask 1
- Driving Light with Turn Signal Right 1
- 1 Driving Light with Turn Signal Left
- Hardware Kit Containing:
 - 1/4"-20 x1" Button Socket Cap Screws
 - 8 Insulated Male Spades
 - 8 Female T-Tap Connectors
 - 8 4" Cable Ties
 - 1 5/32" Short Hex Wrench
 - 2 Dielectric Grease Packs
 - 1/4-20 x 1/2" Button Socket Cap Screws 2
 - 2 1/4" Flat Washers
 - #10-24 x 5/16" Button Socket Cap Screws
- 1 Installation Instructions

Please read and understand entire instructions before starting installation.

THANK YOU FOR CHOOSING KÜRYAKYN!

IN ORDER TO PROTECT YOU AND OTHERS FROM POSSIBLE INJURY AND/OR PROPERTY DAMAGE OR LOSS, PLEASE PAY CLOSE ATTENTION TO ALL INSTRUCTIONS, WARNINGS, CAUTIONS AND NOTICES REGARDING THE USE AND CARE OF THIS PRODUCT.

WARNING

THIS INDICATION ALERTS YOU TO THE FACT THAT IGNORING THE CONTENTS DESCRIBED HEREIN CAN RESULT IN POTENTIAL DEATH OR SERIOUS INJURY.

NOTICE

This indication alerts you to the fact that ignoring the contents described herein may negatively affect product performance and functionality.



This indication alerts you to the fact that ignoring the contents described herein can result in potential injury.

NOTICE

IF INSTALLING THIS PRODUCT FOR ANOTHER PARTY, PLEASE MAKE SURE THEY RECEIVE THIS COPY OF THE **INSTALLATION INSTRUCTIONS SO THEY ARE AWARE OF** THE IMPORTANT INFORMATION CONTAINED IN THEM.

TOOLS SUGGESTED

Set of Hex Wrenches, Drill and 1/8" Drill Bit, Wire Strippers/Crimpers, Test Light, and a Marker.

STRICTLY OBSERVE THE FOLLOWING GUIDELINES IN ORDER TO USE THE PRODUCT PROPERLY AND AVOID POTENTIALLY DANGEROUS ACCIDENTS.

STEP 1

Read and understand all steps in the instructions before starting the installation. Park the motorcycle on a hard, level surface and turn off the ignition.

CUSTOMER SERVICE

877.370.3604 (toll free)

INSTALLATION QUESTIONS

techsupport@kuryakyn.com or call 715.247.2983

LIMITED WARRANTY

Küryakyn warrants that any Küryakyn products sold hereunder, shall be free of defects in materials and workmanship for a period of one (1) year from the date of purchase by the consumer excepting the following provisions:

- · Küryakyn shall have no obligation in the event the customer is unable to provide a receipt showing the date the customer purchased the product(s).
 - •The product must be properly installed, maintained and operated under normal conditions.
 - •Kürvakvn makes no warranty, expressed or implied, with respect to any gold plated
- •Küryakyn shall not be liable for any consequential and incidental damages, including labor and paint, resulting from failure of a Küryakyn product, failure to deliver, delay in delivery, delivery in nonconforming condition, or for any breech of contract or duty between Kürvakvn and a customer.
- Küryakyn products are often intended for use in specific applications. Küryakyn makes no warranty if a Küryakyn product is used in applications other than intended.
- •Küryakyn electrical products are warranted for one (1) year from the date of purchase by the consumer. L.E.D.'S contained in components of Küryakyn products will be warranted for defects in materials and workmanship for 3 years from the date of purchase where as all other components shall be warranted for one(1) year. This includes, but is not limited to: control modules, wiring, chrome & other components.
- •Küryakyn makes no warranty of any kind in regard to other manufacturer1s products distributed by Küryakyn. Küryakyn will pass on all warranties made by the manufacturer and where possible, will expedite the claim on behalf of the customer, but ultimately, responsibility for disposition of the warranty claim lies with the manufacturer.

ABOUT OUR CATALOG

For purchasing Küryakyn® products, you can receive a complete catalog free of charge. Send the Proof-of-Purchase below with your address to: Küryakyn, P.O. Box 339, Somerset, WI 54025.

Please indicate either Accessories Catalog for Harley-Davidson® or GL & Metric Cruisers.

Be sure to ask your local dealer about other Küryakyn® products, the motorcycle parts and accessories designed for riders by riders.

©2005 Küryakyn USA® All Rights reserved



NOTE: For installation with model specific Küryakyn mounting bracket (purchased separately).

Küryakyn

NOTE: Küryakyn recommends using one of our Driving Light and Switch/Relay Harnesses, P/N 2202 or P/N 2328 (following their included instructions) to power the lights to prevent overloading a circuit on the bike. You may install the black power wires from the driving lights using the female t-tap connectors and connect them to a "keyed" power source. The lights draw approximately 6 amps. Before connecting the power wires to a circuit check to make sure that the circuit can handle the additional load.



IT IS THE INSTALLERS RESPONSIBILITY TO ENSURE WARNING THAT THE INSTALLATION OF THIS ACCESSORY DOES NOT EXCEED THE MAXIMUM AMPERAGE OF THE CHOSEN CIRCUIT. EXCEEDING THE MAXIMUM ALLOWABLE AMPERAGE MAY LEAD TO CIRCUIT FAILURE WHICH COULD RESULT IN SERIOUS INJURY OR DEATH.



A FACTORY SERVICE MANUAL WILL BE HELPFUL IN WARNING PERFORMING THIS INSTALLATION. DO NOT ATTEMPT TO PERFORM THIS INSTALLATION IF YOU ARE NOT CONFIDENT IN YOUR ABILITY TO COMPLETE ALL OF THE STEPS IN THE PROCEDURE; CONSULT A TRAINED TECHNICIAN. IMPROPER INSTALLATION COULD RESULT IN SERIOUS INJURY OR DEATH.

- STEP 2 Determine which position the lights will be mounted in; either the forward or rear position as shown in PIC. 1 (switch the light bar to the other set of lights to achieve this, as each bar is directional).
- STEP 3 Once the positioning has been determined, carefully route the wires from the lights through the bar as shown in PIC. 2 and secure the bar to the lights using an included 1/4"-20 x1" button socket cap screw as shown in PIC. 3.
- STEP 4 Repeat STEP 3 for the other side.
- STEP 5 Place the light bar on the adapter bracket and secure with an included 1/4"-20 x 1/2" button socket cap screw and 1/4" flat washer.


NOTE: There are three different mounting holes in the bottom of the light bar (PIC. 2) to adjust the overall width of the lights when they are installed.

- STEP 6 Repeat STEP 5 for the other lights and mounting bar.
- STEP 7 Route the wires down through the holes in the adapter bracket.
- STEP 8 Place the adjustable driving light mask over the light bars so that the holes are in the back and secure the mask to the bars with the included #10-24 x 5/16" button socket cap screws.
- STEP 9 On Metric Models: Remove the headlight and route the wires into the headlight housing through the hole at the back of the housing.

On FLSTF Models: Route the wires under the bottom triple tree and into the rear of the fork shrouds.

STEP 10 Turn the handlebars lock to lock to make sure there is clearance between the lights and any component on the motorcycle.

PIC 1 CENTER LINE CENTER LINE FORWARD REARWARD

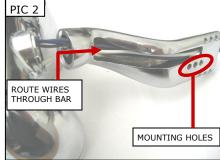





PAGE

-cont.-

TURN THE FORK LOCK TO LOCK TO CHECK FOR CLEARANCE BETWEEN

WARNING THE LIGHTS AND ANY OTHER COMPONENT ON THE MOTORCYCLE. INSUFFICIENT CLEARANCE MAY CAUSE LOSS

OF CONTROL RESULTING IN SERIOUS INJURY OR DEATH.

NOTICE

Secure all wiring from the newly installed and/or from existing parts, away from any moving parts, pinch points or extreme heat. Küryakyn WILL NOT issue a warranty on any electrical component that fails due to pinched, crimped, broken, abraded, melted or frayed wires.

NOTICE

It is the installer's responsibility to ensure that all of the fasteners (including pre-assembled) are tightened before operation of the motorcycle. Küryakyn will not provide warranty coverage on products or components lost due to improper installation or lack of maintenance. Periodic inspection and maintenance are required on all fasteners.

WIRING PROCEDURE

Wiring Color Codes for Driving Lights and Turn Signals

Color Function Black Ground

Violet "High" Turn Signal "Low" running light Blue White Driving Lights Power Wire

STEP 11 Identify the stock turn signal wiring harness; refer to your factory service manual to locate the harness.

STEP 12 Turn the key "ON" and using a test light or the wiring diagram for your bike, determine the left and right turn signal power, running light power and a ground wire. Label each of these wires for their function or write the color and function down. Turn the key "OFF" and disconnect the battery.

NOTE: On some motorcycles (i.e. '05-up Honda VTX 1800 models) there will only be one wire for the running lights and turn signals; in this situation, both the turn signal wire and running light wire will need to be connected to this wire.

STEP 13 Place one of the included female T-Tap connectors over each wire and close them, ensuring that the tabs are engaged as shown in PIC 5

CAUTION

Avoid potential electrical shock! Disconnect the battery before starting this procedure.

STEP 14 Using wire strippers remove a small amount of insulation from the ends of the wires from the new turn signals.

STEP 15 Insert each individual exposed end of the violet, blue and black wires into their own male spade and crimp the end making sure that the wire is secure. PIC 6 If you are going to use a chassis ground for the lights, do not install a male spade to the black wires.

NOTICE

Küryakyn recommends the use of dielectric grease on electrical connections.

STEP 16 Place a small amount of dielectric grease on the female T-Tap connectors and insert the male spade connectors from the left side turn signal's violet wire into the female T-Tap installed on the left signal wire. Insert the male spade connectors from the right side turn signal's violet wire into the female T-Tap installed on the right signal wire. Insert the male spade connectors from both blue wires into the female T-Tap connectors installed on the running light wire(s). PIC 7

PAGE

-cont.-




INSTALLATION

PIC 6

PIC 5

Küryakyn

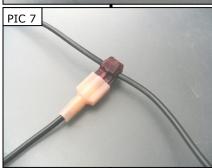

- **STEP 17** Connect the black wires from the signals to a chassis ground, or a known wiring harness ground.
- **STEP 18** Kürvakyn recommends using one of our Driving Light Switch/Relay Harnesses, P/N 2202 or P/N 2328 (following their included instructions) to power the Driving Lights to prevent overloading a circuit on the bike. Proceed to Step 21, if using the Driving light Switch/Relay Harness.
- **STEP 19** If you decide to install the lights to the existing wiring on the bike, proceed as follows: Reconnect the battery. Using a test light or wiring schematic, with the key in the "ON" position, locate a "keyed" 12-volt power wire (a wire that has power with the key "ON" and loses power with the key "OFF")to power the driving lights. Once you have located a keyed 12-volt power source, turn the key to the "OFF" position and disconnect the battery.
- **STEP 20** Take two of the included female T-Tap connectors and place them on the desired power wire. Take the white power wires from each light and connect them to the female T-Taps on this wire. Secure all excess wiring out of harms way with the included cable ties.

NOTICE

Secure all wiring from the newly installed and/or from existing parts, away from any moving parts, pinch points or extreme heat. Küryakyn WILL NOT issue a warranty on any electrical component that fails due to pinched, crimped, broken, abraded, melted or frayed wires.

- **STEP 21** Once all connections are connected, reconnect the battery. Reinstall the seat. Turn the key to the "ON" position and check to ensure all lights work properly.
- ENSURE PROPER LIGHT OPERATION BEFORE RIDING THE MOTORCYCLE. WARNING VISIBILITY IS A MAJOR CONCERN FOR MOTORCYCLISTS. A LIGHTING MALFUNCTION COULD RESULT IN DEATH OR SERIOUS INJURY.
- AFTER INSTALLING THE SEAT, PULL UP ON IT TO ENSURE IT IS LOCKED WARNING INTO PLACE. A LOOSE SEAT CAN SHIFT AND CAUSE LOSS OF CONTROL RESULTING IN SERIOUS INJURY OR DEATH.
- **STEP 22** If lights do not work, go over the wire connections and check all plugs to see if they are plugged-in correctly. You may also have to use a test light again check and see if the spade/T-Tap connectors are in the proper locations.
- **STEP 23** Secure all fasteners.

NOTICE

It is the installer's responsibility to ensure that all of the fasteners (including pre-assembled) are tightened before operation of the motorcycle. Küryakyn will not provide warranty coverage on products or components lost due to improper installation or lack of maintenance. Periodic inspection and maintenance are required on all fasteners.

ADJUSTING THE DRIVING LIGHTS

WARNING IT IS THE INSTALLERS RESPONSIBILITY TO ADJUST THE NEW DRIVING LIGHTS TO THE PATTERN RECOMMENDED IN THE SERVICE MANUAL FOR THE HEADLIGHT LOW BEAM. FAILURE TO PROPERLY ADJUST THE LIGHT PATTERN MAY DISTRACT ONCOMING DRIVERS RESULTING IN SERIOUS INJURY OR DEATH.

STEP 1 For up and down adjustment, loosen the fastener that secures the light assembly to the bar and tilt the assembly in the desired direction. When the light is in the desired position, tighten the fastener securely.

PAGE

-cont.-

Küryakyn

THESE UNPLUG

NOTICE

STEP 2


For side to side adjustment, remove the glass light housing as outlined below, loosen the fastener inside the light housing. Rotate the housing to the desired position and retighten the fastener. Reinstall the light


It is the installer's responsibility to ensure that all of the fasteners (including pre-assembled) are tightened before operation of the motorcycle. Küryakyn will not provide warranty coverage on products or components lost due to improper installation or lack of maintenance. Periodic inspection and maintenance are required on all fasteners.


REMOVE THIS SCREW ROTATE THIS DIRECTION TO REMOVE

PIC 9

   
REPLACING THE LIGHT BULB









   NOTE: Please note the orientation of the locating ring. This will greatly help when reassembling the lights. PIC 10.









STEP 7 Reassemble the glass housing and the chrome housing in the reverse order they were disassembled.

NOTICE

It is the installer's responsibility to ensure that all of the fasteners (including pre-assembled) are tightened before operation of the motorcycle. Küryakyn will not provide warranty coverage on products or components lost due to improper installation or lack of maintenance. Periodic inspection and maintenance are required on all fasteners.

Ride On!

PAGE