

Copyright© 2001 by Big Bike Parts, Inc. No part of this instruction sheet may be reproduced without the written permission of Big Bike Parts, Inc.©


5/4/2016

TOOLS REQUIRED: (NO FOG LIGHTS) 5MM ALLEN WRENCH – (WITH FOG LIGHTS) 5MM ALLEN WRENCH, HACKSAW BLADE, FILE.

### INSTALLATION:

**NOTE: PUT BIKE SECURELY ON ITS CENTER STAND.**

1. USING 5MM ALLEN WRENCH REMOVE THE 6 ALLEN BOLTS (1A) HOLDING LOWER COWL (1C) TO BIKE.
2. PULL OUT THE TWO TRIM PLUGS (1B) ON LOWER COWL (1C).
3. REMOVE THE LOWER COWL (1C) FROM BIKE.
- 3a. IF USING WITH FOG LIGHTS REMOVE THE KNOCKOUTS BY CUTTING THE SMALL TABS WITH A HACKSAW BLADE AND SMOOTH THE EDGES WITH A FILE.
4. REMOVE THE TWO CLIPS (1D) ON LOWER COWL (1C) AND PLACE ON NEW COWL.
5. INSTALL NEW COWL IN THE REVERSE OF REMOVAL.

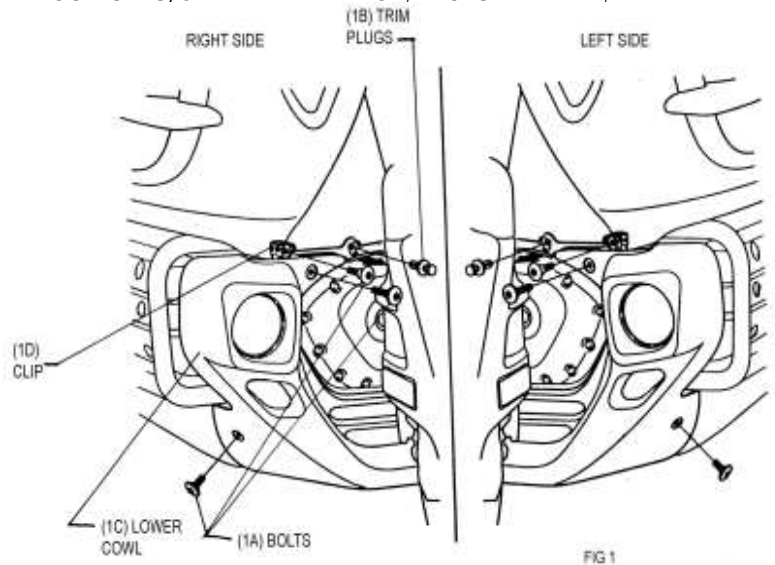

Copyright© 2001 by Big Bike Parts, Inc. No part of this instruction sheet may be reproduced without the written permission of Big Bike Parts, Inc.©

5/4/2016

ITEMS REQUIRED: (NO FOG LIGHTS) 5MM ALLEN WRENCH – (WITH FOG LIGHTS) 5MM ALLEN WRENCH, HACKSAW BLADE, FILE.

### INSTALLATION:

**NOTE: PUT BIKE SECURELY ON ITS CENTER STAND.**

1. USING 5MM ALLEN WRENCH REMOVE THE 6 ALLEN BOLTS (1A) HOLDING LOWER COWL (1C) TO BIKE.
2. PULL OUT THE TWO TRIM PLUGS (1B) ON LOWER COWL (1C).
3. REMOVE THE LOWER COWL (1C) FROM BIKE.
- 3a. IF USING WITH FOG LIGHTS REMOVE THE KNOCKOUTS BY CUTTING THE SMALL TABS WITH A HACKSAW BLADE AND SMOOTH THE EDGES WITH A FILE.
4. REMOVE THE TWO CLIPS (1D) ON LOWER COWL (1C) AND PLACE ON NEW COWL.
5. INSTALL NEW COWL IN THE REVERSE OF REMOVAL.

