


5/4/2016

ITEMS REQUIRED: (NO FOG LIGHTS) 5MM ALLEN WRENCH – (WITH FOG LIGHTS) 5MM ALLEN WRENCH, HACKSAW BLADE, FILE.

INSTALLATION:

1. USING 5MM ALLEN WRENCH REMOVE THE 6 ALLEN BOLTS (1A) HOLDING LOWER COWL (1C) TO BIKE.
2. PULL OUT THE TWO TRIM PLUGS (1B) ON LOWER COWL (1C).
3. REMOVE THE LOWER COWL (1C) FROM BIKE.
- 3a. IF USING WITH FOG LIGHTS REMOVE THE KNOCKOUTS BY CUTTING THE SMALL TABS WITH A HACKSAW BLADE AND SMOOTH THE EDGES WITH A FILE.
4. REMOVE THE TWO CLIPS (1D) ON LOWER COWL (1C) AND PLACE THEM ON NEW COWL.
5. INSTALL NEW COWL IN THE REVERSE OF REMOVAL.

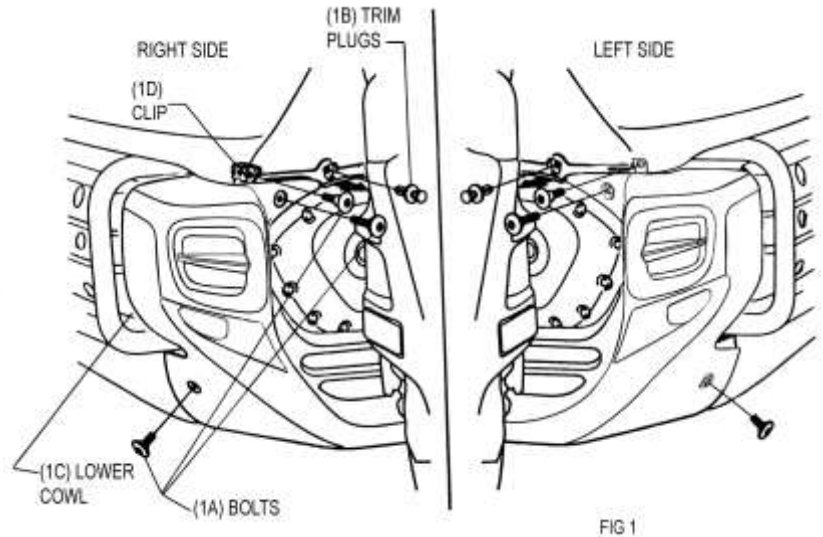

5/4/2016

ITEMS REQUIRED: (NO FOG LIGHTS) 5MM ALLEN WRENCH – (WITH FOG LIGHTS) 5MM ALLEN WRENCH, HACKSAW BLADE, FILE.

INSTALLATION:

1. USING 5MM ALLEN WRENCH REMOVE THE 6 ALLEN BOLTS (1A) HOLDING LOWER COWL (1C) TO BIKE.
2. PULL OUT THE TWO TRIM PLUGS (1B) ON LOWER COWL (1C).
3. REMOVE THE LOWER COWL (1C) FROM BIKE.
- 3a. IF USING WITH FOG LIGHTS REMOVE THE KNOCKOUTS BY CUTTING THE SMALL TABS WITH A HACKSAW BLADE AND SMOOTH THE EDGES WITH A FILE.
4. REMOVE THE TWO CLIPS (1D) ON LOWER COWL (1C) AND PLACE THEM ON NEW COWL.
5. INSTALL NEW COWL IN THE REVERSE OF REMOVAL.

