## **BIG BIKE PARTS INSTALLATION INSTRUCTIONS**

Copyright<sup>©</sup> 2018 by Big Bike Parts, Inc. No part of this instruction sheet may be reproduced without the written permission of Big Bike Parts, Inc. 5/21/2018

## PART NO. 52-925

LAMPGARD<sup>TM</sup>

HONDA GOLDWING/GOLDWING TOUR 2018-NEWER

TOOLS NEEDED: **RUBBING ALCOHOL** 

PLEASE READ THROUGH AND UNDERSTAND THESE INSTRUCTIONS BEFORE BEGINNING.

## INSTALLATION:

1. CLEAN THE HEADLIGHT LENS ON THE BIKE AND THE INSIDE OF THE LAMPGARDS WITH RUBBING ALCOHOL AND LET DRY.


2. REMOVE THE PROTECTIVE FILM FROM THE BACK OF ONE OF THE DUAL LOCK FASTENERS AND ADHERE IT TO THE INSIDE OF THE RIGHT LAMPGARD.

3. USE THE DIAGRAM BELOW TO POSITION EACH OF THE FASTENERS. PLACE 4 ON EACH LAMPGARD.

LINT FREE TOWEL

4. PLACE THE MATES FOR THE DUAL LOCK FASTENER TO THE ONES ON THE LAMPGARD. (NOTE: THESE DUAL LOCKS MATE TO EACH OTHER.)

5. PLACE THE LAMPGARD ON THE HEADLIGHT SO THE DUAL LOCK FASTENERS STICK TO THE HEADLIGHT. ONCE IN PLACE, REMOVE THE LAMPGARD LEAVING THE MATE OF THE DUAL LOCK FASTENERS ON THE HEADLIGHT AND THE OTHER MATE ON THE LAMPGARD. THE DUAL LOCK FASTENERS NEED TO SIT ON THE LAMPGARD AND ON THE BIKE FOR 24 HOURS BEFORE EXPOSED TO WEATHER OR LOAD FOR PROPER ADHESION OF THE TAPE.

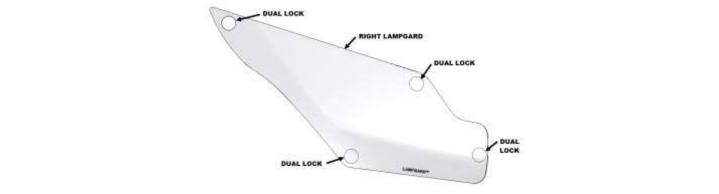

INST	ALLA	TION	INSTRUC	TIONS
PART NO. 52-925		LAMPGARD <sup>TM</sup>		
- HOND	HONDA GOLDWING/GOLDWING TOUR 2018-NEWER			
LINT FREE TOWEL				
THESE INSTRUCTIONS BEFORE BE	GINNING.			
N THE BIKE AND THE INSIDE OF TI	HE LAMPGARD	S WITH RUBBING	ALCOHOL AND LET DRY.	
2. REMOVE THE PROTECTIVE FILM FROM THE BACK OF ONE OF THE DUAL LOCK FASTENERS AND ADHERE IT TO THE INSIDE OF THE RIGHT LAMPGARD.				
POSITION EACH OF THE FASTENE	RS. PLACE 4 ON	EACH LAMPGAR	D.	
JAL LOCK FASTENER TO THE ONES	S ON THE LAMP	GARD. (NOTE: TH	IESE DUAL LOCKS MATE TO E	ACH OTHER.)
HEADLIGHT SO THE DUAL LOCK	FASTENERS STI	CK TO THE HEADL	IGHT. ONCE IN PLACE, REMO	VE THE LAMPGARD LEAVING
STENERS ON THE HEADLIGHT AND	D THE OTHER M	ATE ON THE LAN	/PGARD. THE DUAL LOCK FAS	TENERS NEED TO SIT ON THE
R 24 HOURS BEFORE EXPOSED TO	WEATHER OR	LOAD FOR PROP	ER ADHESION OF THE TAPE.	
DUAL LOCK	RIGH		LLOCK	
	PART NO. 52-9 HOND LINT FREE TOWEL THESE INSTRUCTIONS BEFORE BE ON THE BIKE AND THE INSIDE OF T M FROM THE BACK OF ONE OF THI POSITION EACH OF THE FASTENE UAL LOCK FASTENER TO THE ONES E HEADLIGHT SO THE DUAL LOCK IN SISTENERS ON THE HEADLIGHT AND DR 24 HOURS BEFORE EXPOSED TO	PART NO. 52-925 HONDA GOLI LINT FREE TOWEL UTHESE INSTRUCTIONS BEFORE BEGINNING. UN THE BIKE AND THE INSIDE OF THE LAMPGARD M FROM THE BACK OF ONE OF THE DUAL LOCK FA POSITION EACH OF THE FASTENERS. PLACE 4 ON UAL LOCK FASTENER TO THE ONES ON THE LAMP E HEADLIGHT SO THE DUAL LOCK FASTENERS STIC ASTENERS ON THE HEADLIGHT AND THE OTHER M DR 24 HOURS BEFORE EXPOSED TO WEATHER OR	PART NO. 52-925 HONDA GOLDWING/C LINT FREE TOWEL UTHESE INSTRUCTIONS BEFORE BEGINNING. UNTHE BIKE AND THE INSIDE OF THE LAMPGARDS WITH RUBBING M FROM THE BACK OF ONE OF THE DUAL LOCK FASTENERS AND A POSITION EACH OF THE FASTENERS. PLACE 4 ON EACH LAMPGAR UAL LOCK FASTENER TO THE ONES ON THE LAMPGARD. (NOTE: THE E HEADLIGHT SO THE DUAL LOCK FASTENERS STICK TO THE HEADLIGHT STENERS ON THE HEADLIGHT AND THE OTHER MATE ON THE LAM DR 24 HOURS BEFORE EXPOSED TO WEATHER OR LOAD FOR PROP	PART NO. 52-925 HONDA GOLDWING/GOLDWING TO LINT FREE TOWEL INT FREE TOWEL THESE INSTRUCTIONS BEFORE BEGINNING. NO THE BIKE AND THE INSIDE OF THE LAMPGARDS WITH RUBBING ALCOHOL AND LET DRY. M FROM THE BACK OF ONE OF THE DUAL LOCK FASTENERS AND ADHERE IT TO THE INSIDE OF T POSITION EACH OF THE FASTENERS. PLACE 4 ON EACH LAMPGARD. UAL LOCK FASTENER TO THE ONES ON THE LAMPGARD. (NOTE: THESE DUAL LOCKS MATE TO E E HEADLIGHT SO THE DUAL LOCK FASTENERS STICK TO THE HEADLIGHT. ONCE IN PLACE, REMO SSTENERS ON THE HEADLIGHT AND THE OTHER MATE ON THE LAMPGARD. THE DUAL LOCK FAS DR 24 HOURS BEFORE EXPOSED TO WEATHER OR LOAD FOR PROPER ADHESION OF THE TAPE.

LANDARD