

INSTALLATION INSTRUCTIONS

PARTS UNLIMITED TUBULAR RADIATOR GRILLE FOR 88-00 GL 1500 P/N DS-719980

ATTENTION INSTALLER (if other than owner): Please forward this instruction sheet to the purchaser of this product. These instructions contain valuable information necessary to the end user.


INTRODUCTION: These instructions describe the procedure for properly installing the radiator grille on designated models. Review instructions carefully before beginning as they contain important information. Please retain for future reference.

Particularly important information is distinguished in these instructions by the following notations:

NOTE: A NOTE provides key information to make procedures easier or clearer.

CAUTION: A CAUTION indicates special procedures that must be followed to avoid damage to the motorcycle and/or accessories.

WARNING!: A WARNING indicates special procedures that must be followed to avoid injury to a motorcycle operator or person inspecting or repairing the motorcycle.

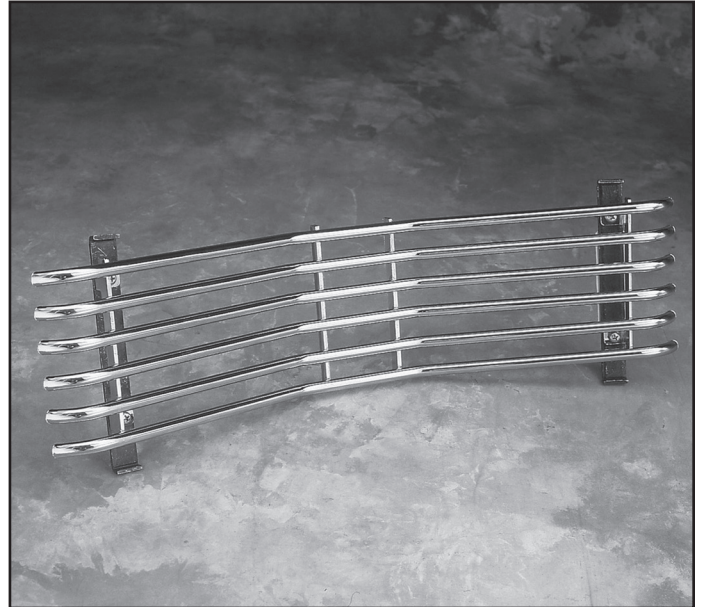

TOOLS REQUIRED:

- 1 – 8mm combination wrench
- 1 – Phillips screwdriver
- 1 – flat blade screwdriver

PROCEDURE:

1. Remove both the front and rear fairing side moldings from the left and right sides of the bike, as shown in Fig. A. Using a thin-bladed screwdriver, pry the center area out and push trim to rear, then pull back and out from center (see Fig. A).
2. Remove the two (2) Phillips head screws from the front molding and one (1) Phillips head screw from the rear molding on both sides of the bike (see Fig. A).
3. Remove the molding caps from both sides of fairing as shown in Fig. B. Remove both Phillips head screws (see Fig. B).
4. Remove the stock Phillips head screws from both right and left side fairing lowers (air dam) (see Arrow C).
5. Remove the stock Phillips head screw from the center air dam (see Arrow D).

NOTE: With all screws removed, the lower fairing and air dam will go down about 1 to 2 inches.

6. Remove the stock Phillips head screw holding turn signal canceling tab located above the radiator grille in center, behind the black plastic fork air deflector (see Arrow E).
7. Using the 8mm wrench, remove the stock radiator grille frame with the screen mounting acorn nuts located at top on left and right sides (see Arrow F).
8. Remove the stock radiator grille frame with screen by lifting the left and right lower tabs up and then out.
9. With the stock radiator frame with screen removed, position the tubular grille, centered over the stock screen as shown in Fig. G.
10. Using the Phillips head screws, tinnerman clips and rear mounting brackets supplied, attach tubular grille screen as shown in Fig. G. Tighten mounting hardware securely.

NOTE: Do not overtighten.

11. Reinstall the assembled grille and frame with screen onto the motorcycle by reversing the steps used to remove stock grill frame with screen.



NOTE: Before riding the bike, be sure to check that all mounting hardware is properly reinstalled and tightened securely.

**PARTS
UNLIMITED**

3501 Kennedy Rd, PO Box 5222, Janesville, WI 53547-5222
P/N DS-719980

INSTALLATION INSTRUCTIONS

PARTS UNLIMITED TUBULAR RADIATOR GRILLE FOR 88-00 GL 1500 P/N DS-719980

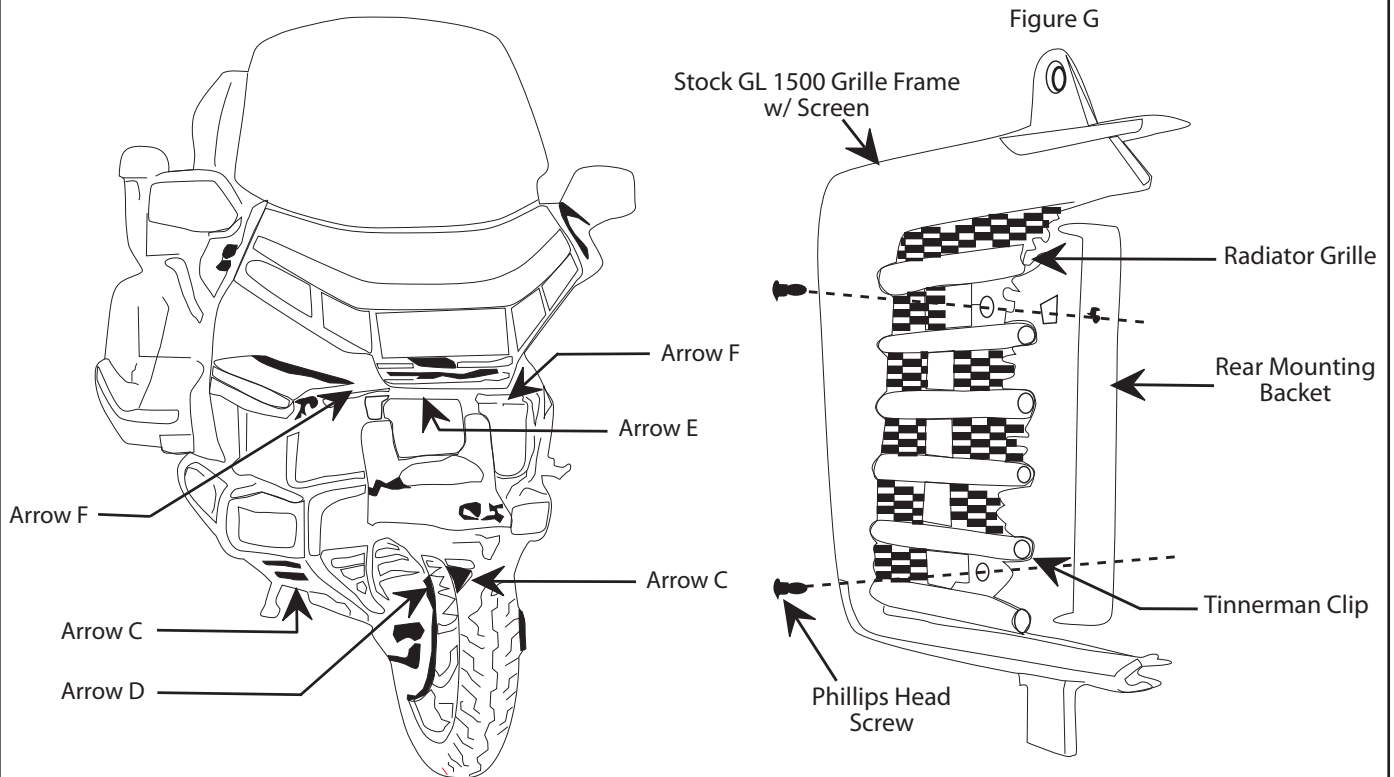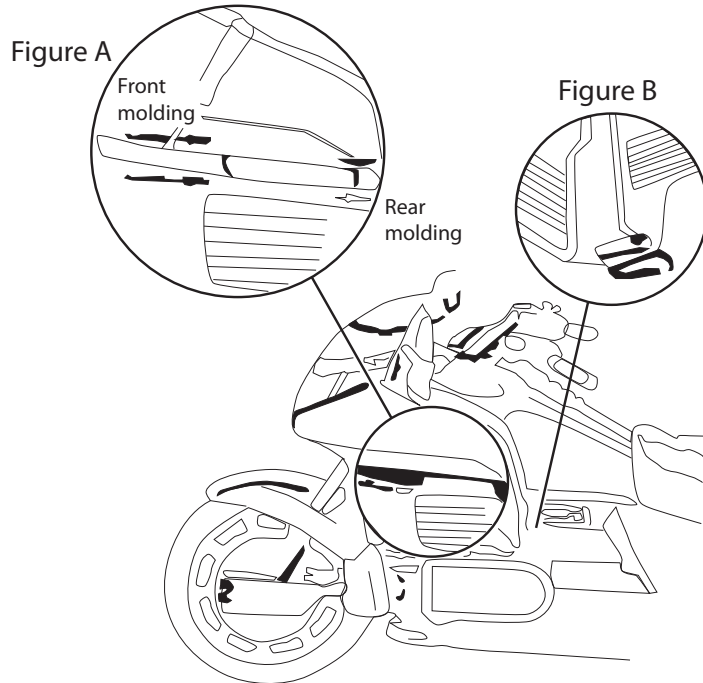

**PARTS
UNLIMITED**