



INSTALLATION

DELUXE WINDSHIELD TRIM 1379

PARTS INCLUDED

- 1 Deluxe Windshield Trim
- 1 Hardware Kit
 - 1 Left Side Screw Cover
 - 1 Right Side Screw Cover
 - 1 Center Screw Cover
 - 3 1/4-20 x 3/4" Button Socket Cap Screws— For Stock Bikes
 - 3 1/4-20 X 1 1/4" Button Socket Cap Screws— For Kuryakyn Airmaster Fairings
- 3 1/4" Narrow Flat Washer—For All Installations
- 1 Installation Instructions

Please read and understand entire instructions before starting installation.

THANK YOU FOR CHOOSING KÜRYAKYN!

IN ORDER TO PROTECT YOU AND OTHERS FROM POSSIBLE INJURY AND/OR PROPERTY DAMAGE OR LOSS, PLEASE PAY CLOSE ATTENTION TO ALL INSTRUCTIONS, WARNINGS, CAUTIONS AND ATTENTION NOTES REGARDING THE USE AND CARE OF THIS PRODUCT.

ATTENTION! This indication alerts you to the fact that ignoring the contents described herein may negatively affect product performance and functionality.


TOOLS SUGGESTED

Set of Hex Wrenches, Torx Wrenches, and Combination Wrenches

STRICTLY OBSERVE THE FOLLOWING GUIDELINES IN ORDER TO USE THE PRODUCT PROPERLY AND AVOID POTENTIALLY DANGEROUS ACCIDENTS.

STEP 1 Read and understand all steps in the instructions before starting the installation. Park the motorcycle on a hard, level surface and turn off the ignition.

STEP 2 Remove the 3 Torx screws (PIC 1) securing the windshield to the fairing. **On Kuryakyn Airmaster Fairings:** Remove the 3 Button Socket Cap Screws, washers and acorn nuts - save the acorn nuts and washers for reinstallation.

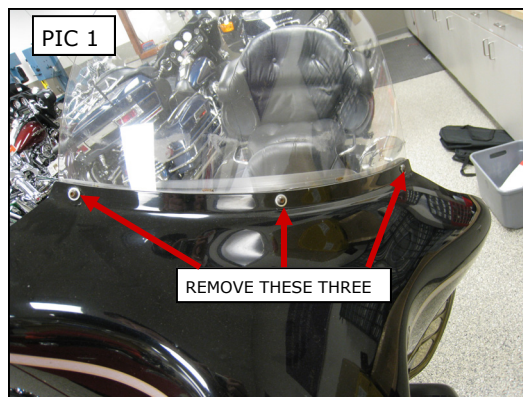

CUSTOMER SERVICE

877.370.3604 (toll free)

INSTALLATION QUESTIONS

techsupport@kuryakyn.com
or call 715.247.2983

LIMITED WARRANTY

Kuryakyn warrants that any Kuryakyn products sold hereunder, shall be free of defects in materials and workmanship for a period of one (1) year from the date of purchase by the consumer excepting the following provisions:

- Kuryakyn shall have no obligation in the event the customer is unable to provide a receipt showing the date the customer purchased the product(s).
 - The product must be properly installed, maintained and operated under normal conditions.
 - Kuryakyn makes no warranty, expressed or implied, with respect to any gold plated products.
 - Kuryakyn shall not be liable for any consequential and incidental damages, including labor and paint, resulting from failure of a Kuryakyn product, failure to deliver, delay in delivery, delivery in nonconforming condition, or for any breach of contract or duty between Kuryakyn and a customer.
- Kuryakyn products are often intended for use in specific applications. Kuryakyn makes no warranty if a Kuryakyn product is used in applications other than intended.
- Kuryakyn electrical products are warranted for one (1) year from the date of purchase by the consumer. L.E.D.'S contained in components of Kuryakyn products will be warranted for defects in materials and workmanship for 3 years from the date of purchase where as all other components shall be warranted for one(1) year. This includes, but is not limited to; control modules, wiring, chrome & other components.

• Kuryakyn makes no warranty of any kind in regard to other manufacturer's products distributed by Kuryakyn. Kuryakyn will pass on all warranties made by the manufacturer and where possible, will expedite the claim on behalf of the customer, but ultimately, responsibility for disposition of the warranty claim lies with the manufacturer.

ABOUT OUR CATALOG

For purchasing Kuryakyn® products, you can receive a complete catalog free of charge. Send the Proof-of-Purchase below with your address to: Kuryakyn, P.O. Box 339, Somerset, WI 54025. Please indicate either Accessories Catalog for Harley-Davidson® or GL & Metric Cruisers.

Be sure to ask your local dealer about other Kuryakyn® products, the motorcycle parts and accessories designed for riders by riders.


©2005 Kuryakyn USA® All Rights reserved.



kuryakyn.com

STEP 3 Place the trim in place, lining up the holes in the trim with the holes in the in the windshield.

STEP 4 Place one of the 1/4"-20 x 3/4" Button Socket Cap Screws in the center hole with a Narrow Washer behind the head, do not tighten. **PIC 2**
On Kuryakyn Airmaster Fairings: Insert one of the 1/4"-20 X 1 1/4" Button Socket Cap Screws and Narrow Washer, behind the head, in the center hole and attach one of the washers and acorn nuts removed in Step 2. Leave finger tight for now.

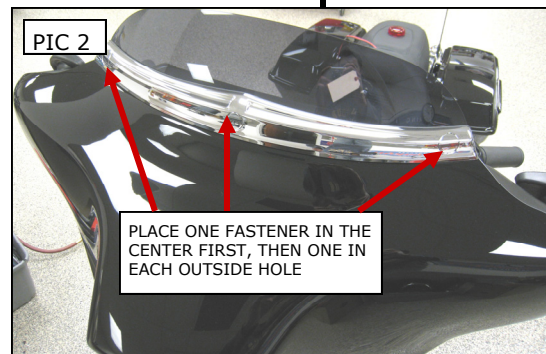

STEP 5 Place a 1/4"-20 x 3/4" Button Socket Cap Screws with Narrow Washers, behind the head, in the two outside holes, as shown in PIC.2, do not tighten. **On Kuryakyn Airmaster Fairings:** place a 1/4"-20 X 1 1/4" Button Socket Cap Screw and Narrow Washer, behind the head, in each outside hole and attach one of the acorn nuts and washers, removed in Step 2, to each. Leave finger tight for now.

STEP 6 Starting with the center fasteners, tighten the screws, being careful not to over tighten them, which may damage the trim.



STEP 7 As shown in PIC 3, press the center, left and right screw covers in to the trim until flush.

ATTENTION!

It is the installer's responsibility to ensure that all of the fasteners (including preassembled) are tightened before operation of the motorcycle. Kuryakyn will not warranty components lost due to improper installation. Periodic maintenance may be required.