

# INSTALLATION

### MASTER CYLINDER COVER

1746

FITS: ALL '09-UP HONDA FURY MODELS

#### PARTS INCLUDED

- 1 Master Cylinder Cover
- 1 Hardware Kit
  - 2 M4 x 0.7 Custom Screws
  - 2 M4 Flat Washers
  - 2 M4 Acorn Nuts
- 1 Installation Instructions

Please read and understand entire instructions before starting installation.

#### THANK YOU FOR CHOOSING KÜRYAKYN!

IN ORDER TO PROTECT YOU AND OTHERS FROM POSSIBLE INJURY AND/OR PROPERTY DAMAGE OR LOSS, PLEASE PAY CLOSE ATTENTION TO ALL INSTRUCTIONS, WARNINGS, CAUTIONS AND ATTENTION NOTES REGARDING THE USE AND CARE OF THIS PRODUCT.

CAUTION! This indication alerts you to the fact that ignoring the contents described herein can result in potential injury or material damage.

ATTENTION! This indication alerts you to the fact that ignoring the contents described herein may negatively affect product performance and functionality.

#### **TOOLS SUGGESTED**

Set of Hex Wrenches. Screw Drivers

## STRICTLY OBSERVE THE FOLLOWING GUIDELINES IN ORDER TO USE THE PRODUCT PROPERLY AND AVOID POTENTIALLY DANGEROUS ACCIDENTS.

CAUTION! When working around brake fluid protect all painted and non painted surfaces.


#### **PROCEDURE**

**STEP 1** Turn handle bars so that the reservoir is in the most horizontal position.

STEP 2 One at a time, remove the OEM screws that hold the reservoir cover in place and

replace with the studs provided. See PIC.1. Be very careful not to remove the cover. Pay close attention to the tightness of OEM screws, you will need to duplicate the tightness when installing the stand off studs. Do not over tighten these because they will strip out. The OEM screws will not be reused.

**STEP 3** Place the new master cylinder cover into place over the studs and secure with the new washers and acorn nuts. See PIC 2. Do not over tighten.

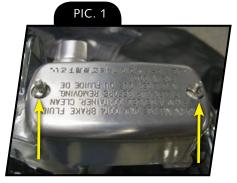

#### **CUSTOMER SERVICE**

877.370.3604 (toll free)

#### **INSTALLATION QUESTIONS**

techsupport@kuryakyn.com or call 715.247.2983

#### **LIMITED WARRANTY**

Küryakyn warrants that any Küryakyn products sold hereunder, shall be free of defects in materials and workmanship for a period of one (1) year from the date of purchase by the consumer excepting the following provisions:

- Küryakyn shall have no obligation in the event the customer is unable to provide a receipt showing the date the customer purchased the product(s).
  - The product must be properly installed, naintained and operated under normal conditions.
- Küryakyn makes no warranty, expressed or implied, with respect to any gold plated products.
- Küryakyn shall not be liable for any consequential and incidental damages, including labor and paint, resulting from failure of a Küryakyn product, failure to deliver, delay in delivery, delivery in nonconforming condition, or for any breech of contract or duty between Küryakyn and a customer.
  - Küryakyn products are often intended for use in specific applications. Küryakyn makes no warranty if a Küryakyn product is used in applications other than intended.
- Küryakyn electrical products are warranted for one (1) year from the date of purchase by the consumer. Components of Küryakyn products containing L.E.D.s will be warranted for defects in materials and workmanship for 3 years from the date of purchase.
- Küryakyn makes no warranty of any kind in regard to other manufacturer's products distributed by Küryakyn. Küryakyn will pass on all warranties made by the manufacturer and where possible, will expedite the claim on behalf of the customer, but ultimately, responsibility for disposition of the warranty claim lies with the manufacturer.

#### **ABOUT OUR CATALOG**

You'll find all our innovations for H-D, GL and Metric Cruisers in our annual catalogs. Order online today-select the "CATALOGS" icon. Each Küryakyn® product comes with a Proof-of-Purchase good for a complimentary catalog. Details in packaging.

Be sure to ask your local dealer about other Küryakyn® products, the motorcycle parts and accessories designed for riders by riders.

©2005 Küryakyn USA® All Rights reserved



**NOTE** You may need to loosen the perch assembly and move it slightly away from the switch housing to make room for this new cover. See PIC 3.

**STEP 4** Tighten all fasteners.

ATTENTION! It is the installer's responsibility to ensure that all of the fasteners (including pre-assembled) are tightened before operation of the motorcycle. Küryakyn will not warranty components lost due to improper installation. Periodic maintenance may be required.

Ride On!



PIC. 3



PAGE 2