



ERGO GUARD LIGHT MOUNT BRACKET 2284

PARTS INCLUDED

- 2 Die Cast Brackets
- 1 Hardware Kit Including:
 - 2 5/16-18 x 1 SHCS
 - 4 1/4" - 20 x 5/16" SHCS 18-8
 - 2 Black Rubber Grommets
 - 1 Anti-Seize
- 1 Installation Instructions

Please read and understand entire instructions before starting installation.

THANK YOU FOR CHOOSING KÜRYAKYN!

IN ORDER TO PROTECT YOU AND OTHERS FROM POSSIBLE INJURY AND/OR PROPERTY DAMAGE OR LOSS, PLEASE PAY CLOSE ATTENTION TO ALL INSTRUCTIONS, WARNINGS, CAUTIONS AND ATTENTION NOTES REGARDING THE USE AND CARE OF THIS PRODUCT.

ATTENTION! This indication alerts you to the fact that ignoring the contents described herein may negatively affect product performance and functionality.

NOTES

If adding Silver Bullets to function as driving lights, we highly recommend using our Wiring and Relay Kit, P/N 2328, sold separately.


Recommended options for Silver Bullets include P/Ns 2303, 2319, 2362, and 2363 (Sold Separately – See Silver Bullet Page in Harley Lighting at www.kuryakyn.com.)

Only the Harley Davidson Ergo Bars have holes for internal wiring. The Metric Ergo Bars must be externally wired.

ATTENTION! It is the installer's responsibility to ensure that all of the fasteners (including pre-assembled) are tightened before operation of the motorcycle. Kuryakyn will not warranty components lost due to improper installation. Periodic maintenance may be required.

-cont.-

PIC. 1

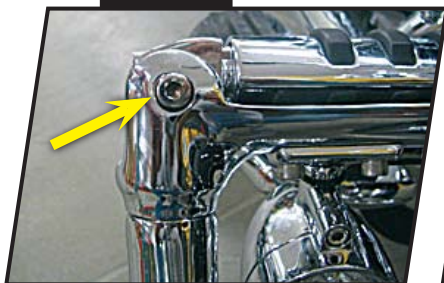

PIC. 2



CUSTOMER SERVICE

877.370.3604 (toll free)

INSTALLATION QUESTIONS

techsupport@kuryakyn.com or call 715.247.2983

LIMITED WARRANTY

Kuryakyn warrants that any Kuryakyn products sold hereunder, shall be free of defects in materials and workmanship for a period of one (1) year from the date of purchase by the consumer excepting the following provisions:

- Kuryakyn shall have no obligation in the event the customer is unable to provide a receipt showing the date the customer purchased the product(s).
- The product must be properly installed, maintained and operated under normal conditions.
- Kuryakyn makes no warranty, expressed or implied, with respect to any gold plated products.
- Kuryakyn shall not be liable for any consequential and incidental damages, including labor and paint, resulting from failure of a Kuryakyn product, failure to deliver, delay in delivery, delivery in non-conforming condition, or for any breach of contract or duty between Kuryakyn and a customer.
- Kuryakyn products are often intended for use in specific applications. Kuryakyn makes no warranty if a Kuryakyn product is used in applications other than intended.
- Kuryakyn electrical products are warranted for one (1) year from the date of purchase by the consumer. Components of Kuryakyn products containing L.E.D.s will be warranted for defects in materials and workmanship for 3 years from the date of purchase.
- Kuryakyn makes no warranty of any kind in regard to other manufacturer's products distributed by Kuryakyn. Kuryakyn will pass on all warranties made by the manufacturer and where possible, will expedite the claim on behalf of the customer, but ultimately, responsibility for disposition of the warranty claim lies with the manufacturer.

ABOUT OUR CATALOG

You'll find all our innovations for H-D, GL and Metric Cruisers in our annual catalogs. Order online today—select the "CATALOGS" icon. Each Kuryakyn® product comes with a Proof-of-Purchase good for a complimentary catalog. Details in packaging.

Be sure to ask your local dealer about other Kuryakyn® products, the motorcycle parts and accessories designed for riders by riders.

©2005 Kuryakyn USA® All Rights reserved.



PROCEDURE

STEP 1 Remove the fastener shown in [PIC. 1](#) and the bolt under this peg.

STEP 2 Remove the fastener shown in [PIC. 2](#). You may need to loosen the top and bottom mounting bolts for ease of removal and reassembly. You are now able to set this part aside.

STEP 3 Using mechanics wire or other similar solid wire, feed it down the side tube through the hole shown in [PIC. 3](#). This wire needs to come out of the location that is shown in [PIC. 4](#). These two pictures were taken with the Ergo Guard off the bike to give you a more detailed photo.

STEP 4 Attach the wire from your light to the pull wire you just fed through. Twist the wires together then apply some electrical tape to the area. This joint must be small enough to go through the small hole at the top of the Ergo Guard. Pull the wire through the bar.

STEP 5 You can now reassemble the peg assembly in the reverse order that it was removed. The fastener shown in STEP 1 that secures the peg on must have Anti-Seize applied to it. The other two fasteners (one under peg and the one shown in [PIC. 2](#)) should have blue lock tight applied to them before installing.

STEP 6 Attach the light to the light mount bracket using the included 5/16"-18 x 1" SHCS.

IMPORTANT! Light mount must be attached in the furthest out most position. See [PIC. 5](#).

STEP 7 Place the bracket in place and secure with the supplied fasteners. Anti-Seize must be used on these screws. The slotted holes are how you will adjust the lights vertically. See [PIC. 6](#). You adjust the light's horizontal beam with its mounting bolt.

STEP 8 Slide the rubber grommet on wire and push in the top hole to protect wire. See [PIC. 7](#). This photo shows the wire without the grommet.

REPEAT STEPS 1 THROUGH 8 FOR THE OPPOSITE SIDE.

STEP 9 Retighten the top and bottom mounting bolts.

NOTE: Please follow the instructions for Küryakyn P/N 2328 Wiring and Relay Kit to wire the lights.

Küryakyn®

PIC. 3



PIC. 4



PIC. 5



PIC. 6



PIC. 7



Ride On!

PAGE

2