



L.E.D. RADIATOR SIDE TRIM

3210

FITS: ALL VTX1800 AND VTX1800 RETRO (SPOKE AND CAST)

PART#	INCLUDED
603210R	1 Radiator Side Trim — Right Side, Complete Assembly
603210L	1 Radiator Side Trim — Left Side, Complete Assembly
903210	1 3210 Hardware Kit Including:
400846	6 Scotchlock, Male #ET15534
400834	6 T-Tap Female Quick Slide Scotchlock — Red
400815	6 Cable Tie 4" Black Nylon
401208	2 Alcohol Pads
401209	1 Dielectric Grease Pack
903210S	1 3210 Screw Hardware Kit Including:
203210	4 M6 x 1.0 x .618 Domed Socket Head Shoulder Screw
303210	1 Instruction Sheet

PROCEDURE

STEP 1 Remove the stock upper and lower socket head screws on the side of the radiator.

STEP 2 Test fit each trim strip before removing the adhesive backing. Note left and right sides.

STEP 3 Use an alcohol pad to thoroughly clean the area where the adhesive will be. Make sure the alcohol is completely dry before applying the adhesive.

STEP 4 Remove adhesive backing and slip the Domed Socket Head Shouldered Screws into the holes in the Trim. Make sure the wires exit toward the rear of the bike and install each Side Trim. Hold the shouldered screws in place as the trim is moved into position to ensure proper alignment. Once in place, press firmly then tighten the screws.

STEP 5 Run each wire group up to the hole in the back of the headlight placing wire ties where needed. Be sure to leave enough slack in the wires at the frame neck to allow for turning in both directions.

STEP 6 Remove the headlight bezel to access the stock running and turn light wires.

STEP 7 Using the clamshell and spade connectors, connect the wires to the correct color wire inside of the headlight bucket as shown in the chart below:

TRIM WIRING	BIKE WIRING
BLACK, LEFT GROUND	GREEN, GROUND
RED, LEFT RUN	ORANGE (WHITE TRACER), LEFT RUN
WHITE, LEFT TURN	ORANGE, LEFT TURN
BLACK, RIGHT GROUND	GREEN, GROUND
RED, RIGHT RUN	BLUE (WHITE TRACER), RIGHT RUN
WHITE, RIGHT TURN	BLUE, RIGHT TURN

-cont.-

CUSTOMER SERVICE
877.370.3604 (toll free)

INSTALLATION QUESTIONS
techsupport@kuryakyn.com
or call 715.247.2983

WARRANTY

Kuryakyn™ warrants that any Kuryakyn product sold hereunder, if properly installed, maintained and operated under normal conditions, shall be free from any defects in materials and workmanship for a period of one (1) year from the date the Kuryakyn products are sold to the customer.


CONSEQUENTIAL DAMAGES:
Kuryakyn shall not be liable for any consequential or incidental damages.

ABOUT OUR CATALOG

You'll find all our innovations for HD, GL and Metric Cruisers in our annual catalogs. Order online today—select the "CATALOGS" icon. Each Kuryakyn™ product comes with a Proof-of-Purchase good for a complimentary catalog. Details in packaging.

Be sure to ask your local dealer about other Kuryakyn products, the motorcycle parts and accessories designed for riders by riders.

©2004 Kuryakyn USA™ All Rights reserved.

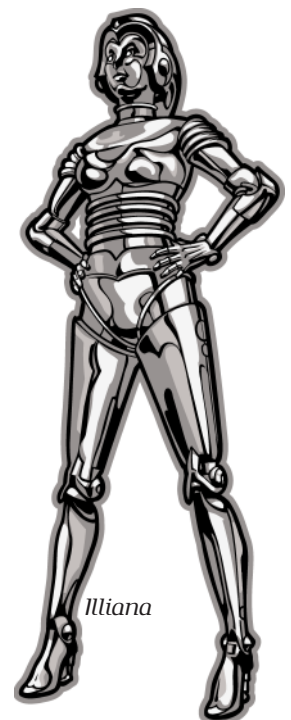

Illiana

NOTE Connect a spade connector (pink) to each wire from the radiator trim with a wire crimper. Connect a clam shell connector (red) to each colored wire above by crimping with pliers until it snaps together at the end. Cut the corner off of the dielectric grease pack and apply grease to all wire connections. Now push the corresponding connectors together.

STEP 9 Visually check for proper operation by turning the key on. The running lights should be on now. Try each turn signal.

STEP 10 Reinstall the headlight bezel.

Ride On!