



LIGHTED TRUNK MOLDINGS

3221

FITS ALL HONDA GL1800 MODELS

PARTS INCLUDED

- 1 Lighted Molding – Right
- 1 Lighted Molding – Left
- 1 Lighted Molding – Center
- 1 Wired Connector
- 1 Power Extension Wire
- 10 4" Nylon Wire Ties
- 1 Installation Instructions

Please read and understand entire instructions before starting installation.

THANK YOU FOR CHOOSING KÜRYAKYN!

PLEASE NOTE

It is the installers' responsibility to make sure all fasteners (including pre-assembled) are tightened before operation of motorcycle. Kuryakyn will not warranty components that are lost due to improper installation. Periodic maintenance may be required.

TOOLS SUGGESTED

Phillips screwdriver, 5mm Allen wrench, Diagonal cutters

PLEASE NOTE

This kit contains the same plug in wiring adapter found in our "Debris Modulator" Lighted Mud flap Kit. These adapters have plugs for two Kuryakyn lighted accessories each. If you already have the lighted mud flap kit (Kuryakyn P/N 4851) installed on your bike, this lighted molding kit can be plugged into the existing wired connector, and the one in this kit need not be installed. Conversely, if you choose to add the lighted mud flap after the installation of these lighted moldings, it will plug into the adapter installed with this kit.

PROCEDURE

STEP 1 Remove the stock trunk moldings. The side moldings must be removed first. Each side molding is secured by two Phillips head screws accessible from the inside of the trunk. PIC.1 Shows the approximate placement of the screw holes in the trunk. (The moldings have already been removed in this picture.) There is a tab at the rear of each molding that interlocks into the center molding securing the corners. Remove the center section by removing the Phillips screw at each end and unsnapping the molding from the trunk.

STEP 2 "Drop" the rear portion of the bottom panel of the trunk. The bottom panel is secured by three Phillips head screws across the back; under the center molding you just removed. There are also two mounting screws on each side of the inside of the trunk, just above the trunks floor. Remove the rear screw from each side, and loosen the front two. The rear of the trunk bottom panel can now swing down.

PIC.1



CUSTOMER SERVICE

877.370.3604 (toll free)

INSTALLATION QUESTIONS

techsupport@kuryakyn.com
or call 715.247.2983

LIMITED WARRANTY

Kuryakyn warrants that any Kuryakyn products sold hereunder, shall be free of defects in materials and workmanship for a period of one (1) year from the date of purchase by the consumer excepting the following provisions:

- Kuryakyn shall have no obligation in the event the customer is unable to provide a receipt showing the date the customer purchased the product(s).
- The product must be properly installed, maintained and operated under normal conditions.
- Kuryakyn makes no warranty, expressed or implied, with respect to any gold plated products.
- Kuryakyn shall not be liable for any consequential and incidental damages, including labor and paint, resulting from failure of a Kuryakyn product, failure to deliver, delay in delivery, delivery in nonconforming condition, or for any breach of contract or duty between Kuryakyn and a customer.
- Kuryakyn products are often intended for use in specific applications. Kuryakyn makes no warranty if a Kuryakyn product is used in applications other than intended.
- Kuryakyn electrical products are warranted for one (1) year from the date of purchase by the consumer. Components of Kuryakyn products containing L.E.D.s will be warranted for defects in materials and workmanship for 3 years from the date of purchase.
- Kuryakyn makes no warranty of any kind in regard to other manufacturer's products distributed by Kuryakyn. Kuryakyn will pass on all warranties made by the manufacturer and where possible, will expedite the claim on behalf of the customer, but ultimately, responsibility for disposition of the warranty claim lies with the manufacturer.

ABOUT OUR CATALOG

You'll find all our innovations for H-D, GL and Metric Cruisers in our annual catalogs. Order online today—select the "CATALOGS" icon. Each Kuryakyn product comes with a Proof-of-Purchase good for a complimentary catalog. Details in packaging.

Be sure to ask your local dealer about other Kuryakyn products, the motorcycle parts and accessories designed for riders by riders.

©2005 Kuryakyn USA All Rights reserved.



STEP 3 See [PIC.2](#). Remove the rear center panel, between the saddlebags. There is a button head Allen bolt in each corner of the panel, and one located behind the license plate.

STEP 4 Locate the following components: trunk light plugs and cover (see [PIC.3](#)) and the wired connector (see [PIC.4](#)).

STEP 5 Unplug either the blue or red plugs and insert the wired connector as shown in [PIC.5](#). Plug the 26" power extension wire into either of the accessory light plugs.

STEP 6 Route the power extension wire up, and inside the trunk bottom panel so the remaining plug and short length of wire hangs out of the rear of the trunk panel. Use the included wire ties to secure this power wire out of harms way. [FIG.1](#) (line drawing) shows one possible wire routing.

STEP 7 Replace the rear center panel, and bottom trunk panel.

STEP 8 Plug the power extension wire into the plug in the center of the rear molding. Route the two end leads out the opening in each interlocking tab. See [PIC.6](#).

STEP 9 Snap and screw the center molding into place.

STEP 10 Plug each side molding plug into the corresponding plugs in the center molding. Install each side molding in the same manner as the stock ones were removed. Secure with the two stock Phillips screws per side.

Kuryakyn®

PIC.2



PIC.3



PIC.4




PIC.5



Ride On!

FIG.1

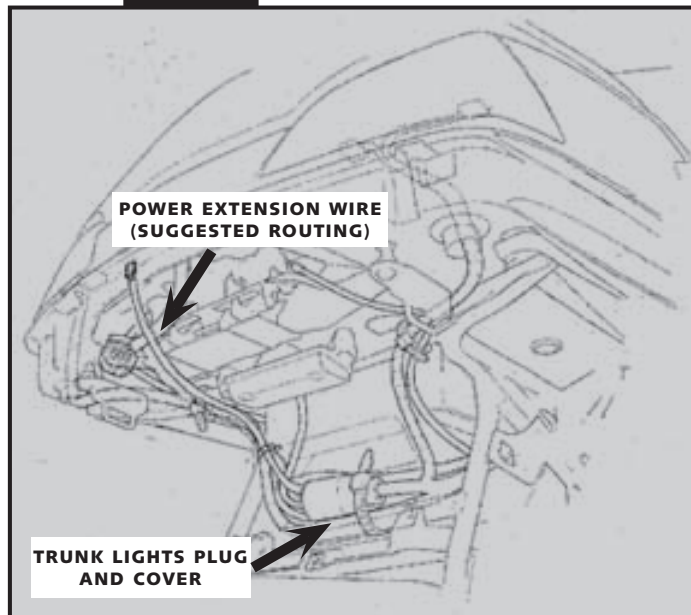

PIC.6



PAGE

2

TRUNK LIGHTS AND MOLDING INSTALLATION