



UNDER TRUNK LIGHT BAR FOR GL 1800 3227

PARTS INCLUDED

- 1 Under Trunk Light Bar
- 1 Wire set for Tour Trunk LED Accent
- 1 6-Connector Power Adapter
- 4 Cord Keepers
- 10 Cable Ties 4" Black
- 2 Alcohol Pad
- 1 Installation Instructions

Please read and understand entire instructions before starting installation.

THANK YOU FOR CHOOSING KÜRYAKYN!

CAUTION! This indication alerts you to the fact that ignoring the contents described herein can result in potential injury or material damage.


ATTENTION! This indication alerts you to the fact that ignoring the contents described herein may negatively affect product performance and functionality.

TOOLS SUGGESTED

Set of Metric Hex Wrenches, Phillips Screwdriver, Masking Tape or Non-permanent Marker and a Rat Tail File or Utility Knife

STRICTLY OBSERVE THE FOLLOWING GUIDELINES IN ORDER TO USE THE PRODUCT PROPERLY AND AVOID POTENTIALLY DANGEROUS ACCIDENTS.

- STEP 1** Read and understand all steps in the instructions before starting the installation. Park the motorcycle on a hard, level surface and turn off the ignition.
- STEP 2** Remove the new trunk light from the package, test fit the new light to the bottom of the trunk just below the edge trim on the trunk. Mark the placement of the light and the location the wires (you will be making a notch for the wires in a later step) exit the light on the trunk. Make any non-permanent marks to help locate the best fit. PIC 1
- STEP 3** Remove the stock trunk moldings. The side moldings must be removed first. Each side molding is secured by two Phillips head screws accessible from the inside of the trunk. PIC.2 shows the approximate placement of the screw holes in the trunk. There is a tab at the rear of each molding that interlocks into the center molding securing the corners. Remove the center section by removing the two Phillips screw at each end and unsnapping the molding from the trunk. (if moldings are lighted disconnect wires before removal of the moldings.)

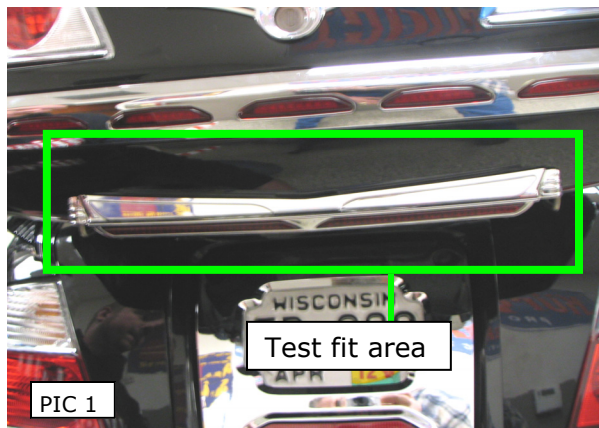

-cont.-

3227-21GL-0111

CUSTOMER SERVICE

877.370.3604 (toll free)

INSTALLATION QUESTIONS

techsupport@kuryakyn.com
or call 715.247.2983

LIMITED WARRANTY

Kuryakyn warrants that any Kuryakyn products sold hereunder, shall be free of defects in materials and workmanship for a period of one (1) year from the date of purchase by the consumer excepting the following provisions:

- Kuryakyn shall have no obligation in the event the customer is unable to provide a receipt showing the date the customer purchased the product(s).
 - The product must be properly installed, maintained and operated under normal conditions.
 - Kuryakyn makes no warranty, expressed or implied, with respect to any gold plated products.
 - Kuryakyn shall not be liable for any consequential and incidental damages, including labor and paint, resulting from failure of a Kuryakyn product, failure to deliver, delay in delivery, delivery in nonconforming condition, or for any breach of contract or duty between Kuryakyn and a customer.
- Kuryakyn products are often intended for use in specific applications. Kuryakyn makes no warranty if a Kuryakyn product is used in applications other than intended.
- Kuryakyn electrical products are warranted for one (1) year from the date of purchase by the consumer. L.E.D.'S contained in components of Kuryakyn products will be warranted for defects in materials and workmanship for 3 years from the date of purchase where as all other components shall be warranted for one(1) year. This includes, but is not limited to; control modules, wiring, chrome & other components.
- Kuryakyn makes no warranty of any kind in regard to other manufacturer's products distributed by Kuryakyn. Kuryakyn will pass on all warranties made by the manufacturer and where possible, will expedite the claim on behalf of the customer, but ultimately, responsibility for disposition of the warranty claim lies with the manufacturer.



ABOUT OUR CATALOG

For purchasing Kuryakyn® products, you can receive a complete catalog free of charge. Send the Proof-of-Purchase below with your address to: Kuryakyn, P.O. Box 339, Somerset, WI 54025. Please indicate either Accessories Catalog for Harley-Davidson® or GL & Metric Cruisers.

Be sure to ask your local dealer about other Kuryakyn® products, the motorcycle parts and accessories designed for riders by riders.

©2005 Kuryakyn USA® All Rights reserved.



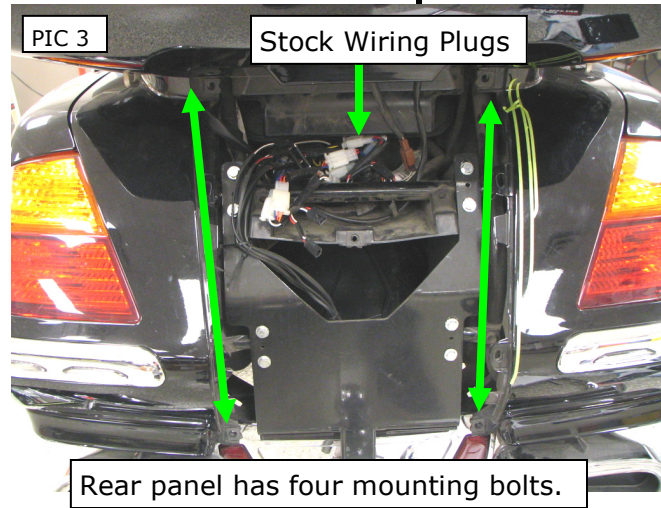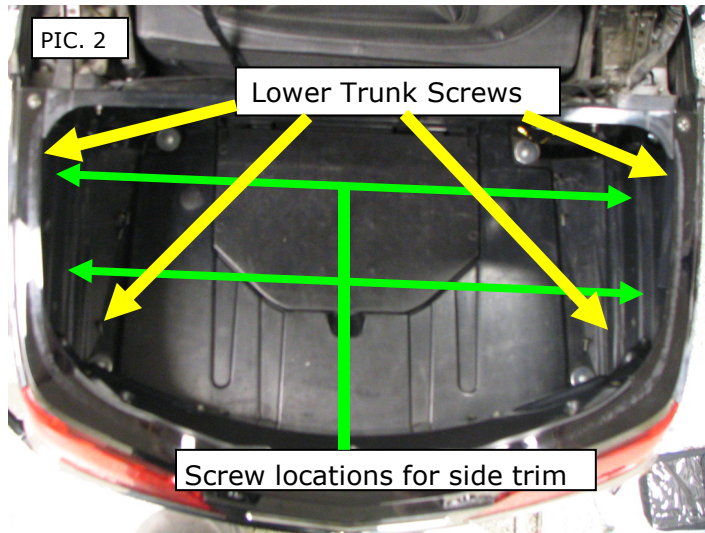

STEP 4 Remove the rear center panel, between the saddlebags. There are button head bolts in each corner of the panel, older bikes have one additional bolt behind the license plate. PIC. 3

STEP 5 "Drop" the rear portion of the bottom panel of the trunk. The bottom panel is secured by three Phillips head screws across the back; under the center molding you just removed. (PIC. 4) There are also two mounting screws on each side of the inside of the trunk, just above the trunk's floor. (PIC. 2) Remove the rear screw from each side, and loosen the front two. The rear of the trunk bottom panel can now swing down.




STEP 6 To create more clearance for the new power wire, use a rat tail file or a utility knife to make a small notch in the lower trunk cover. Make sure that there are no sharp edges on the notch. PIC 5

STEP 7 Reinstall the three Phillips head screws in the bottom panel removed in Step 5 to stiffen the panel for the light's installation. PIC 4

STEP 8 With the supplied alcohol pad, clean the trunk where the light will be installed. If it is excessively dirty or has a wax build up, clean it with a mild ammonia based cleaner like Windex and then finish cleaning it with the supplied alcohol pad. Refer to PIC 1.

STEP 9 Refit the light to the trunk. Check the location of the notch that was made and make sure the wires will not be pinched when the light is installed and route the wire harness through the notch and leave for now. Mark the placement of the light and the location the wires exit the light on the trunk. Make any non-permanent marks to help locate the best fit. Refer to PIC 1 and PIC 5

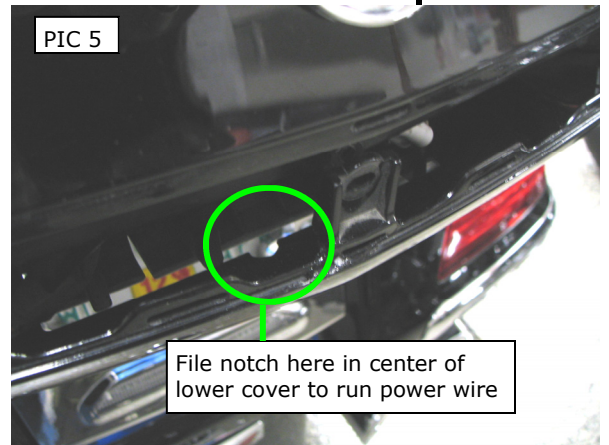

STEP 10 With the back of your fingernail, rub the adhesive backing. Remove the backing and line up any marks that were previously made. Press and hold the new light to the trunk for one full minute. Full bonding will occur in 24 hours.

ATTENTION!

Ensure the area of installation is free of grease, oil, dirt or other debris to ensure proper adhesion. Küryakyn WILL NOT issue a warranty on any parts lost due to improper installation.

ATTENTION!

The adhesive will not bond correctly if applied at temperatures less than 50°F. Do not attempt this installation in temperatures less than 50°F.

-cont.-

STEP 11 Remove the three Phillips head Screws in the center of the bottom panel from Step 6, PIC 4. Route the power wire for the light up inside the trunk bottom panel by the center trunk release, through the notch that you made in Step 6, making sure there is no pinching or fraying of any wires. Route the remaining excess wire to the front of the lower trunk cover, between the lower trunk cover and the trunk subfloor, into the rear center panel that was removed in Step 4.

ATTENTION!

Secure all wiring away from any moving parts, pinch points or extreme heat. Küryakyn WILL NOT issue a warranty on any electrical component that fails due to pinched, crimped, broken, abraded, melted or frayed wires.



STEP 12 Locate the stock wiring plugs, unplug either the blue or red plugs and insert the supplied wiring harness in between the stock plugs. PIC. 5 and PIC 6

STEP 13 Plug the light connector into the supplied wiring harness just installed in Step 12. Use the included cord keepers and cable ties to secure the power wire out of harms way. Make sure there is no interference between any part of the bike and the cord keepers.

CAUTION!


Be aware of any cables/wires that could potentially be pinched or crushed while using this product.

ATTENTION!

Secure all wiring away from any moving parts, pinch points or extreme heat. Küryakyn WILL NOT issue a warranty on any electrical component that fails due to pinched, crimped, broken, abraded, melted or frayed wires.

ATTENTION!

Küryakyn recommends the use of dielectric grease on electrical connections.

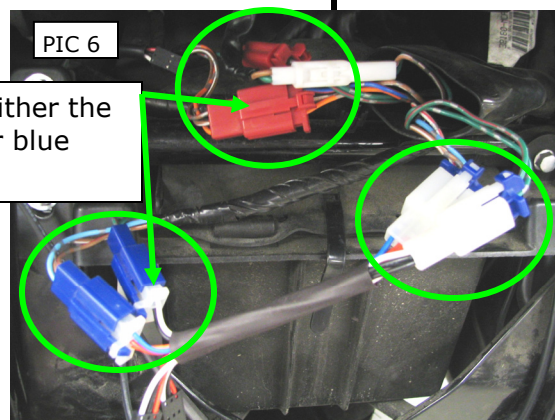

STEP 14 Replace the bottom trunk panel with the three Phillips head screws removed in Step 11 and the two removed in Step 5. Tighten the front two from Step 5. PIC. 4

ATTENTION!

Activate all three handles and check for proper wire clearance.

STEP 15 Snap and screw the center molding into place. Be cautious when reinstalling this section, the small tabs that secure this to the bike are very brittle, use extra caution.

ATTENTION!

Küryakyn recommends the use of dielectric grease on electrical connections.

STEP 16 Reinstall the side moldings removed in Step 3. (If the bike is equipped with lighted trunk moldings, make sure to plug in all connections before reinstallation.)

STEP 17 Tighten all fasteners.

ATTENTION!

It is the installer's responsibility to ensure that all of the fasteners (including pre-assembled) are tightened before operation of the motorcycle. Küryakyn will not issue a warranty on components lost due to improper installation. Periodic maintenance may be required.

ATTENTION!

Secure all wiring away from any moving parts, pinch points or extreme heat. Küryakyn WILL NOT issue a warranty on any electrical component that fails due to pinched, crimped, broken, abraded, melted or frayed wires.

Ride On!