



# INSTALLATION

## L.E.D. SADDLEBAG ACCENT SWOOPS 3232

### PARTS INCLUDED

- 1 Right Saddlebag Swoop Assembly—Chrome with Red Lens
- 1 Left Saddlebag Swoop Assembly—Chrome with Red Lens
- 1 Right Accent Extension—Chrome
- 1 Left Accent Extension—Chrome
- 1 Hardware Kit Containing:
  - 1 Triple "Y" Adapter
  - 2 Alcohol Pads
  - 4 #6 X 1-3/8" Phillips Head Pan Screws—Longer
  - 2 #6 X 1-1/8" Phillips Head Pan Screws—Shorter
  - 6 #6 Flat Washers
  - 6 6" Black Nylon Cable Ties
- 1 Installation Instructions

Please read and understand entire instructions before starting installation.

### THANK YOU FOR CHOOSING KÜRYAKYN!

**IN ORDER TO PROTECT YOU AND OTHERS FROM POSSIBLE INJURY AND/OR PROPERTY DAMAGE OR LOSS, PLEASE PAY CLOSE ATTENTION TO ALL INSTRUCTIONS, WARNINGS, CAUTIONS AND NOTICES REGARDING THE USE AND CARE OF THIS PRODUCT.**

<b>WARNING</b>	<b>THIS INDICATION ALERTS YOU TO THE FACT THAT IGNORING THE CONTENTS DESCRIBED HEREIN CAN RESULT IN POTENTIAL DEATH OR SERIOUS INJURY.</b>
<b>NOTICE</b>	<b>This indication alerts you to the fact that ignoring the contents described herein may negatively affect product performance and functionality.</b>

<b>NOTICE</b>	<b>IF INSTALLING THIS PRODUCT FOR ANOTHER PARTY, PLEASE MAKE SURE THEY RECEIVE THIS COPY OF THE INSTALLATION INSTRUCTIONS SO THEY ARE AWARE OF THE IMPORTANT INFORMATION CONTAINED IN THEM.</b>
---------------	---

### TOOLS SUGGESTED

Set of Metric Hex and Combination Wrenches, Phillips Head Screwdriver, Drill and Drill Bits

**STRICTLY OBSERVE THE FOLLOWING GUIDELINES IN ORDER TO USE THE PRODUCT PROPERLY AND AVOID POTENTIALLY DANGEROUS ACCIDENTS.**

**STEP 1** Read and understand all steps in the instructions before starting the installation. Park the motorcycle on a hard, level surface and turn off the ignition.

**NOTE:** This product requires the motorcycle to be equipped with Kuryakyn Rear Accessory Plug and Play Harness, P/N 3230, or the applicable Part Number Kuryakyn Rear Plug and Play harness for your model.

**NOTE:** F6B models will require the removal of the reflector and base attached to both saddlebag doors. PIC 1

### CUSTOMER SERVICE

877.370.3604 (toll free)

### INSTALLATION QUESTIONS

techsupport@kuryakyn.com  
or call 715.247.2983

### LIMITED WARRANTY

Kuryakyn warrants that any Kuryakyn products sold hereunder, shall be free of defects in materials and workmanship for a period of one (1) year from the date of purchase by the consumer excepting the following provisions:

- Kuryakyn shall have no obligation in the event the customer is unable to provide a receipt showing the date the customer purchased the product(s).
- The product must be properly installed, maintained and operated under normal conditions.
- Kuryakyn makes no warranty, expressed or implied, with respect to any gold plated products.
- Kuryakyn shall not be liable for any consequential and incidental damages, including labor and paint, resulting from failure of a Kuryakyn product, failure to deliver, delay in delivery, delivery in nonconforming condition, or for any breach of contract or duty between Kuryakyn and a customer.
- Kuryakyn products are often intended for use in specific applications. Kuryakyn makes no warranty if a Kuryakyn product is used in applications other than intended.
- Kuryakyn electrical products are warranted for one (1) year from the date of purchase by the consumer. L.E.D.'S contained in components of Kuryakyn products will be warranted for defects in materials and workmanship for 3 years from the date of purchase where as all other components shall be warranted for one(1) year. This includes, but is not limited to; control modules, wiring, chrome & other components.
- Kuryakyn makes no warranty of any kind in regard to other manufacturer's products distributed by Kuryakyn. Kuryakyn will pass on all warranties made by the manufacturer and where possible, will expedite the claim on behalf of the customer, but ultimately, responsibility for disposition of the warranty claim lies with the manufacturer.

### ABOUT OUR CATALOG

For purchasing Kuryakyn® products, you can receive a complete catalog free of charge. Send the Proof-of-Purchase below with your address to: Kuryakyn, P.O. Box 339, Somerset, WI 54025. Please indicate either Accessories Catalog for Harley-Davidson® or GL & Metric Cruisers.

Be sure to ask your local dealer about other Kuryakyn® products, the motorcycle parts and accessories designed for riders by riders.

©2005 Kuryakyn USA® All Rights reserved.



kuryakyn.com

**STEP 2** Remove the saddlebag doors from the saddlebags by removing the four hex head fasteners from the hinges and disconnecting the slave and tether from the door. PIC 2 and PIC 3 Set this hardware aside, it will be reused.

**NOTICE** Assistance is recommended in holding the door before all of the fasteners have been removed to prevent the door from falling and being damaged.

**STEP 3** Remove the three fasteners from the locations shown in PIC 4 on the back side of each saddlebag door. Set these aside, they will not be reused.

**STEP 4** Using a 1/8" drill bit, carefully drill **STRAIGHT** through each location that the fasteners were removed from in Step 3. Drill from the back side to the front. Gradually increase the size of the drill bit to 1/4" making sure the hole remains **STRAIGHT** through the door.

**NOTE:** Drill slowly using light pressure, the doors are plastic and will drill easily.

**NOTICE** Ensure the hole remains straight through the door. Kuryakyn will not be responsible for incidental or consequential damages resulting from this installation.

**STEP 5** Using the included #6 screws and washers, fasten the Side Accents to each door **loosely**. (Make sure to use the washers under the head of each screw. Leave the screws loose to ease installation of the Accent Extensions in the following Steps) Use the #6 x 1-3/8" (longer) in the two rearward holes, the #6 x 1-1/8" (shorter) in the front hole on each door.

**STEP 6** Install the doors back on the saddlebags using the hardware removed in Step 2.




**NOTICE** Ensure the area of installation is free of grease, oil, dirt or other debris including wax/polish products and bugs to ensure proper adhesion. Küryakyn WILL NOT issue a warranty on any parts lost due to improper installation.

**STEP 7** Thoroughly clean the front black portion of the saddlebag door (PIC 5) with soapy water and a clean rag. Dry completely. Wipe the area with the included alcohol pad to remove any residue.

**NOTE:** Use the Accent Extensions as guides to make sure you clean enough of the saddlebags.

**STEP 8** Test fit the Black Extension to the front of the saddlebag door. The top edge of the Extension will follow the line between the painted portion of the door and the black portion. Make any reference marks with masking tape or a non-permanent marker.


**NOTICE** The adhesive will not bond correctly if applied at temperatures less than 50°F. Do not attempt this installation in temperatures less than 50°F.

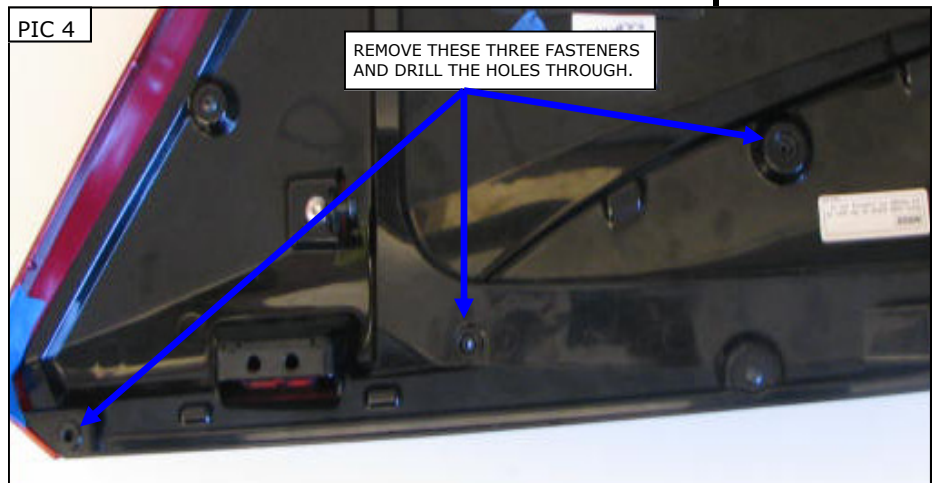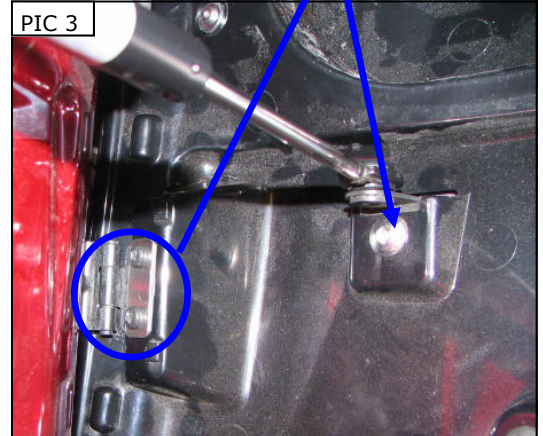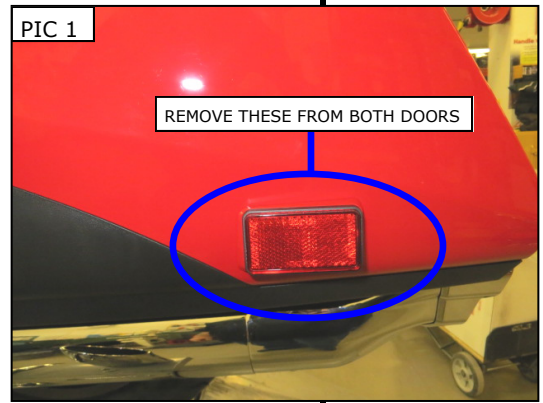

**STEP 9** Rub the backing on the Accent Extension with your fingernail to activate the adhesive. Peel the backing off the Accent Extension.


**STEP 10** Slide the rear of the Accent Extension under the front of the Swoop assembly and, moving back to front and following any reference marks made in Step 8, press the Accent Extension firmly in place for one minute. PIC 6 Full bond strength will occur in 24 hours. Repeat Steps 7, 8, 9 and 10 for the other door.

**STEP 11** Make sure the wire harness from the Swoop is in the notch on the bottom of the Swoop and there is a washer under the head of each screw installed in Step 5. tighten the fasteners from Step 5 snugly. **DO NOT over tighten these**, they may crack the screw boss in the Swoop assembly or push through and create dimples in the outer black.

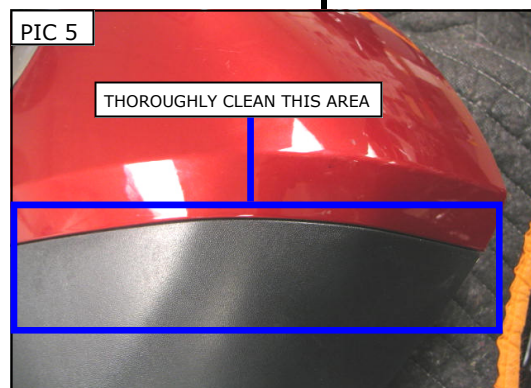

**NOTICE** Küryakyn will not issue a warranty for any part that show signs of over-tightening.

**STEP 12** Use the included cable ties to secure the wire harness to the saddlebag brace on each side of motorcycle. PIC 7 Make sure that the wire harnesses are as far from the exhaust as possible.

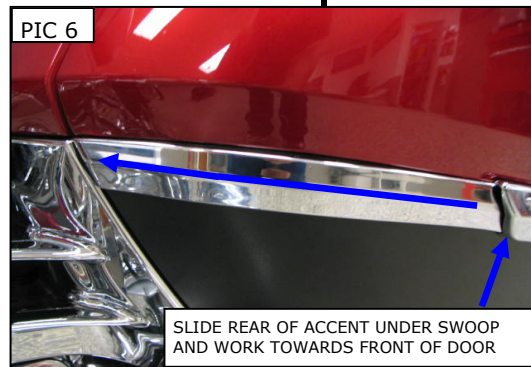


**NOTICE** Secure all wiring away from any moving parts, pinch points or extreme heat. Küryakyn WILL NOT issue a warranty on any electrical component that fails due to pinched, crimped, broken, abraded, melted or frayed wires.

**STEP 13** Remove the rear fender panel from the motorcycle by removing the four fasteners. PIC 8

**NOTICE** Küryakyn recommends the use of dielectric grease on electrical connections.

**STEP 14** If you have an open six pin connector on the Plug and Play Harness, (previously purchased and installed), connect the six pin connector from the Triple "Y" harness to it. If you do not have an open connector, disconnect one of the six pin sets and connect the included Triple "Y" connector in line. Connect the existing accessory and the Accent Lights to the new Triple "Y" connector. Use the included cable ties to secure the harness out of harms way.

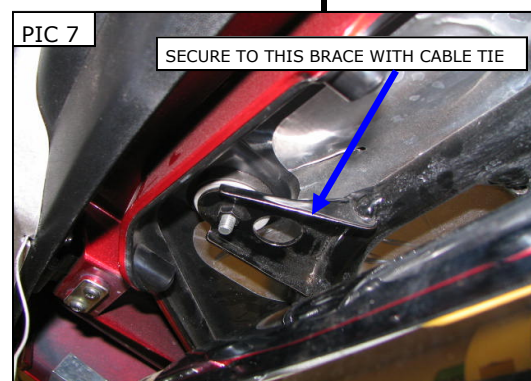


**NOTE:** It does not matter which connector from the Accents is plugged into which Triple "Y" connector, the Accents are wired to draw from the correct wires on each side.

**STEP 15** Test all lights for the correct functions.

**WARNING** ENSURE PROPER LIGHT OPERATION BEFORE RIDING THE MOTORCYCLE. VISIBILITY IS A MAJOR CONCERN FOR MOTORCYCLISTS. A LIGHTING MALFUNCTION COULD RESULT IN DEATH OR SERIOUS INJURY.

**STEP 16** Replace the rear fender panel.

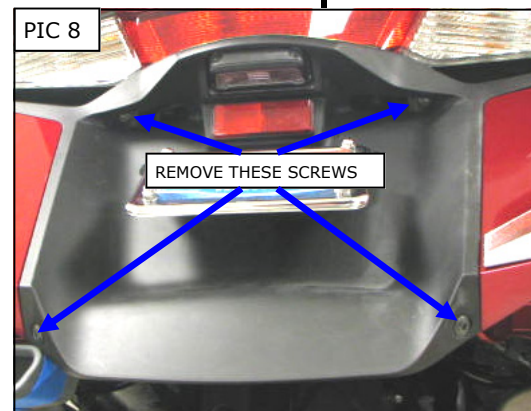

**NOTICE** It is the installer's responsibility to ensure that all of the fasteners (including pre-assembled) are tightened before operation of the motorcycle. Küryakyn will not provide warranty coverage on products or components lost due to improper installation or lack of maintenance. Periodic inspection and maintenance are required on all fasteners.