

### FAIRING LIGHTS III FOR GOLD WING

3250

### THANK YOU FOR CHOOSING KURYAKYN!

Protect yourself and others from possible injury and property damage or loss. Pay close attention to all instructions, warnings, cautions, and notices regarding the installation, use, and care of this product.

**MARNING** 

THIS INDICATION ALERTS YOU TO THE FACT THAT IGNORING THE CONTENTS DESCRIBED HEREIN CAN RESULT IN POTENTIAL DEATH OR SERIOUS INJURY.

A CAUTION

THIS INDICATION ALERTS YOU TO THE FACT THAT IGNORING THE CONTENTS DESCRIBED HEREIN CAN RESULT IN MINOR OR MODERATE POTENTIAL INJURY.

NOTICE

THIS INDICATION ALERTS YOU TO THE FACT THAT IGNORING THE CONTENTS DESCRIBED HEREIN MAY NEGATIVELY AFFECT PRODUCT PERFORMANCE AND FUNCTIONALITY OR DAMAGE THE PRODUCT ITSELF OR THE PRODUCT TO WHICH IT IS BEING ATTACHED.

### ENSURE THAT THE FOLLOWING PARTS HAVE BEEN INCLUDED IN THE KIT:

- RH Fairing Light III
- 1 LH Fairing Light III

- Hardware Kit, containing:
  - Y-Adapter Plug 5-1/4" Overall Length
  - Dielectric Grease Pack
  - Alcohol Pad
  - 10 4" Black Cable Ties

### YOU WILL ALSO NEED:

Allen wrench set, #2 Phillips screwdriver. (P/N 7300 - sold separately)

NOTICE

THESE INSTALLATION INSTRUCTIONS CONTAIN IMPORTANT INFORMATION. ENSURE THE END USER RECEIVES THIS COPY AND IS AWARE OF ITS IMPORTANCE FOR FUTURE USE.

NOTICE

A FACTORY SERVICE MANUAL MAY BE HELPFUL IN PERFORMING THIS INSTALLATION. DO NOT ATTEMPT TO PERFORM THIS INSTALLATION IF YOU ARE NOT CONFIDENT IN YOUR ABILITY TO COMPLETE ALL STEPS IN THE PROCEDURE; CONSULT A TRAINED TECHNICIAN.

STEP 1

Read and understand all steps in the instructions before starting the installation. Park the motorcycle on a hard, level surface and turn off the ignition. Let motorcycle cool.

STEP 2

Refer to PIC 1. Locate the rubber boot at the base of each mirror. Peel this boot back away from the fairing to expose the wire connections. Pay attention to how the boot joins with the fairing; this will aid in replacing the boot in its proper position during reassembly.



KURYAKYN.COM

866 277 9598 | INFO@KURYAKYN.COM 454 COUNTY ROAD VV SOMERSET, WI 54025











### FAIRING LIGHTS III FOR GOLD WING


3250

#### -CONTINUED-

- STEP 3 Refer to PIC 2. Carefully remove the trim molding. The upper edge has a tab that fits into a slot under the fairing. You may find it helpful to start removing the trim at the bottom and work your way to the upper edge.
- STEP 4 Refer to PIC 2. Using a hex key, remove the fasteners under the molding. Pay attention to the location of the individual bolts, as they are not identical.
- STEP 5 Refer to PIC 3. Remove the side compartments.
- STEP 7 Refer to PIC 4. Starting at the bottom of the shelter assembly thread the 40" wire harness up through the fairing, using the side compartment opening to guide the wire along the inside of the fairing.
- STEP 8 Refer to PIC 5. Thread the connector end of the wire harness under the fairing and under the mirror joint.
- STEP 9 Apply dielectric grease to all the electrical connections. Connect the adapter to the wire harness, then to the turn signal harness.





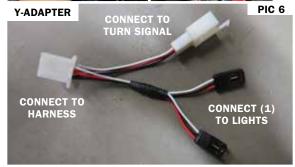



**STEP 10** Repeat STEP 2 through STEP 9 on the opposite side of the motorcycle. **STEP 11** Turn key to run position. With the motorcycle running, test the Fairing

Light, running lights, and turn signals for proper operation.

KURYAKYN.COM









### FAIRING LIGHTS III FOR GOLD WING

3250

-CONTINUED-

**STEP 12** 

Using warm soapy water and a clean rag, remove all dirt and debris from the installation area; allow the area to dry completely. Wipe the installation area with the included alcohol pad to remove any wax or polish; allow the area to dry completely.

NOTICE

ENSURE PROPER ADHESION OF THIS PRODUCT. REMOVE ALL GREASE, OIL, BUGS, DIRT, AND OTHER DEBRIS (INCLUDING WAX AND POLISH) FROM THE INSTALLATION AREA. KURYAKYN WILL NOT PROVIDE WARRANTY COVERAGE ON PRODUCTS OR COMPONENTS LOST OR DAMAGED DUE TO IMPROPER INSTALLATION.

DO NOT ATTEMPT THIS INSTALLATION IN TEMPERATURES BELOW 50°F (10°C).

**STEP 13** Test fit the Lights. Use masking tape to make alignment marks; remove the Lights.

**STEP 14** Use your fingernail to rub the adhesive backing; this will activate the adhesive. Remove and discard the backing.

**STEP 15** Refer to PIC 8. Align the Lights; press into place for one minute; full bonding will occur after 24 hours. Remove and discard the masking tape.

> NOTE: If the bike is going to be operated before full bonding occurs, secure the Light to the fairing with a good quality masking or painter's

**STEP 16** Tuck any excess wire harness behind the mirror joint. Roll the rubber boot back into position against the base of the mirror.

**STEP 17** Replace the side compartments.

**STEP 18** Replace the hardware that was removed in STEP 4

Replace the trim molding. Fit the lip at the top of the molding into the **STEP 19** slot under the fairing then carefully snap the length of the molding into

**STEP 20** Repeat STEP 12 through STEP 15 on the opposite side of the motorcycle.

NOTICE

IT IS THE END USER'S RESPONSIBILITY TO ENSURE THAT ALL FASTENERS (INCLUDING PRE-ASSEMBLED) ARE TIGHTENED BEFORE OPERATION OF THE MOTORCYCLE. KURYAKYN WILL NOT PROVIDE WARRANTY COVERAGE ON PRODUCTS OR COMPONENTS LOST OR DAMAGED DUE TO IMPROPER INSTALLATION OR LACK OF MAINTENANCE. PERIODIC INSPECTION AND MAINTENANCE ARE REQUIRED ON ALL FASTENERS.







KURYAKYN.COM







### FAIRING LIGHTS III FOR GOLD WING

3250

#### -CONTINUED-

#### LIMITED WARRANTY

Kuryakyn warrants that any Kuryakyn products sold hereunder, shall be free of defects in materials & workmanship for a period of one (1) year from the date of purchase by the consumer excepting the following provisions:

- 1. Kuryakyn shall have no obligation in the event the customer is unable to provide a receipt showing the date the customer purchased the product(s).
- 2. The product must be properly installed, maintained & operated under normal conditions.
- 3. Kuryakyn shall not be liable for any consequential & incidental damages, including labor & paint, resulting from failure of a Kuryakyn product, failure to deliver, delay in delivery, delivery in nonconforming condition, or for any breach of contract or duty between Kuryakyn & a customer.
- 4. Kuryakyn products are often intended for use in specific applications. Kuryakyn makes no warranty if a Kuryakyn product is used in applications other than intended.
- 5. Kuryakyn electrical products are warranted for one (1) year from the date of purchase by the consumer. L.E.D.'s contained in components of Kuryakyn products will be warranted for defects in materials & workmanship for 3 years from the date of purchase whereas all other components shall be warranted for one (1) year.
- 6. All warranty claims must be directed to the place of purchase. Merchandise sold through internet auction sites or any other unauthorized reseller shall not carry a Kuryakyn warranty. If unsure, please contact the place of purchase to verify they are an authorized Kuryakyn reseller.

Merchandise determined to be defective may be returned up to one year from the date of purchase. Returns must be processed through original seller. Returned merchandise for any other reason other than warranty claims must be in like new condition & subject to a 20% restocking fee. All returns are subject to inspection for determination of full or partial credit. Any returned part that shows evidence of being used or installed contrary to manufacturer's instructions, &/or subjected to improper handling, packaging or return shipping by the customer, will not be eligible for exchange, refund or warranty consideration. All returned electrical items will be inspected & tested. If electrical item is deemed functional, no credit will be issued & item will be returned. All sales are final on discontinued or closeout merchandise.

#### ©2015 KURYAKYN HOLDINGS, LLC ALL RIGHTS RESERVED

KURYAKYN, KURYAKYN K logo and the marks appearing on this instruction sheet are registered and common law trademarks of Kuryakyn Holdings except noted third-party trademarks. A full listing of trademarks and trademark registrations owned by Kuryakyn Holdings can be found at www.kuryakyn.com/legal-notice.

Emissions Notice: The California Air Resources Board (CARB) does not permit the use of aftermarket emission-related parts(s) that after the performance of OEM emission-related devices unless CARB has issued an Executive Order, other than on racing vehicles on closed courses. Check your local laws and manufacturer's information.

Listed Manufacturers and product model names are for reference only. All product and company names are trademarks or registered trademarks of their respective holders. Use of them does not imply any affiliation with or endorsement by them. All specifications are subject to change without notice.

For additional information on third-party product and company names, please consult our Web page at www.kuryakyn.com/legal-notice







