



INSTALLATION

LOWER COWL CHROME COVER

3906

FOR GL1800

FITS: '01-UP GL1800

PARTS INCLUDED

- 1 Left Lower Cowl Chrome Cover
- 1 Right Lower Cowl Chrome Cover
- 2 Center Cap
- 1 RTV Silicone Adhesive Tube
- 2 Alcohol Pad
- 1 Installation Instructions

Please read and understand entire instructions before starting installation.

THANK YOU FOR CHOOSING KÜRYAKYN!

CAUTION! Ensure that the installation of this product does not interfere with the proper operation of the motorcycle before riding.

ATTENTION! Be sure the area is free of grease, oil, dirt, or other debris to ensure proper adhesion. Kuryakyn WILL NOT warranty any parts lost due to improper installation.

ATTENTION! The adhesive may not correctly bond if applied at temperatures less than 50°F. Do not attempt this installation in temperatures less than 50°F.

NOTE Pre-fit the lower cowl covers before adhering to the motorcycle to ensure proper placement.

NOTE We recommend that you do not ride the motorcycle for 12 hours after installing the Lower Cowl Chrome Covers to allow for maximum adhesion.

TOOLS SUGGESTED

Soapy water and clean rag

PROCEDURE

STEP 1 Park the motorcycle on a hard, level surface; turn off the ignition.

STEP 2 Clean the lower cowl area thoroughly with soapy water and a rag. See [PIC.1A](#) (next page).

STEP 3 Clean the lower cowl area and the inside of the cowl covers with the included alcohol pads; allow the areas to dry completely. See [PIC.1B](#) (next page).

- For models NOT equipped with optional driving lights, follow STEP 4 and STEP 5, otherwise move on to STEP 6.

STEP 4 Rub the adhesive backing on the backside of the center cap to activate the adhesive; remove the adhesive backing.

CUSTOMER SERVICE

877.370.3604 (toll free)

INSTALLATION QUESTIONS

techsupport@kuryakyn.com
or call 715.247.2983

LIMITED WARRANTY

Kuryakyn warrants that any Kuryakyn products sold hereunder, shall be free of defects in materials and workmanship for a period of one (1) year from the date of purchase by the consumer excepting the following provisions:

- Kuryakyn shall have no obligation in the event the customer is unable to provide a receipt showing the date the customer purchased the product(s).
- The product must be properly installed, maintained and operated under normal conditions.
- Kuryakyn makes no warranty, expressed or implied, with respect to any gold plated products.
- Kuryakyn shall not be liable for any consequential and incidental damages, including labor and paint, resulting from failure of a Kuryakyn product, failure to deliver, delay in delivery, delivery in non-conforming condition, or for any breach of contract or duty between Kuryakyn and a customer.
- Kuryakyn products are often intended for use in specific applications. Kuryakyn makes no warranty if a Kuryakyn product is used in applications other than intended.
- Kuryakyn electrical products are warranted for one (1) year from the date of purchase by the consumer. Components of Kuryakyn products containing L.E.D.s will be warranted for defects in materials and workmanship for 3 years from the date of purchase.
- Kuryakyn makes no warranty of any kind in regard to other manufacturer's products distributed by Kuryakyn. Kuryakyn will pass on all warranties made by the manufacturer and where possible, will expedite the claim on behalf of the customer, but ultimately, responsibility for disposition of the warranty claim lies with the manufacturer.

ABOUT OUR CATALOG

You'll find all our innovations for H-D, GL and Metric Cruisers in our annual catalogs. Order online today—select the "CATALOGS" icon. Each Kuryakyn® product comes with a Proof-of-Purchase good for a complimentary catalog. Details in packaging.

Be sure to ask your local dealer about other Kuryakyn products, the motorcycle parts and accessories designed for riders by riders.

©2005 Kuryakyn USA® All Rights reserved.



STEP 5 Position the center cap as shown in PIC.1C; hold the center cap in place for at least 60 seconds for the best adhesion. Full bond strength will occur within 24 hours.

STEP 6 Apply approximately half the silicone from the tube as shown in PIC.2.


STEP 7 Position the Lower Cowl Cover as shown in PIC.1D; secure in place for 12 hours with masking tape. See PIC.3.

NOTE Küryakyn recommends using a high tack masking tape, such as 3M Scotch-Blue™ #2090 masking tape, as it will not leave a film or remove chrome plating when removed. See PIC.3.


STEP 8 Repeat installation for the opposite side.

NOTE Küryakyn recommends that you do not ride the motorcycle for 12 hours after installing the Lower Cowl Chrome Covers to allow for maximum adhesion.

Küryakyn®

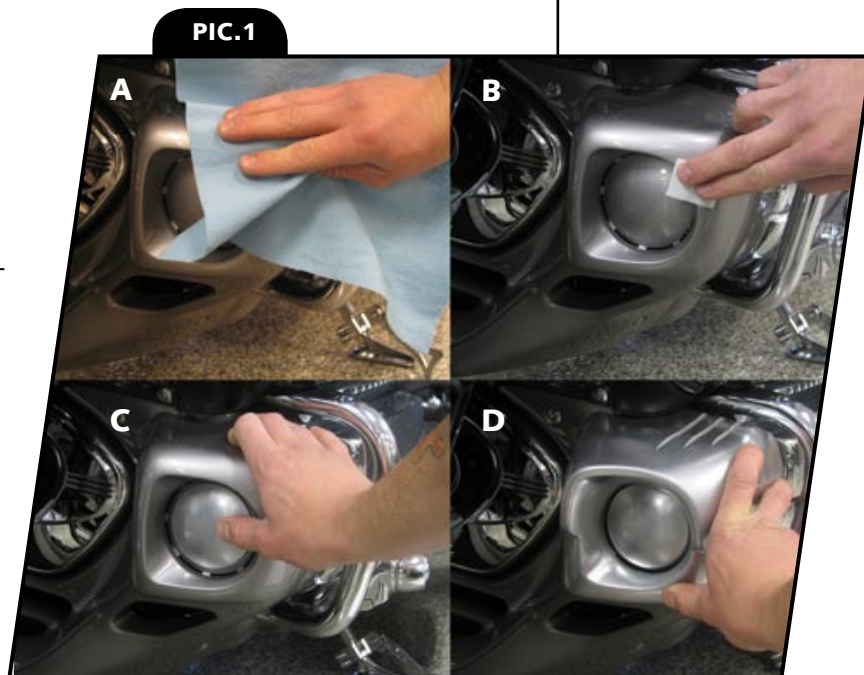

Ride On!

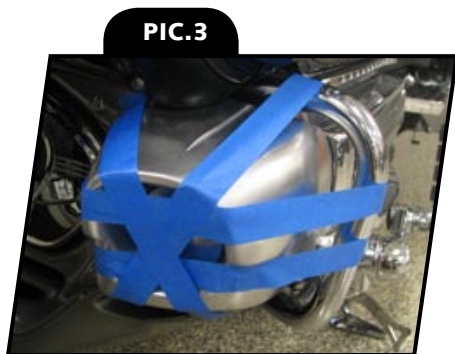

PAGE

2

LOWER COWL CHROME INSTALLATION