



INSTALLATION

FLOORBOARD MOUNT KIT

4374

PARTS INCLUDED

- 2 Splined Arms
- 2 Mount Brackets
- 2 Bag Mount Brackets
- 2 3/8"-16 x 1" Socket Head Cap Screws
- 2 3/8"-16 x 3-1/2" Socket Head Cap Screws
- 4 3/8" Locking Nylon Nuts
- 1 Installation Instructions

NOTE: All hardware included may not be used for your installation.

Please read and understand entire instructions before starting installation.

THANK YOU FOR CHOOSING KÜRYAKYN!

IN ORDER TO PROTECT YOU AND OTHERS FROM POSSIBLE INJURY AND/OR PROPERTY DAMAGE OR LOSS, PLEASE PAY CLOSE ATTENTION TO ALL INSTRUCTIONS, WARNINGS, CAUTIONS AND NOTICES REGARDING THE USE AND CARE OF THIS PRODUCT.

WARNING	THIS INDICATION ALERTS YOU TO THE FACT THAT IGNORING THE CONTENTS DESCRIBED HEREIN CAN RESULT IN POTENTIAL DEATH OR SERIOUS INJURY.
NOTICE	This indication alerts you to the fact that ignoring the contents described herein may negatively affect product performance and functionality.
CAUTION	This indication alerts you to the fact that ignoring the contents described herein can result in potential injury.

NOTICE

IF INSTALLING THIS PRODUCT FOR ANOTHER PARTY, PLEASE MAKE SURE THEY RECEIVE THIS COPY OF THE INSTALLATION INSTRUCTIONS SO THEY ARE AWARE OF THE IMPORTANT INFORMATION CONTAINED IN THEM.

TOOLS SUGGESTED

Set of Hex Wrenches, Combination Wrenches, Torx Sockets, Spring Clip Tool

STRICTLY OBSERVE THE FOLLOWING GUIDELINES IN ORDER TO USE THE PRODUCT PROPERLY AND AVOID POTENTIALLY DANGEROUS ACCIDENTS.

STEP 1 Read and understand all steps in the instructions before starting the installation. Park the motorcycle on a hard, level surface and turn off the ignition. Let cool.

WARNING

YOU WILL BE WORKING AROUND THE ENGINE AND EXHAUST SYSTEM DURING INSTALLATION. ENSURE THAT THE ENGINE AND EXHAUST SYSTEM HAVE FULLY COOLED TO PREVENT INJURY.

-cont.-

4374-22HD-0613

CUSTOMER SERVICE

877.370.3604 (toll free)

INSTALLATION QUESTIONS

techsupport@kuryakyn.com
or call 715.247.2983

LIMITED WARRANTY

Küryakyn warrants that any Küryakyn products sold hereunder, shall be free of defects in materials and workmanship for a period of one (1) year from the date of purchase by the consumer excepting the following provisions:

- Küryakyn shall have no obligation in the event the customer is unable to provide a receipt showing the date the customer purchased the product(s).
 - The product must be properly installed, maintained and operated under normal conditions.
 - Küryakyn makes no warranty, expressed or implied, with respect to any gold plated products.
 - Küryakyn shall not be liable for any consequential and incidental damages, including labor and paint, resulting from failure of a Küryakyn product, failure to deliver, delay in delivery, delivery in nonconforming condition, or for any breach of contract or duty between Küryakyn and a customer.
- Küryakyn products are often intended for use in specific applications. Küryakyn makes no warranty if a Küryakyn product is used in applications other than intended.
- Küryakyn electrical products are warranted for one (1) year from the date of purchase by the consumer. L.E.D.'S contained in components of Küryakyn products will be warranted for defects in materials and workmanship for 3 years from the date of purchase where as all other components shall be warranted for one(1) year. This includes, but is not limited to; control modules, wiring, chrome & other components.
- Küryakyn makes no warranty of any kind in regard to other manufacturer's products distributed by Küryakyn. Küryakyn will pass on all warranties made by the manufacturer and where possible, will expedite the claim on behalf of the customer, but ultimately, responsibility for disposition of the warranty claim lies with the manufacturer.

ABOUT OUR CATALOG

For purchasing Küryakyn® products, you can receive a complete catalog free of charge. Send the Proof-of-Purchase below with your address to: Küryakyn, P.O. Box 339, Somerset, WI 54025. Please indicate either Accessories Catalog for Harley-Davidson® or GL & Metric Cruisers.

Be sure to ask your local dealer about other Küryakyn® products, the motorcycle parts and accessories designed for riders by riders.

©2005 Küryakyn USA® All Rights reserved.

kuryakyn.com



NOTE: Will not fit with Küryakyn Boomerang Covers—P/N's 7851, 8233, 8235, 8188 or Swingarm Pivot Covers P/N 7849.

STEP 2 Remove the stock passenger footrest brackets and hardware.

STEP 3 As shown in PIC 1, assemble the mount bracket and one splined arm. Mate the hex surfaces together. Insert one of the supplied 3/8"-16 x 3-1/2" Socket Head Cap Screws through the assembly and into the threaded hole in the frame.

NOTE: The splined arm can be rotated in the hex cut-out to fine-tune the position of the board mount.

NOTE: The mount bracket can be flipped front-to-back to further fine tune the position of the board Mount.




STEP 4 Regarding the installation of the bag mount brackets:

- For Heritage Models with OEM saddlebags (as shown in PIC 2), install one supplied bag mount bracket to the bolt installed in Step 3 and secure with a supplied 3/8" nylock nut.
- For other models without OEM H-D saddlebags, install a supplied 3/8" nylock nut to the bolt installed in Step 3.

STEP 5 To secure the saddlebag supports (Heritage with OEM saddlebags only), install one supplied 3/8-16 x 1" Socket Head Cap Screws through the stock bracket and in to the bag mount bracket from Step 4. Secure with a supplied 3/8" nylock nut.

STEP 6 Follow Steps 2-5 for the opposite side.

STEP 7 Tighten all fasteners securely.

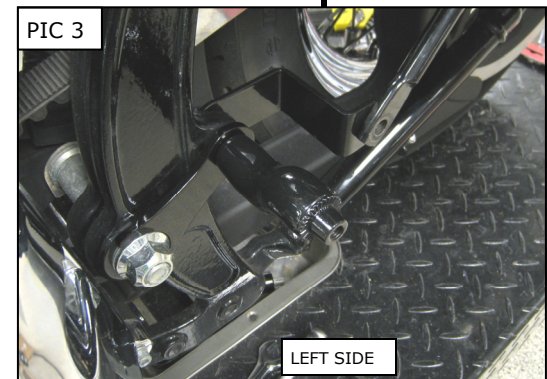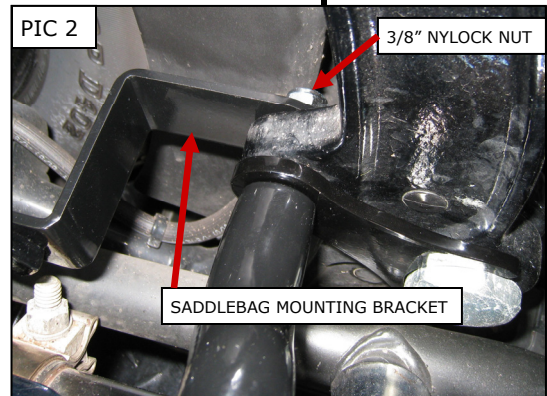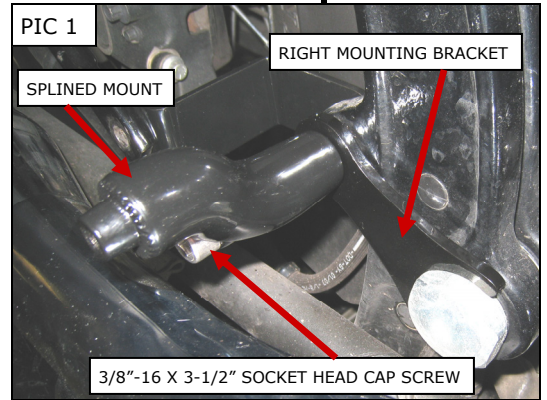

CAUTION Check the tightness of all mounting fasteners after each of the first several uses.

NOTICE It is the installer's responsibility to ensure that all of the fasteners (including pre-assembled) are tightened before operation of the motorcycle. Küryakyn will not provide warranty coverage on products or components lost due to improper installation or lack of maintenance. Periodic inspection and maintenance are required on all fasteners.