



INSTALLATION

ERGO GUARDS FOR VTX 1300

4587

FITS: ALL '03-UP VTX 1300 MODELS

NOTE: NOT INTENDED FOR USE WITH KURYAKYN CRUISE PEG MOUNTS (P/N 4519)

PARTS INCLUDED

- 1 Ergo Guard Assembly, Right
- 1 Ergo Guard Assembly, Left
- 1 Hardware Kit, Including:
 - 2 M10 x 1.25 x 70mm Hex Flange Head, Chrome
 - 4 M10 x 1.25 x 60mm Hex Flange Head, Chrome
- 1 Installation Instructions

Please read and understand entire instructions before starting installation.

THANK YOU FOR CHOOSING KURYAKYN!

IN ORDER TO PROTECT YOU AND OTHERS FROM POSSIBLE INJURY AND/OR PROPERTY DAMAGE OR LOSS, PLEASE PAY CLOSE ATTENTION TO ALL INSTRUCTIONS, WARNINGS, CAUTIONS AND ATTENTION NOTES REGARDING THE USE AND CARE OF THIS PRODUCT.

WARNING! THIS INDICATION ALERTS YOU TO THE FACT THAT IGNORING THE CONTENTS DESCRIBED HEREIN CAN RESULT IN POTENTIAL DEATH OR SERIOUS INJURY.

ATTENTION! This indication alerts you to the fact that ignoring the contents described herein may negatively affect product performance and functionality.

TOOLS SUGGESTED

Set of hex wrenches, combination wrenches or socket set with a ratchet.

STRICTLY OBSERVE THE FOLLOWING GUIDELINES IN ORDER TO USE THE PRODUCT PROPERLY AND AVOID POTENTIALLY DANGEROUS ACCIDENTS.

RIGHT SIDE PROCEDURE

STEP 1 Park the motorcycle on a hard, level surface; turn off the ignition and allow the engine to cool.

WARNING! YOU WILL BE WORKING AROUND THE ENGINE AND EXHAUST SYSTEM DURING INSTALLATION. ENSURE THAT THE ENGINE AND EXHAUST SYSTEM HAVE FULLY COOLED TO PREVENT INJURY.

ATTENTION! Check clearance for proper operation of controls. Ergo guards provide additional positions to place your feet/new-riding positions. Confirm clearance and relation of the position of your feet to the shifter and brake pedals.

-cont.-

CUSTOMER SERVICE

877.370.3604 (toll free)

INSTALLATION QUESTIONS

techsupport@kuryakyn.com
or call 715.247.2983

LIMITED WARRANTY

Kuryakyn warrants that any Kuryakyn products sold hereunder, shall be free of defects in materials and workmanship for a period of one (1) year from the date of purchase by the consumer excepting the following provisions:

· Kuryakyn shall have no obligation in the event the customer is unable to provide a receipt showing the date the customer purchased the product(s).

· The product must be properly installed, maintained and operated under normal conditions.

· Kuryakyn makes no warranty, expressed or implied, with respect to any gold plated products.

· Kuryakyn shall not be liable for any consequential and incidental damages, including labor and paint, resulting from failure of a Kuryakyn product, failure to deliver, delay in delivery, delivery in nonconforming condition, or for any breach of contract or duty between Kuryakyn and a customer.

· Kuryakyn products are often intended for use in specific applications. Kuryakyn makes no warranty if a Kuryakyn product is used in applications other than intended.

· Kuryakyn electrical products are warranted for one (1) year from the date of purchase by the consumer. Components of Kuryakyn products containing L.E.D.s will be warranted for defects in materials and workmanship for 3 years from the date of purchase.

· Kuryakyn makes no warranty of any kind in regard to other manufacturer's products distributed by Kuryakyn. Kuryakyn will pass on all warranties made by the manufacturer and where possible, will expedite the claim on behalf of the customer, but ultimately, responsibility for disposition of the warranty claim lies with the manufacturer.

ABOUT OUR CATALOG

You'll find all our innovations for H-D, GL and Metric Cruisers in our annual catalogs. Order online today—select the "CATALOGS" icon. Each Kuryakyn product comes with a Proof-of-Purchase good for a complimentary catalog. Details in packaging.

Be sure to ask your local dealer about other Kuryakyn products, the motorcycle parts and accessories designed for riders by riders.

©2005 Kuryakyn USA All Rights reserved.



STEP 2 Remove the fasteners securing the footrests to the frame; they will not be used again. (See [PIC.1](#) for location.)

STEP 3 Using the M10 x 1.25 x 70mm bolt (the additional 60mm bolt may be used on the right side of the mounting bracket, it is the same thickness as the left side bracket), install ergo guard on the outside of the forward controls mounting bracket. (See [PIC.2](#).)

LEFT SIDE PROCEDURE

STEP 1 Remove the bolts securing the footrests to the frame; they will not be used again.

STEP 2 Using the M10 x 1.25 x 60mm bolts install the ergo guard on the outside of forward controls mounting bracket, shown in [PIC.3](#).

ATTENTION! It is the installers responsibility to ensure that all of fasteners (including pre-assembled) are tightened before operation of the motorcycle. Küryakyn will not warranty components lost due to improper installation. Periodic maintenance may be required.

STEP 3 Adjustments can be made by adjusting the Socket Head Caps Screws on the end of the pegs (see [PIC.4](#)) to control the angle of the peg when it is folded out.


WARNING! ENSURE THAT THERE IS PROPER CLEARANCE FOR YOUR FEET TO OPERATE THE FORWARD CONTROLS (BRAKE AND SHIFTER.)

WARNING! THE ADDITION OF ERGO GUARDS MAY AFFECT CORNERING CLEARANCE IN SOME SITUATIONS.

WARNING! IMPROPER INSTALLATION OR USE OF THIS PRODUCT MAY RESULT IN SERIOUS INJURY OR DEATH.

Ride On!

PIC.1

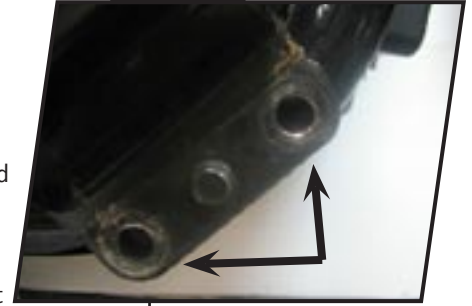

PIC.2



PIC.3



PIC.4

