

INSTALLATION INSTRUCTIONS

FIXED MOUNTS FOR FAT BOY AND BREAKOUT

7081

THANK YOU FOR CHOOSING KURYAKYN!

Protect yourself and others from possible injury and property damage or loss. Pay close attention to all instructions, warnings, cautions, and notices regarding the installation, use, and care of this product.

⚠ WARNING THIS INDICATION ALERTS YOU TO THE FACT THAT IGNORING THE CONTENTS DESCRIBED HEREIN CAN RESULT IN POTENTIAL DEATH OR SERIOUS INJURY.

⚠ CAUTION THIS INDICATION ALERTS YOU TO THE FACT THAT IGNORING THE CONTENTS DESCRIBED HEREIN CAN RESULT IN MINOR OR MODERATE POTENTIAL INJURY.

NOTICE THIS INDICATION ALERTS YOU TO THE FACT THAT IGNORING THE CONTENTS DESCRIBED HEREIN MAY NEGATIVELY AFFECT PRODUCT PERFORMANCE AND FUNCTIONALITY OR DAMAGE THE PRODUCT ITSELF OR THE PRODUCT TO WHICH IT IS BEING ATTACHED.

ENSURE THAT THE FOLLOWING PARTS HAVE BEEN INCLUDED IN THE KIT:

- | | | | |
|---|--------------------------|---|--|
| 1 | Left (Clutch-Side) Mount | 2 | Rear Spacer (thicker) |
| 1 | Right (Brake-Side) Mount | 2 | Front Spacer (thinner) |
| | | 4 | 3/8-16 X 1-1/2" Button Socket Cap Screws |

YOU WILL ALSO NEED:

Hex bit set, ft-lbs (Nm) torque wrench, blue loctite

NOTICE


THESE INSTALLATION INSTRUCTIONS CONTAIN IMPORTANT INFORMATION. ENSURE THE END USER RECEIVES THIS COPY AND IS AWARE OF ITS IMPORTANCE FOR FUTURE USE.

- STEP 1** Read and understand all steps in the instructions before starting the installation. Park the motorcycle on a hard, level surface and turn off the ignition. Let motorcycle cool.

THIS FIXED MOUNT KIT IS INTENDED TO BE USED WITH MULTI-PURPOSE BACKREST (P/N 1660 OR 1661 - SOLD SEPARATELY).

- STEP 2** Refer to PIC 2. Working on one side of the motorcycle at a time, remove rear fender support hardware. Set hardware aside, it will **not** be reused.


- STEP 3** Refer to PIC 3. Locate provided one (1) Front Spacer and one (1) Rear Spacer. Remove the adhesive backer from the backside of the spacers. Align and place the rear spacer in the rear mounting hole of the fender support, and the front spacer on the front mounting hole of the fender support.

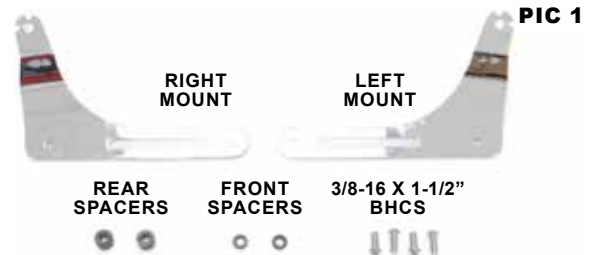

PIC 2



PIC 3

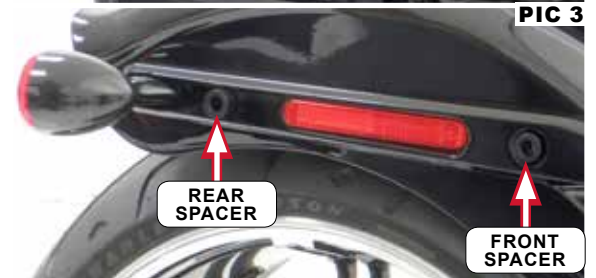

KURYAKYN.COM

INSTALLATION INSTRUCTIONS

FIXED MOUNTS FOR FAT BOY AND BREAKOUT

7081

-CONTINUED-

STEP 4 Locate Right (brake-side) Mount.

PIC 4

STEP 5 Refer to PIC 4. Locate provided two (2) 3/8-16 X 1-1/2" Button Socket Cap Screws. Apply a small amount of blue loctite to each screw. Align and place the Right Mount with the rear fender support. Secure mount in place with the provided screws. Fully tighten hardware.



TORQUE VALUE FOR REAR FENDER SUPPORT SCREW:
12-18 ft-lbs (16.3-24.4 Nm)

STEP 6 Refer to PIC 5. Repeat steps 2 through 5 for the left (clutch) side.

PIC 5



STEP 7 Locate Multi-Purpose Backrest (P/N 1660 or 1661 - sold separately). Test fit the backrest between the fixed mounts. The Backrest should slide easily between the fixed mounts.

STEP 8 Refer to PIC 6 through 8. Install the backrest to the Fixed Mounts by inserting one of the supplied (with the backrest) 5/16"-18 X 7/8" countersunk socket head cap screws through one of the supplied shoulder washers, through the Fixed Mount and threading it to the Driver/Passenger Backrest on each side. Fully tighten hardware. If these fasteners are loosened or removed, see **WARNING!** below.

PIC 6

PIC 7



TORQUE VALUE FOR BACKREST SCREWS:
15 FT-LBS (20.34 NM)

WARNING

BOTH PIVOT/HINGE SCREWS MUST HAVE THREAD LOCK COMPOUND RE-APPLIED AND RE-TORQUED ONCE REMOVED, AFTER INITIAL INSTALLATION. FAILURE TO DO SO MAY RESULT IN UNINTENDED LOOSENING AND MAY CAUSE SERIOUS INJURY OR DEATH. THE FEMALE THREADS IN THE MULTI-PURPOSE BACKREST AND THE THREADS ON THE REMOVED SCREWS WILL NEED TO BE CLEANED TO REMOVE ANY THREAD LOCK RESIDUE BEFORE RE-INSERTING. RE-APPLY LOCTITE® THREAD LOCK BLUE 242® OR EQUIVALENT, AS SHOWN IN PIC 9, RE-TORQUING TO 15 ft-lbs (20.3 Nm) USING A TORQUE WRENCH AND 3/16" ALLEN/HEX KEY ATTACHMENT. LET CURE PER THE THREAD LOCK MANUFACTURERS INSTRUCTIONS AFTER INSTALLATION. IF YOU DO NOT WISH TO APPLY THREAD LOCK, THEN ORDER A NEW SERVICE KIT, (P/N 991660) WHICH WILL CONTAIN SCREWS WITH BLUE THREAD LOCK ADHESIVE PRE-APPLIED.



INSTALLATION INSTRUCTIONS

FIXED MOUNTS FOR FAT BOY AND BREAKOUT

7081

-CONTINUED-

STEP 9 Refer to PIC 10 and 11. Check the operation of the Backrest by folding the locking levers to the straight out position. Lower or raise the backrest to the desired location. Fold the locking levers over to lock them in place. Gently rock the Backrest back and forth to ensure the locking pins are engaged in the notches in the Fixed Mounts. Repeat for the other position of the Backrest. Visually inspect the Shoulder Washers and Countersunk Socket Head Cap Screws at the pivot point for any signs of loosening before each ride. Kuryakyn requires checking all backrest attaching fasteners to the torque specifications defined in these instructions every 3,000 to 5,000 miles.

Note: See instructions for Multi-Purpose Driver/Passenger Backrest, P/N 1660 or P/N 1661, for adjustment procedures.

WARNING THIS BACKREST IS NOT DESIGNED AS A SAFETY RESTRAINING DEVICE. FAILURE TO HOLD ONTO THE MOTORCYCLE MAY RESULT IN SERIOUS INJURY OR DEATH.


CAUTION ENSURE THAT THE INSTALLATION OF THIS PRODUCT DOES NOT INTERFERE WITH THE PROPER OPERATION OF THE MOTORCYCLE BEFORE RIDING.

NOTICE IT IS THE INSTALLER'S RESPONSIBILITY TO ENSURE THAT ALL OF THE FASTENERS (INCLUDING PRE-ASSEMBLED) ARE TIGHTENED BEFORE OPERATION OF THE MOTORCYCLE. KURYAKYN WILL NOT PROVIDE WARRANTY COVERAGE ON PRODUCTS OR COMPONENTS LOST DUE TO IMPROPER INSTALLATION OR LACK OF MAINTENANCE. PERIODIC INSPECTION AND MAINTENANCE ARE REQUIRED ON ALL FASTENERS.



APPLY THREAD
LOCK TO SCREW

PIC 9

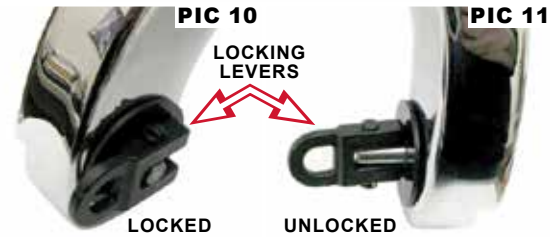

PIC 10

PIC 11

FINAL



INSTALLATION INSTRUCTIONS

FIXED MOUNTS FOR FAT BOY AND BREAKOUT

7081

-CONTINUED-

LIMITED WARRANTY

Kuryakyn warrants that any Kuryakyn products sold hereunder, shall be free of defects in materials & workmanship for a period of one (1) year from the date of purchase by the consumer excepting the following provisions:

1. Kuryakyn shall have no obligation in the event the customer is unable to provide a receipt showing the date the customer purchased the product(s).
2. The product must be properly installed, maintained & operated under normal conditions.
3. Kuryakyn shall not be liable for any consequential & incidental damages, including labor & paint, resulting from failure of a Kuryakyn product, failure to deliver, delay in delivery, delivery in nonconforming condition, or for any breach of contract or duty between Kuryakyn & a customer.
4. Kuryakyn products are often intended for use in specific applications. Kuryakyn makes no warranty if a Kuryakyn product is used in applications other than intended.
5. Kuryakyn electrical products are warranted for one (1) year from the date of purchase by the consumer. L.E.D.'s contained in components of Kuryakyn products will be warranted for defects in materials & workmanship for 3 years from the date of purchase whereas all other components shall be warranted for one (1) year.
6. All warranty claims must be directed to the place of purchase. Merchandise sold through internet auction sites or any other unauthorized reseller shall not carry a Kuryakyn warranty. If unsure, please contact the place of purchase to verify they are an authorized Kuryakyn reseller.

RETURN POLICY

Merchandise determined to be defective may be returned up to one year from the date of purchase. Returns must be processed through original seller. Returned merchandise for any other reason other than warranty claims must be in like new condition & subject to a 20% restocking fee. All returns are subject to inspection for determination of full or partial credit. Any returned part that shows evidence of being used or installed contrary to manufacturer's instructions, &/or subjected to improper handling, packaging or return shipping by the customer, will not be eligible for exchange, refund or warranty consideration. All returned electrical items will be inspected & tested. If electrical item is deemed functional, no credit will be issued & item will be returned. All sales are final on discontinued or closeout merchandise.

©2015 KURYAKYN HOLDINGS, LLC ALL RIGHTS RESERVED

KURYAKYN, KURYAKYN K logo and the marks appearing on this instruction sheet are registered and common law trademarks of Kuryakyn Holdings except noted third-party trademarks. A full listing of trademarks and trademark registrations owned by Kuryakyn Holdings can be found at www.kuryakyn.com/legal-notice.

Emissions Notice: The California Air Resources Board (CARB) does not permit the use of aftermarket emission-related parts(s) that alter the performance of OEM emission-related devices unless CARB has issued an Executive Order, other than on racing vehicles on closed courses. Check your local laws and manufacturer's information.

Listed Manufacturers and product model names are for reference only. All product and company names are trademarks or registered trademarks of their respective holders. Use of them does not imply any affiliation with or endorsement by them. All specifications are subject to change without notice.

For additional information on third-party product and company names, please consult our Web page at www.kuryakyn.com/legal-notice