



LOWER LEG DEFLECTOR SHIELDS/BOSS COVER

7212

PARTS INCLUDED

- 1 Right Lower Deflector Shield
- 1 Left Lower Deflector Shield
- 2 Fender Boss Covers
- 2 Alcohol Pads
- 1 Installation Instructions

Please read and understand entire instructions before starting installation.

THANK YOU FOR CHOOSING KÜRYAKYN!

IN ORDER TO PROTECT YOU AND OTHERS FROM POSSIBLE INJURY AND/OR PROPERTY DAMAGE OR LOSS, PLEASE PAY CLOSE ATTENTION TO ALL INSTRUCTIONS, WARNINGS, CAUTIONS AND ATTENTION NOTES REGARDING THE USE AND CARE OF THIS PRODUCT.

ATTENTION! This indication alerts you to the fact that ignoring the contents described herein may negatively affect product performance and functionality.

TOOLS SUGGESTED

Cleaning Rag, Cleaning Supplies


STRICTLY OBSERVE THE FOLLOWING GUIDELINES IN ORDER TO USE THE PRODUCT PROPERLY AND AVOID POTENTIALLY DANGEROUS ACCIDENTS.

STEP 1 Read and understand all steps in the instructions before starting the installation. Park the motorcycle on a hard, level surface and turn off the ignition.

STEP 2 As shown in PIC 1, locate the left and right side (sitting on the bike) Lower Leg Deflectors.

STEP 3 Clean the mounting area on the lower fork tubes thoroughly. PIC 2 If they are extremely dirty, clean the mounting area with a mild soap and warm water. Make sure that the mounting area is clear of any contaminants to ensure proper adhesion. Rinse and dry the area with clean water and dry completely.

ATTENTION! Ensure the area of installation is free of grease, oil, dirt or other debris to ensure proper adhesion. Kuryakyn WILL NOT issue a warranty on any parts lost due to improper installation.

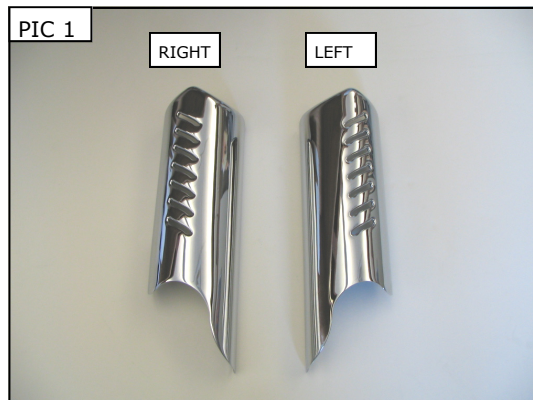

CUSTOMER SERVICE

877.370.3604 (toll free)

INSTALLATION QUESTIONS

techsupport@kuryakyn.com
or call 715.247.2983

LIMITED WARRANTY

Kuryakyn warrants that any Kuryakyn products sold hereunder, shall be free of defects in materials and workmanship for a period of one (1) year from the date of purchase by the consumer excepting the following provisions:

- Kuryakyn shall have no obligation in the event the customer is unable to provide a receipt showing the date the customer purchased the product(s).
 - The product must be properly installed, maintained and operated under normal conditions.
 - Kuryakyn makes no warranty, expressed or implied, with respect to any gold plated products.
 - Kuryakyn shall not be liable for any consequential and incidental damages, including labor and paint, resulting from failure of a Kuryakyn product, failure to deliver, delay in delivery, delivery in nonconforming condition, or for any breach of contract or duty between Kuryakyn and a customer.
- Kuryakyn products are often intended for use in specific applications. Kuryakyn makes no warranty if a Kuryakyn product is used in applications other than intended.
- Kuryakyn electrical products are warranted for one (1) year from the date of purchase by the consumer. L.E.D.'S contained in components of Kuryakyn products will be warranted for defects in materials and workmanship for 3 years from the date of purchase where as all other components shall be warranted for one(1) year. This includes, but is not limited to; control modules, wiring, chrome & other components.
- Kuryakyn makes no warranty of any kind in regard to other manufacturer's products distributed by Kuryakyn. Kuryakyn will pass on all warranties made by the manufacturer and where possible, will expedite the claim on behalf of the customer, but ultimately, responsibility for disposition of the warranty claim lies with the manufacturer.

ABOUT OUR CATALOG

For purchasing Kuryakyn® products, you can receive a complete catalog free of charge. Send the Proof-of-Purchase below with your address to: Kuryakyn, P.O. Box 339, Somerset, WI 54025. Please indicate either Accessories Catalog for Harley-Davidson® or GL & Metric Cruisers.

Be sure to ask your local dealer about other Kuryakyn® products, the motorcycle parts and accessories designed for riders by riders.

©2005 Kuryakyn USA® All Rights reserved.



STEP 4 Clean the mounting area with the supplied alcohol pad to remove any residue and wipe dry with a clean cloth.

NOTE: Gently spread the Fender Boss Cover when fitting to the fork to prevent scratching the fork leg. You may want to apply some masking tape to the edges of the Fender Boss cover to prevent any scratching or marring of the fork leg. Make sure to center the holes in the Fender Boss Cover over the fender bolts to ease fender removal.

STEP 5 As shown in PIC 3, test fit the Fender Boss Cover to the fender boss area of the fork tubes. Using masking tape, mark the area of best fit to aid in final installation.

ATTENTION! The adhesive will not bond correctly if applied at temperatures less than 50°F. Do not attempt this installation in temperatures less than 50°F.

CAUTION! It is the installer's responsibility to ensure that there is adequate clearance between the Fender Boss Cover and any painted surfaces. Küryakyn is not responsible for any damage due to inadequate clearance.

STEP 6 Rub the adhesive backing on the Fender Boss Cover to activate the adhesive. Make sure to center the holes in the Fender Boss Cover over the fender bolts. Remove the adhesive backing and apply the Fender Boss Cover to the fender boss. Hold them in place for one minute, full bonding strength will occur in 24 hours.

STEP 7 As shown in PIC 4, test fit the Leg Deflectors to the lower section of the fork tubes. Using masking tape, mark the area of best fit to aid in final installation. The top of the Deflector Shield will mount over the Fender Boss Cover.

ATTENTION! Ensure the area of installation is free of grease, oil, dirt or other debris to ensure proper adhesion. Küryakyn WILL NOT issue a warranty on any parts lost due to improper installation.

ATTENTION! The adhesive will not bond correctly if applied at temperatures less than 50°F. Do not attempt this installation in temperatures less than 50°F.

STEP 8 Rub the adhesive backing on the Leg Deflectors to activate the adhesive. Remove the adhesive backing and apply the Leg Deflectors to the lower fork tubes. Hold them in place for one minute, full bonding strength will occur in 24 hours.

NOTE: The Lower Leg Deflectors can be installed with the lower fork tube reflectors installed or removed.

