



INSTALLATION

RUN-TURN EDGE ACCENT

7266

PARTS INCLUDED

- 1 Right Run-Turn Edge Accent Assembly for FLHT/FLHX
- 1 Left Run-Turn Edge Accent Assembly for FLHT/FLHX
- 1 Wiring Kit Including
 - 1 3 Wire 6 Pin Adapter—**For 05 and Earlier**
 - 2 Turn Signal Wiring Harness Adapters (four pin)—**For '06-Later**
 - 2 Alcohol Pads
- 1 Installation Instructions

Please read and understand entire instructions before starting installation.

THANK YOU FOR CHOOSING KÜRYAKYN!

IN ORDER TO PROTECT YOU AND OTHERS FROM POSSIBLE INJURY AND/OR PROPERTY DAMAGE OR LOSS, PLEASE PAY CLOSE ATTENTION TO ALL INSTRUCTIONS, WARNINGS, CAUTIONS AND NOTICES REGARDING THE USE AND CARE OF THIS PRODUCT.

WARNING

THIS INDICATION ALERTS YOU TO THE FACT THAT IGNORING THE CONTENTS DESCRIBED HEREIN CAN RESULT IN POTENTIAL DEATH OR SERIOUS INJURY.

NOTICE

This indication alerts you to the fact that ignoring the contents described herein may negatively affect product performance and functionality.

NOTICE

IF INSTALLING THIS PRODUCT FOR ANOTHER PARTY, PLEASE MAKE SURE THEY RECEIVE THIS COPY OF THE INSTALLATION INSTRUCTIONS SO THEY ARE AWARE OF THE IMPORTANT INFORMATION CONTAINED IN THEM.

TOOLS SUGGESTED

Set of Hex Wrenches, Torx Drivers-Bits or Sockets, Combination Wrenches, Test Light

STRICTLY OBSERVE THE FOLLOWING GUIDELINES IN ORDER TO USE THE PRODUCT PROPERLY AND AVOID POTENTIALLY DANGEROUS ACCIDENTS.

STEP 1

Read and understand all steps in the instructions before starting the installation. Park the motorcycle on a hard, level surface and turn off the ignition.

NOTICE

A factory service manual may be helpful in performing this installation. Do not attempt to perform this installation if you are not confident in your ability to complete all of the steps in the procedure; consult a trained technician

STEP 2

Remove any grease or debris from the inner fairing where the Run-Turn Accent light will be mounted with soapy water and a clean rag; allow the area to dry completely. Clean the area with the included alcohol cleaning pad to remove any residue; allow the area to dry completely.

-cont.-

7266-21HD-0712



CUSTOMER SERVICE

877.370.3604 (toll free)

INSTALLATION QUESTIONS

techsupport@kuryakyn.com
or call 715.247.2983

LIMITED WARRANTY

Küryakyn warrants that any Küryakyn products sold hereunder, shall be free of defects in materials and workmanship for a period of one (1) year from the date of purchase by the consumer excepting the following provisions:

- Küryakyn shall have no obligation in the event the customer is unable to provide a receipt showing the date the customer purchased the product(s).
 - The product must be properly installed, maintained and operated under normal conditions.
 - Küryakyn makes no warranty, expressed or implied, with respect to any gold plated products.
 - Küryakyn shall not be liable for any consequential and incidental damages, including labor and paint, resulting from failure of a Küryakyn product, failure to deliver, delay in delivery, delivery in nonconforming condition, or for any breach of contract or duty between Küryakyn and a customer.
- Küryakyn products are often intended for use in specific applications. Küryakyn makes no warranty if a Küryakyn product is used in applications other than intended.
- Küryakyn electrical products are warranted for one (1) year from the date of purchase by the consumer. L.E.D.'S contained in components of Küryakyn products will be warranted for defects in materials and workmanship for 3 years from the date of purchase where as all other components shall be warranted for one(1) year. This includes, but is not limited to; control modules, wiring, chrome & other components.

- Küryakyn makes no warranty of any kind in regard to other manufacturer's products distributed by Küryakyn. Küryakyn will pass on all warranties made by the manufacturer and where possible, will expedite the claim on behalf of the customer, but ultimately, responsibility for disposition of the warranty claim lies with the manufacturer.

ABOUT OUR CATALOG

For purchasing Küryakyn® products, you can receive a complete catalog free of charge. Send the Proof-of-Purchase below with your address to: Küryakyn, P.O. Box 339, Somerset, WI 54025. Please indicate either Accessories Catalog for Harley-Davidson® or GL & Metric Cruisers.

Be sure to ask your local dealer about other Küryakyn® products, the motorcycle parts and accessories designed for riders by riders.

©2005 Küryakyn USA® All Rights reserved.

kuryakyn.com



NOTICE


Ensure the area of installation is free of grease, oil, dirt or other debris including wax/polish products and bugs to ensure proper adhesion. Küryakyn WILL NOT issue a warranty on any parts lost due to improper installation.

NOTICE

The adhesive may not correctly bond if applied at temperatures less than 50°F. Do not attempt this installation in temperatures less than 50°F.

STEP 3


Hold the Run-Turn Accent light up to the right edge of the inner fairing (the wire should exit from the bottom of the light in the groove in the housing). Move the Accent up or down on the inner fairing to find the best "fit" location. PIC 1 Using a non-permanent marker or masking tape, mark the location for the Accent light on the inner fairing.

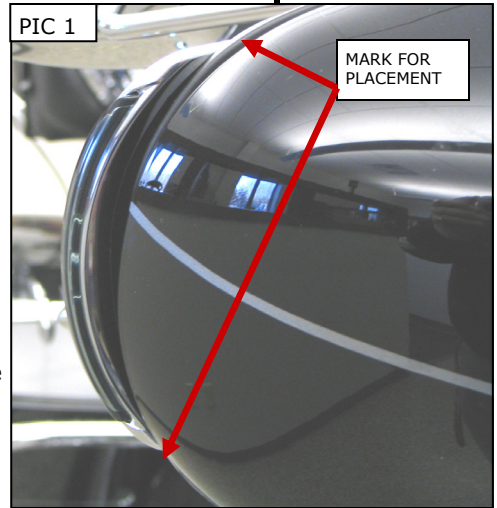

NOTE: As no two inner fairing/outer fairing combinations are exactly the same, there is no exact position that we can designate, but there is a "sweet spot" on the inner fairing that the Accent light will locate in, to mount correctly.

STEP 4

Using a non-permanent marker or masking tape, mark the location for the Accent light on the inner fairing. Remove the Accent light and rub the backing on the adhesive strip to activate the adhesive before applying. Remove the adhesive backing. Press the Accent light into place for 1 minute to ensure proper adhesion. Full bond strength will occur within 24 hours.

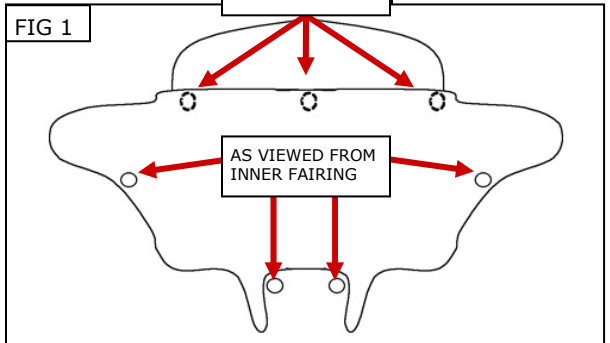

STEP 5

Remove the three Torx screws securing the windscreen to the fairing; set them aside, they will be re-used. FIG 1 Remove the windshield.

STEP 6


Remove the four Torx screws securing the outer fairing to the inner fairing, disconnect the headlight and remove the outer fairing. FIG 1

NOTICE

Avoid damage to the motorcycle. Protect painted surfaces with a soft cloth or blanket.

NOTICE

Assistance is recommended to hold and support the outer fairing after all of the Torx screws have been removed to prevent damage

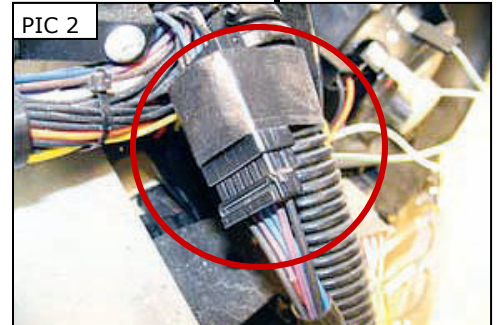

STEP 7

Unplug the headlight connector and gently set the outer fairing on a soft, sturdy surface.

NOTE: STEP 8 and STEP 9 are for '05 and Earlier Models only.

STEP 8

Locate the six pin harness which is generally located on the left hand side of the fairing. PIC 2


-cont.-

STEP 9 Disconnect the harness and plug in the new six pin adapter harness from the hardware kit. The small white connector will be hanging alone. PIC 4

NOTICE Küryakyn recommends the use of dielectric grease on electrical connections.


NOTE: STEP 10 through STEP 13 are for 06-later models only.

STEP 10 Locate and separate the stock right turn signal connector. The connector is located on the inside of the inner fairing. PIC 4 There will be one violet wire, one blue wire, one gray wire and one black wire coming out of the connector.

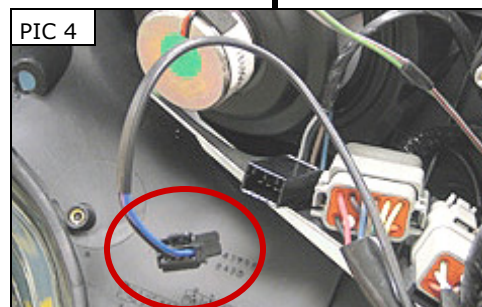

NOTICE Use a test light to verify wire functions before connecting the LED circuit board to non-stock wiring. Küryakyn is not responsible for damage to the LED circuit board caused by non-stock wiring.

STEP 11 Locate the included four pin Wiring Harness Adapter

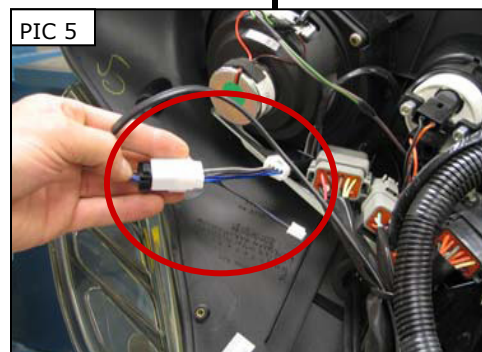


STEP 12 Connect the Wiring Harness Adapter as shown in PIC 5. The white male connector will plug into the stock black female connector. The white female connector will plug into the stock black male connector. The small white connector will be free for now. Place a small amount of dielectric grease directly on the terminals in the connectors.

NOTICE Küryakyn recommends the use of dielectric grease on all electrical connections.

STEP 13 Repeat STEP 8 through STEP 10 for the left side.

STEP 14 Wrap the wire harness from the Accent light over the rubber seal on the inner fairing (PIC 6) and plug the end into the three pin connector on the adapter installed in Steps 9 or 12. Repeat for the other side.

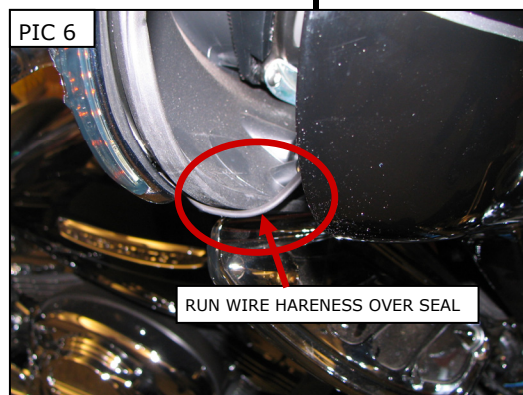

NOTICE Assistance is recommended to hold and support the outer fairing when reinstalling to prevent damage.

STEP 15 Plug in the headlight and reinstall the outer fairing. Test all lights. PIC 6

WARNING ENSURE PROPER LIGHT OPERATION BEFORE RIDING THE MOTORCYCLE. VISIBILITY IS A MAJOR CONCERN FOR MOTORCYCLISTS. A LIGHT MALFUNCTION COULD RESULT IN DEATH OR SERIOUS INJURY.

NOTICE It is the installer's responsibility to ensure that all of the fasteners (including pre-assembled) are tightened before operation of the motorcycle. Küryakyn will not issue a warranty on components lost due to improper installation. Periodic maintenance may be required.