



## SABERTOOTH L.E.D. SADDLEBAG ACCENTS

### 7279

THANK YOU FOR CHOOSING KÜRYAKYN!

**PROTECT YOURSELF AND OTHERS FROM POSSIBLE INJURY AND/OR PROPERTY DAMAGE OR LOSS. PAY CLOSE ATTENTION TO ALL INSTRUCTIONS, WARNINGS, CAUTIONS, AND NOTICES REGARDING THE INSTALLATION, USE, AND CARE OF THIS PRODUCT.**

<b>WARNING</b>	THIS INDICATION ALERTS YOU TO THE FACT THAT IGNORING THE CONTENTS DESCRIBED HEREIN CAN RESULT IN POTENTIAL DEATH OR SERIOUS INJURY.
<b>CAUTION</b>	This indication alerts you to the fact that ignoring the contents described herein can result in minor or moderate potential injury.
<b>NOTICE</b>	This indication alerts you to the fact that ignoring the contents described herein may negatively affect product performance and functionality or damage the product itself or the product to which it is being attached.

**MAKE SURE THE FOLLOWING PARTS HAVE BEEN INCLUDED IN THE KIT:**

- 1 Left Sabertooth L.E.D. Saddlebag Accent
- 1 Right Sabertooth L.E.D. Saddlebag Accent
- 1 Victory 8-Pin Adapter
- 1 Hardware Kit containing:
  - 2 Alcohol Pads
  - 2 Foam Tape
  - 6 Cable Keepers
  - 2 Dielectric Grease Packs
  - 8 Cable Ties
- 1 Installation Instructions

### TOOLS SUGGESTED:

Warm soapy water and a clean rag, masking tape, and razor knife

### NOTICE

**These installation instructions contain important information. Ensure that the end user receives this copy and is aware of its importance for future reference.**

### NOTICE

**Ensure proper adhesion of this product. Clean the installation area of grease, oil, bugs, dirt and other debris (including wax and polish). Kuryakyn WILL NOT issue a warranty for any improperly installed products.**

**Do not attempt this installation in temperatures below 50° F. Proper adhesive bonding ONLY occurs above 50° F.**

### CUSTOMER SERVICE

877.370.3604 (toll free)

### INSTALLATION QUESTIONS

techsupport@kuryakyn.com  
or call 715.247.2983

### LIMITED WARRANTY

Kuryakyn warrants that any Kuryakyn products sold hereunder, shall be free of defects in materials and workmanship for a period of one (1) year from the date of purchase by the consumer excepting the following provisions:

- Kuryakyn shall have no obligation in the event the customer is unable to provide a receipt showing the date the customer purchased the product(s).
  - The product must be properly installed, maintained and operated under normal conditions.
  - Kuryakyn makes no warranty, expressed or implied, with respect to any gold plated products.
  - Kuryakyn shall not be liable for any consequential and incidental damages, including labor and paint, resulting from failure of a Kuryakyn product, failure to deliver, delay in delivery, delivery in nonconforming condition, or for any breach of contract or duty between Kuryakyn and a customer.
- Kuryakyn products are often intended for use in specific applications. Kuryakyn makes no warranty if a Kuryakyn product is used in applications other than intended.
- Kuryakyn electrical products are warranted for one (1) year from the date of purchase by the consumer. L.E.D.'S contained in components of Kuryakyn products will be warranted for defects in materials and workmanship for 3 years from the date of purchase where as all other components shall be warranted for one(1) year. This includes, but is not limited to; control modules, wiring, chrome & other components.
- Kuryakyn makes no warranty of any kind in regard to other manufacturer's products distributed by Kuryakyn. Kuryakyn will pass on all warranties made by the manufacturer and where possible, will expedite the claim on behalf of the customer, but ultimately, responsibility for disposition of the warranty claim lies with the manufacturer.

### ABOUT OUR CATALOG

For purchasing Kuryakyn® products, you can receive a complete catalog free of charge.

Send the Proof-of-Purchase below with your address to: Kuryakyn  
454 County Road V V  
Somerset, WI 54025-9031  
Please indicate either Accessories Catalog for Harley-Davidson® or GL & Metric Cruisers.


Be sure to ask your local dealer about other Kuryakyn® products, the motorcycle parts and accessories designed for riders by riders.

©2005 Kuryakyn USA® All Rights reserved.




## BIKE PREP:

- STEP 1** Remove both saddlebags from the bike; set them on a soft clean blanket.
- STEP 2** Refer to **PIC 1**. Using warm soapy water and a soft clean rag, remove any grease, oil, dirt, and other debris from the installation areas. Rinse the areas with clean water and allow them to completely dry.
- STEP 3** Using the included alcohol pads, wipe the cleaned areas to remove any wax and polish. Allow the areas to completely dry.

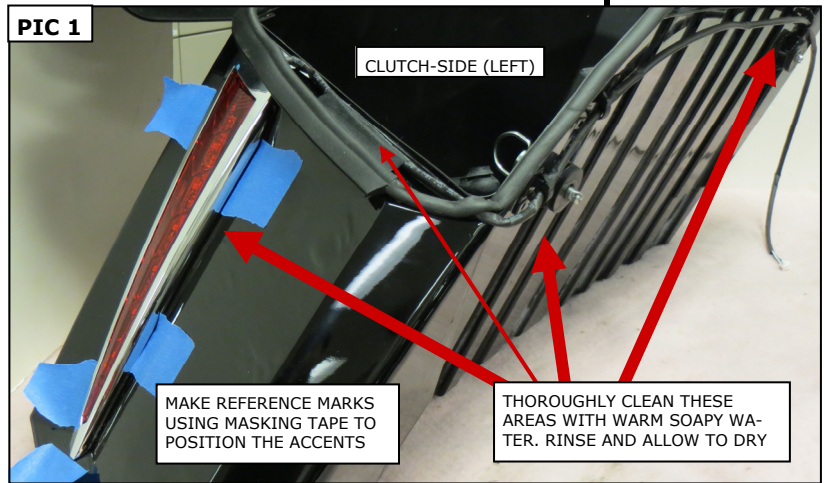


## TEST FIT AND INSTALL THE ACCENTS:

- STEP 4** Refer to **PIC 2**. Determine the clutch-side (left) Accent from the brake-side (right).
- STEP 5** Refer to **PIC 1**. Test fit the clutch-side Accent on the saddlebag. Make reference marks with masking tape to ease installation. Remove the accent.
- STEP 6** Rub the adhesive backing on the back side of the Accent with your fingernail to activate the adhesive.
- STEP 7** Remove the adhesive backing from the Accent. Use the masking tape marks to align the Accent and press it into place for at least one minute. Full bonding will occur in 24 hours. Remove and discard the masking tape.

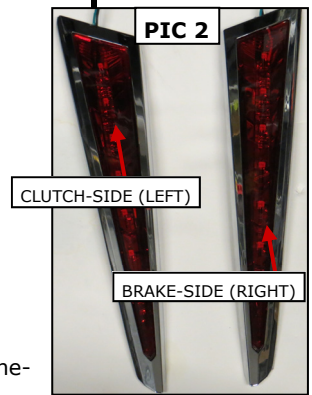

## ROUTE THE WIRES:

- STEP 8** Refer to **PIC 3**. Gently peel 1/2" of the weather stripping up, then cut a 1/4" notch in the rib underneath. Feed the wire under the weather stripping at the notch.
- STEP 9** Refer to **PIC 3**. Peel 1/2" of the weather stripping up at the end of the rib; feed the wiring underneath. Use the included Foam Tape to secure the wiring along the flat ledge of the saddlebag as shown by the yellow arrows.
- STEP 10** Ensure the wiring remains in the notch when secured with the Tape. Press the weather stripping back into place over the wiring.

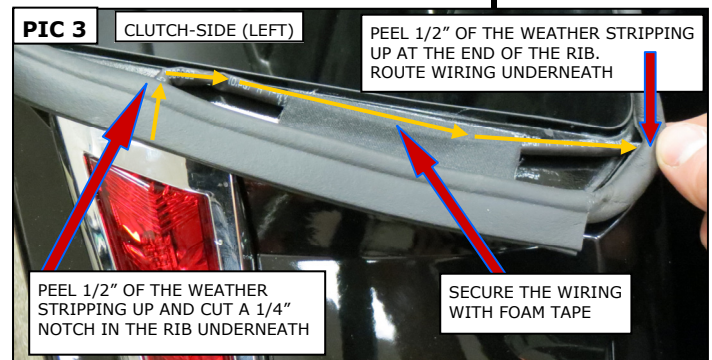


**NOTE:** Close the saddlebag lid. Ensure that the wiring will not get pinched or rub excessively during normal use. Adjust the Foam Tape and wires if necessary.

-cont.-

**STEP 11** Route the wiring along the inboard side of the saddlebag as shown in **PIC 4**. Secure the wiring with the included Cable Keepers. Position the Cable Keepers in the "recesses" of the saddlebag to ensure proper clearance once the saddlebag has been reinstalled.

**STEP 12** Repeat **STEPS 4 through 11** for the other side.


**STEP 13** Reinstall both saddlebags.

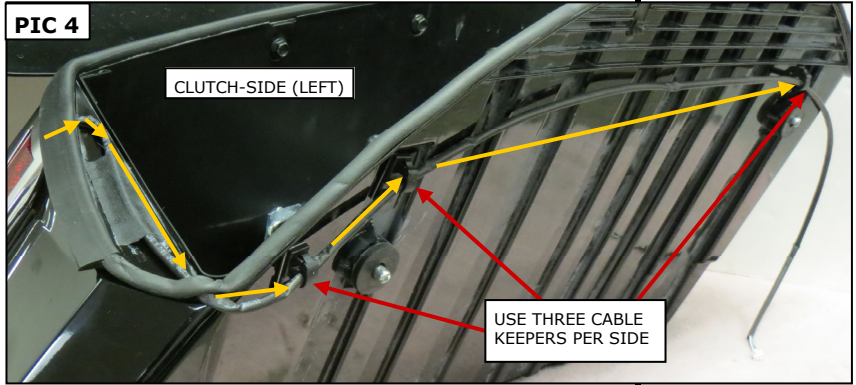

**CONNECT THE WIRING:**

**STEP 14** Carefully remove the seat and left side cover.

**STEP 15** Refer to **PIC 5**. Behind the side cover, locate the 8-pin rear-accessory connector. Remove the rubber cap (or separate the connectors if there are rear accessories installed).

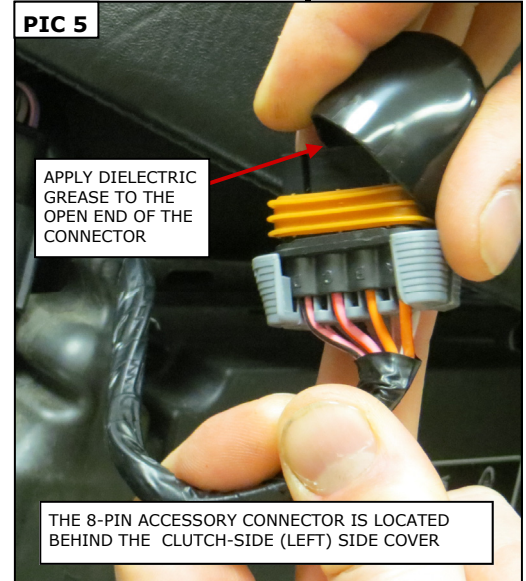


**NOTICE** Kuryakyn recommends the use of the included dielectric grease on ALL electrical connections.

**STEP 16** Refer to **PIC 6**. Apply some Dielectric Grease to the open ends of the included Victory 8-Pin Adapter and rear accessory connector. Connect the Adapter to the accessory connector. If equipped, connect the existing rear accessory plug to the other end. Reinstall the rubber cap (if necessary)

**STEP 17** Refer to **PIC 6**. Apply Dielectric Grease to the 3-pin connectors and connect the wiring from the clutch-side (**left**) Accent to the **SHORT** 3-pin lead coming from the 8 pin adapter.

**STEP 18** Apply Dielectric Grease to the 3-pin connectors and connect the wiring from the brake-side (**right**) Accent to the **LONG** 3-pin lead coming from the 8 pin adapter.

**STEP 19** Turn on the ignition and test for the proper function of all the lights.

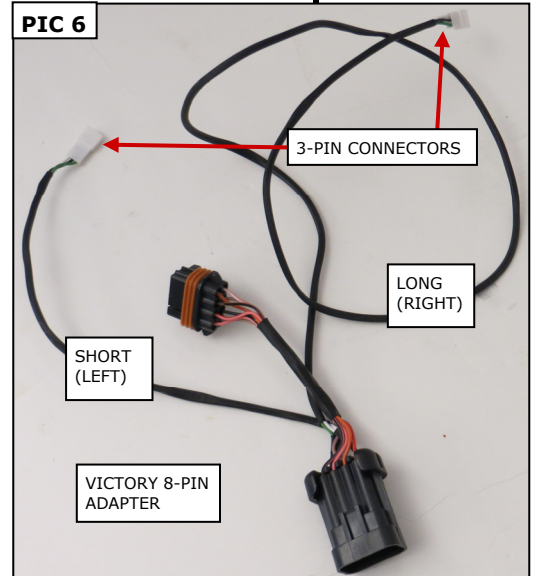

**NOTICE** Secure all wiring away from any moving parts, pinch points or extreme heat. Kuryakyn WILL NOT issue a warranty for any electrical component that fails due to pinched, crimped, broken, abraded, melted or frayed wires.

**STEP 20** Use the included Cable Ties to secure any extra wiring away from heat, pinch points or moving parts.

**STEP 21** Reinstall the side cover, and seat.

**NOTE:** Disconnect both 3-pin connectors when removing the saddlebags.



VISIBILITY IS A **MAJOR** CONCERN FOR MOTORCYCLISTS. A LIGHTING MALFUNCTION COULD RESULT IN DEATH OR SERIOUS INJURY. ENSURE THAT ALL LIGHTS OPERATE PROPERLY **BEFORE** RIDING THE MOTORCYCLE.

*Ride On!*