






INSTALLATION

GLOSS BLACK L.E.D. SADDLEBAG EXTENSIONS – '14-UP H.D.

7293

THANK YOU FOR CHOOSING KÜRYAKYN!

PROTECT YOURSELF AND OTHERS FROM POSSIBLE INJURY AND PROPERTY DAMAGE OR LOSS. PAY CLOSE ATTENTION TO ALL INSTRUCTIONS, WARNINGS, CAUTIONS, AND NOTICES REGARDING THE INSTALLATION, USE, AND CARE OF THIS PRODUCT.

 WARNING	THIS INDICATION ALERTS YOU TO THE FACT THAT IGNORING THE CONTENTS DESCRIBED HEREIN CAN RESULT IN POTENTIAL DEATH OR SERIOUS INJURY.
 CAUTION	This indication alerts you to the fact that ignoring the contents described herein can result in minor or moderate potential injury.
 NOTICE	This indication alerts you to the fact that ignoring the contents described herein may negatively affect product performance and functionality or damage the product itself or the product to which it is being attached.


MAKE SURE THE FOLLOWING PARTS HAVE BEEN INCLUDED IN THE KIT:

- 1 Right Saddlebag Extension
- 1 Left Saddlebag Extension
- 1 Hardware Kit containing:
 - 2 Alcohol Pads
 - 2 Warning Labels
 - 1 Dielectric Grease Pack
 - 6 1/4"-20 X 1" Button Socket Head Screws
 - 12 1/4" Flat Washers
 - 6 1/4" Sealing Washers
 - 6 1/4" Locking Nuts
 - 8 Cord Keepers
 - 2 Bumpers
 - 6 Cable Ties
 - 1 Run-Turn-Brake (Adapter) Wiring Harness – '14-Up
- 1 Installation instructions


CHROME OR BLACK, INSTALLATION IS THE SAME.

TOOLS SUGGESTED:

Set of hex wrenches, set of combination wrenches, drill and drill bits, center punch, warm soapy water and a clean rag, Phillips head screwdriver

 **NOTICE** **These installation instructions contain important information. Ensure that the end user receives this copy and is aware of its importance for future reference.**

STEP 1 Read and understand all steps in the instructions before starting the installation. Park the motorcycle on a hard, level surface and turn off the ignition. Allow the engine and exhaust system to cool.

 **WARNING** **YOU WILL BE WORKING AROUND THE ENGINE AND EXHAUST SYSTEM DURING INSTALLATION. ENSURE THAT THE EXHAUST SYSTEM HAS FULLY COOLED TO PREVENT INJURY.**

CUSTOMER SERVICE

877.370.3604 (toll free)

INSTALLATION QUESTIONS

techsupport@kuryakyn.com
or call 715.247.2983

LIMITED WARRANTY

Kuryakyn warrants that any Kuryakyn products sold hereunder, shall be free of defects in materials and workmanship for a period of one (1) year from the date of purchase by the consumer excepting the following provisions:

- Kuryakyn shall have no obligation in the event the customer is unable to provide a receipt showing the date the customer purchased the product(s).
 - The product must be properly installed, maintained and operated under normal conditions.
 - Kuryakyn makes no warranty, expressed or implied, with respect to any gold plated products.
 - Kuryakyn shall not be liable for any consequential and incidental damages, including labor and paint, resulting from failure of a Kuryakyn product, failure to deliver, delay in delivery, delivery in nonconforming condition, or for any breach of contract or duty between Kuryakyn and a customer.
- Kuryakyn products are often intended for use in specific applications. Kuryakyn makes no warranty if a Kuryakyn product is used in applications other than intended.
- Kuryakyn electrical products are warranted for one (1) year from the date of purchase by the consumer. L.E.D.'S contained in components of Kuryakyn products will be warranted for defects in materials and workmanship for 3 years from the date of purchase where as all other components shall be warranted for one(1) year. This includes, but is not limited to; control modules, wiring, chrome & other components.

• Kuryakyn makes no warranty of any kind in regard to other manufacturer's products distributed by Kuryakyn. Kuryakyn will pass on all warranties made by the manufacturer and where possible, will expedite the claim on behalf of the customer, but ultimately, responsibility for disposition of the warranty claim lies with the manufacturer.

ABOUT OUR CATALOG

For purchasing Kuryakyn® products, you can receive a complete catalog free of charge. Send the Proof-of-Purchase below with your address to: Kuryakyn
454 County Road V V
Somerset, WI 54025-9031
Please indicate either Accessories Catalog for Harley-Davidson® or GL & Metric Cruisers.

Be sure to ask your local dealer about other Kuryakyn® products, the motorcycle parts and accessories designed for riders by riders.

©2005 Kuryakyn USA® All Rights reserved.





kuryakyn.com

NOTICE


Prepare a clean work area before beginning this installation; ensure that it is a flat, sturdy surface at a comfortable working height. Cover the surface with a CLEAN, DRY blanket or towel to prevent scratching the paint or chrome. Keep the area clean during the installation; remove all debris after drilling the mounting holes.

Küryakyn®

- STEP 2** Remove the contents of both of the saddlebags. Remove both of the saddlebags along with the securing hardware and washers; set the saddlebags on a soft sturdy surface.
- STEP 3** Use warm, soapy water and a clean rag to remove all grease, oil, bugs, dirt and other debris (including wax and polish) from both saddlebags; allow them to dry.
- STEP 4** Remove the seat and left side-cover; remove the main fuse.
- STEP 5** Refer to **PIC 1**. Locate the Left and Right Saddlebag Extensions.
- STEP 6** With the brake-side (right) saddlebag upside down on a soft, sturdy surface, test fit the Right Saddlebag Extension as shown in **PIC 2**.

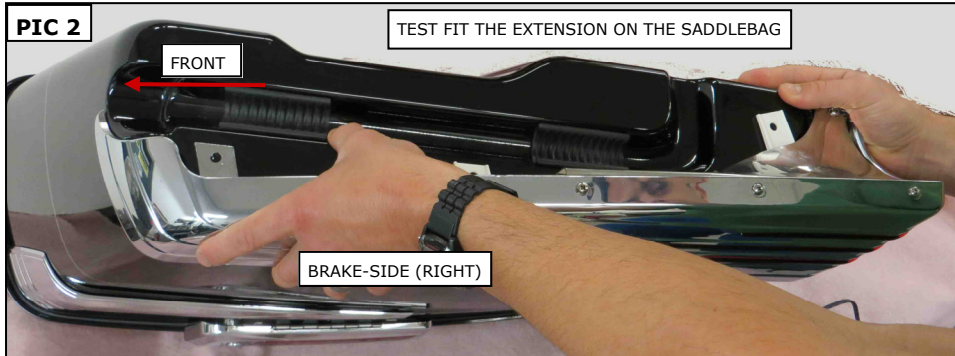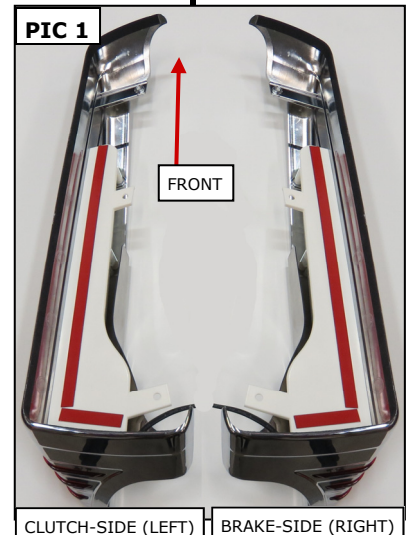

- STEP 7** Use a center punch to mark the center of the three screw holes shown in **PIC 3**; set the Extension aside for now.

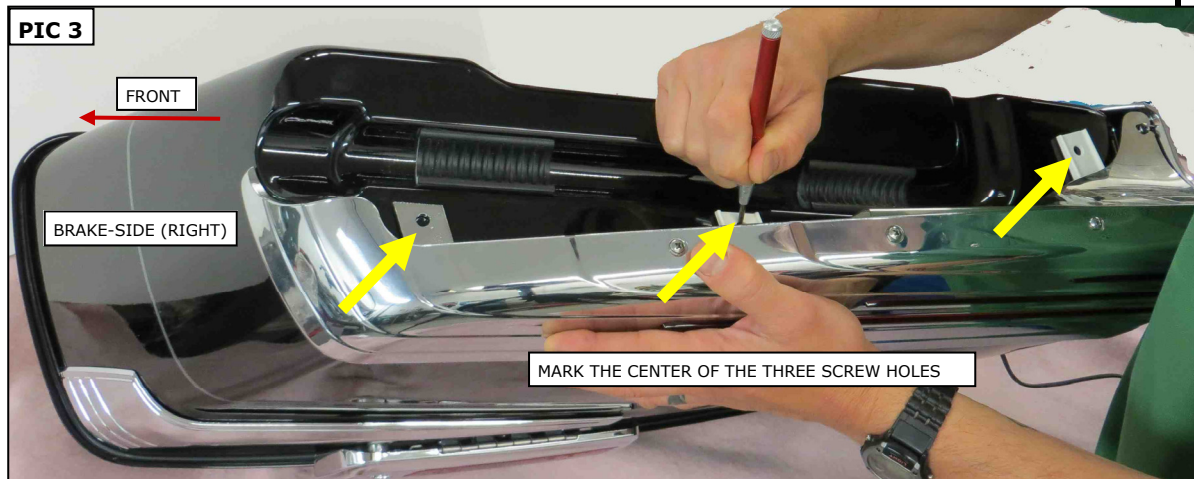

NOTICE

MEASURE TWICE – DRILL ONCE. Double check all reference marks made on the saddlebags **BEFORE** drilling. Küryakyn will not provide warranty coverage on products or components damaged as a result of this installation.

- STEP 8** Repeat **STEPS 6 and 7** for the other side.
- STEP 9** Drill **5/16"** holes in both bags at the marks made in **STEP 7**. Remove any debris from the work area. Reinstall the Extension and ensure proper hole alignment; remove the Extension.
- STEP 10** Use the included alcohol wipe to remove any wax or polish from the bottom of both bags.
- cont.-

PAGE
2

NOTICE

Ensure proper adhesion of this product. Remove all grease, oil, bugs, dirt and other debris (including wax and polish) from the installation area. Kuryakyn will not provide warranty coverage on products or components lost or damaged due to improper installation.

Kuryakyn®

Do not attempt this installation in temperatures below 50° F. Proper adhesive bonding ONLY occurs above 50° F.

STEP 11

Use your fingernail to activate the adhesive on the inside of both Extensions by rubbing the red backing; remove and discard the backing.


STEP 12

Carefully align the three holes, then press the Extension into place for 60 seconds; full bonding will occur after 24 hours. Repeat for the Left Extension.

STEP 13

Locate the included Hardware Kit; set it within arms reach of the work area.

Refer to **PIC 4**. Inside the right saddlebag, insert three of the included Button Socket Head Screws with Flat Washers, and Sealing Washers through the three holes from **STEP 9 on PAGE 2**.

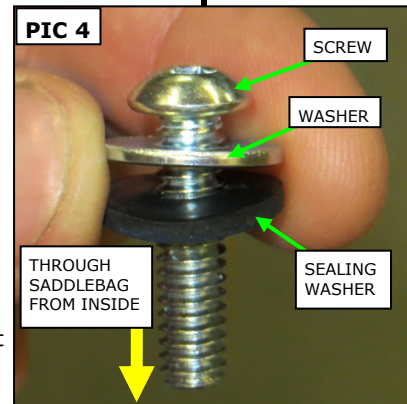

STEP 14

Inside the saddlebag, secure the Screws with a hex wrench; thread the included Lock Nuts with Flat Washers onto the Screws as shown in **PIC 5**.




NOTE:

Refer to **PIC 6**. If there is still a gap between the rear of the Extension and the saddlebag, it may be necessary to loosen the Phillips head screw at the rear, press in, then re-tighten the screw.

STEP 15


Repeat **STEPS 13 and 14** for the other side.

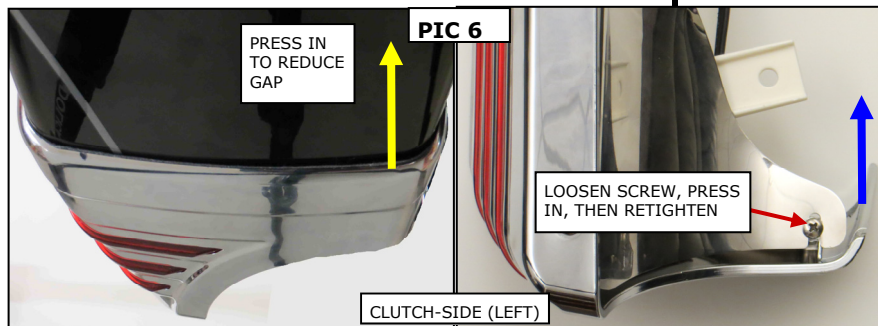

STEP 16

Route the Extension's wiring toward the front of the bag as shown in **PIC 7**; secure with four of the included Cord Keepers.

Stick the Bumper to the lower edge of the bag as shown in **PIC 7**. Repeat for the other side.

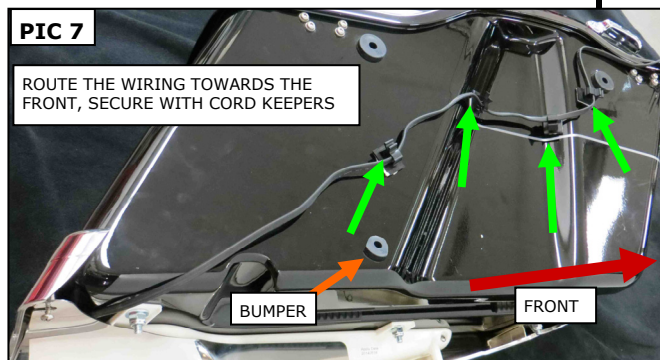

-cont.-

PAGE
3

NOTICE

Dielectric grease inhibits moisture and prevents corrosion. Kuryakyn recommends the use of the included dielectric grease on ALL electrical connections. Apply dielectric grease directly to mating surfaces.

Kuryakyn®

STEP 17 Reinstall both saddlebags and secure them to the bike.

NOTE: It may be necessary to loosen the muffler clamps to center the mufflers in the "cut out" of the Saddlebag Extensions.

STEP 18 Refer to **PIC 8**. Locate and separate the rear lighting harness connectors in the under-seat area; apply some of the included Dielectric Grease to the terminal ends of the included Run-Turn-Brake Wiring Harness, then connect it inline as shown in **PIC 9**.

STEP 19 Refer to **PIC 9**. Connect the small, white, 3-pin connector from the **Right** Extension to the 3-pin connector with **BROWN** wire on the Run-Turn-Brake Adapter.

Connect the small, white, 3-pin connector from the **Left** Extension to the 3-pin connector with **VIOLET** wire on the Run-Turn-Brake Adapter.

RIGHT = BROWN
LEFT = VIOLET

STEP 20 Reinstall the main fuse;
turn **IGN ON**;
ensure proper Run-Turn-Brake function of the new and existing lights;
turn **IGN OFF**.

STEP 21 Secure all extra wiring out of harms way with the included Cable Ties.

Stick the included Warning Labels to the inside to each saddlebag as shown in **PIC 10**.

The small, white, 3-pin connectors **MUST** be separated **BEFORE** removing the saddlebags.

STEP 22 Reinstall the left side cover and seat.

STEP 23 Ensure proper operation of **ALL** lighting **BEFORE** operating the motorcycle.



VISIBILITY IS A MAJOR CONCERN FOR MOTORCYCLISTS. A LIGHT MALFUNCTION COULD RESULT IN DEATH OR SERIOUS INJURY. ENSURE PROPER LIGHT OPERATION BEFORE RIDING THE MOTORCYCLE.



AFTER INSTALLING THE SEAT, PULL UPWARD ON SEAT TO ENSURE IT IS LOCKED IN POSITION. WHILE RIDING, A LOOSE SEAT CAN SHIFT CAUSING LOSS OF CONTROL, WHICH COULD RESULT IN DEATH OR SERIOUS INJURY.

NOTICE

It is the end user's responsibility to ensure that all of the fasteners (including pre-assembled) are tightened before operation of the motorcycle. Kuryakyn will not provide warranty coverage on products or components lost or damaged due to improper installation or lack of maintenance. Periodic inspection and maintenance are required on all fasteners.

Ride On!

GLOSS BLACK L.E.D. SADDLEBAG EXTENSIONS — '14-UP H.D.

PAGE

4

INSTALLATION

