



PREMIER SHARK GILLS 7319

WITH FAIRING RADIATOR VENT TRIM
FITS: ALL '01-UP GL1800 MODELS

PARTS INCLUDED

- 1 Right Radiator Vent Trim
1 Left Radiator Vent Trim
1 Right Shark Grill
1 Left Shark Grill
1 Silicone Sealant
6 Releasable Cable Ties
2 Alcohol Pad
1 Installation Instructions

Please read and understand entire instructions before starting installation.

THANK YOU FOR CHOOSING KÜRYAKYN!

IN ORDER TO PROTECT YOU AND OTHERS FROM POSSIBLE INJURY AND/OR PROPERTY DAMAGE OR LOSS, PLEASE PAY CLOSE ATTENTION TO ALL INSTRUCTIONS, WARNINGS, CAUTIONS AND ATTENTION NOTES REGARDING THE USE AND CARE OF THIS PRODUCT.

WARNING! THIS INDICATION ALERTS YOU TO THE FACT THAT IGNORING THE CONTENTS DESCRIBED HEREIN CAN RESULT IN POTENTIAL DEATH OR SERIOUS INJURY.

CAUTION! This indication alerts you to the fact that ignoring the contents described herein can result in potential injury or material damage.

ATTENTION! This indication alerts you to the fact that ignoring the contents described herein may negatively affect product performance and functionality.

TOOLS SUGGESTED

Set of hex wrenches, and a flat blade screwdriver

STRICTLY OBSERVE THE FOLLOWING GUIDELINES IN ORDER TO USE THE PRODUCT PROPERLY AND AVOID POTENTIALLY DANGEROUS ACCIDENTS.

PROCEDURE

STEP 1 Read and understand all steps in the instructions before starting the installation. Park the motorcycle on a hard, level surface and turn off the ignition.

STEP 2 The Shark Gills are side specific. First, test fit each Shark Gill to determine the left and right cover.

STEP 3 Using the supplied alcohol pads, clean the area that the Shark Gills will be adhered to as well as the inside of the Shark Gills. Wipe surface dry using a clean cloth.

CUSTOMER SERVICE
877.370.3604 (toll free)

INSTALLATION QUESTIONS
techsupport@kuryakyn.com
or call 715.247.2983

LIMITED WARRANTY
Kuryakyn warrants that any Kuryakyn products sold hereunder, shall be free of defects in materials and workmanship for a period of one (1) year from the date of purchase by the consumer excepting the following provisions:

- Kuryakyn shall have no obligation in the event the customer is unable to provide a receipt showing the date the customer purchased the product(s).
The product must be properly installed, maintained and operated under normal conditions.
Kuryakyn makes no warranty, expressed or implied, with respect to any gold plated products.
Kuryakyn shall not be liable for any consequential and incidental damages, including labor and paint, resulting from failure of a Kuryakyn product, failure to deliver, delay in delivery, delivery in nonconforming condition, or for any breach of contract or duty between Kuryakyn and a customer.
Kuryakyn products are often intended for use in specific applications. Kuryakyn makes no warranty if a Kuryakyn product is used in applications other than intended.
Kuryakyn electrical products are warranted for one (1) year from the date of purchase by the consumer. Components of Kuryakyn products containing L.E.D.s will be warranted for defects in materials and workmanship for 3 years from the date of purchase.
Kuryakyn makes no warranty of any kind in regard to other manufacturer's products distributed by Kuryakyn. Kuryakyn will pass on all warranties made by the manufacturer and where possible, will expedite the claim on behalf of the customer, but ultimately, responsibility for disposition of the warranty claim lies with the manufacturer.

ABOUT OUR CATALOG

You'll find all our innovations for H-D, GL and Metric Cruisers in our annual catalogs. Order online today-select the "CATALOGS" icon. Each Kuryakyn® product comes with a Proof-of-Purchase good for a complimentary catalog. Details in packaging.


Be sure to ask your local dealer about other Kuryakyn® products, the motorcycle parts and accessories designed for riders by riders.

©2005 Kuryakyn USA® All Rights reserved.



STEP 4 The supplied tube of silicone will be used to adhere both covers. Use only half of the tube for each Shark Gill. Spread the silicone inside the right Shark Gill as outlined in red shown in PIC 1.

PIC 1

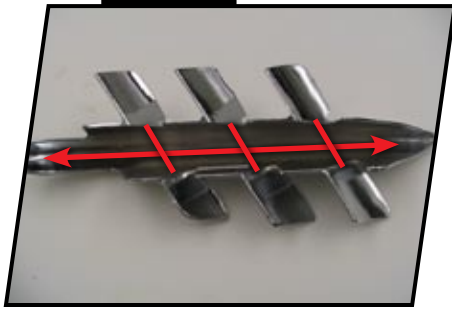

STEP 5 Press and hold the right Shark Gill in place.

ATTENTION! You may choose to use masking tape or paper towel on the areas of the Shark Gills that the cable ties will contact to protect the finish.

STEP 6 Loosely secure the Shark Gill using three of the supplied cable ties. Make sure the cables ties enter behind the upper gills, and exit in front of the lower gills. You may need to bend the end of the cable ties to route them through and behind the Shark Gill to secure it. See PIC 2. When all cable ties are in place, cinch them fully.

PIC 2



STEP 7 Repeat STEP 1 through STEP 6 for the "left" Shark Gill.


NOTE! We recommend that you do not ride the bike for 12 hours after installing the Shark Gills to allow for maximum adhesion.

STEP 8 Press the release on the cable tie to remove them being careful not to damage the chrome surface.

PROCEDURE FOR INSTALLING THE RADIATOR VENT TRIM

STEP 1 Read and understand all steps in the instructions before starting the installation. Park the motorcycle on a hard, level surface and turn off the ignition.

PIC 3

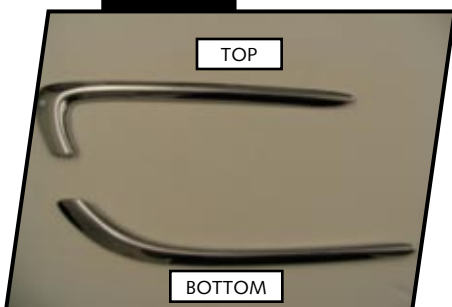

STEP 2 Take the new Radiator Vent Trim, determine the top, and bottom trim pieces. See PIC 3.

STEP 3 The top will have an abrupt hook to it and the bottom will have a slight hook. They will line up with the contours around the radiator.

STEP 4 Dry fit them to figure out the best fit. Make any temporary markings that you may want to ensure the same fit when you install them.

STEP 5 With the supplied alcohol pad, clean the top and bottom areas around the radiator opening to ensure all dirt, wax, or foreign substances are removed that could effect adhesion. See PIC 4.

PIC 4



STEP 6 With the back of your fingernail, rub the adhesive backing to activate the catalyst.

STEP 7 Place the trim piece over the desired location, lining up any marks made in step 4. Press and hold the new trim piece for at least one minute. They will fully bond in 24 hours.

STEP 8 Repeat steps 2-8 for all the other trim pieces.

PIC 5



Ride On!