



LED LIGHTED CHROME GRILL 7328

FOR GL1800

FITS: ALL '01-UP GL1800 MODELS

Note: will not work with Sport Touring Lamp Kit (P/N 2218)

PARTS INCLUDED

- 1 Lighted Chrome Grill
1 Y-Adapter
1 Hardware Kit Including:
1 Alcohol Pad
2 M5 x .8 x 17.5mm Socket Shoulder Screws
1 Installation Instructions

Please read and understand entire instructions before starting installation.

THANK YOU FOR CHOOSING KÜRYAKYN!

IN ORDER TO PROTECT YOU AND OTHERS FROM POSSIBLE INJURY AND/OR PROPERTY DAMAGE OR LOSS, PLEASE PAY CLOSE ATTENTION TO ALL INSTRUCTIONS, WARNINGS, CAUTIONS AND ATTENTION NOTES REGARDING THE USE AND CARE OF THIS PRODUCT.

ATTENTION! This indication alerts you to the fact that ignoring the contents described herein may negatively affect product performance and functionality.

TOOLS SUGGESTED

Set of hex wrenches.

STRICTLY OBSERVE THE FOLLOWING GUIDELINES IN ORDER TO USE THE PRODUCT PROPERLY AND AVOID POTENTIALLY DANGEROUS ACCIDENTS.

PROCEDURE

STEP 1 Read and understand all steps in the instructions before starting the installation. Park the motorcycle on a hard, level surface and turn off the ignition.

STEP 2 Remove the two screws that secure the bottom of the fairing garnish as shown in PIC. 1; these screws will not be used again.

STEP 3 Test fit the chrome grill.

STEP 4 Clean the leading edge of the fairing garnish as highlighted in PIC. 2 with the included alcohol-cleaning pad, and allow the area to dry.

ATTENTION! Ensure the area of installation is free of grease, oil, dirt or other debris to ensure proper adhesion. Kuryakyn WILL NOT warranty any parts lost due to improper installation.

-cont.-



CUSTOMER SERVICE

877.370.3604 (toll free)

INSTALLATION QUESTIONS

techsupport@kuryakyn.com or call 715.247.2983

LIMITED WARRANTY

Kuryakyn warrants that any Kuryakyn products sold hereunder, shall be free of defects in materials and workmanship for a period of one (1) year from the date of purchase by the consumer excepting the following provisions:

- Kuryakyn shall have no obligation in the event the customer is unable to provide a receipt showing the date the customer purchased the product(s).
- The product must be properly installed, maintained and operated under normal conditions.
- Kuryakyn makes no warranty, expressed or implied, with respect to any gold plated products.
- Kuryakyn shall not be liable for any consequential and incidental damages, including labor and paint, resulting from failure of a Kuryakyn product, failure to deliver, delay in delivery, delivery in non-conforming condition, or for any breach of contract or duty between Kuryakyn and a customer.
- Kuryakyn products are often intended for use in specific applications. Kuryakyn makes no warranty if a Kuryakyn product is used in applications other than intended.
- Kuryakyn electrical products are warranted for one (1) year from the date of purchase by the consumer. Components of Kuryakyn products containing L.E.D.s will be warranted for defects in materials and workmanship for 3 years from the date of purchase.
- Kuryakyn makes no warranty of any kind in regard to other manufacturer's products distributed by Kuryakyn. Kuryakyn will pass on all warranties made by the manufacturer and where possible, will expedite the claim on behalf of the customer, but ultimately, responsibility for disposition of the warranty claim lies with the manufacturer.

ABOUT OUR CATALOG

You'll find all our innovations for H-D, GL and Metric Cruisers in our annual catalogs. Order online today-select the "CATALOGS" icon. Each Kuryakyn product comes with a Proof-of-Purchase good for a complimentary catalog. Details in packaging.

Be sure to ask your local dealer about other Kuryakyn products, the motorcycle parts and accessories designed for riders by riders.

©2005 Kuryakyn USA® All Rights reserved.



**ATTENTION!** The adhesive will not bond correctly if applied at temperatures less than 50° F.  
Do not attempt this installation in temperatures less than 50° F.

**STEP 5** Using the back of your fingernail, rub the backing of the adhesive to activate the catalyst; then remove the adhesive backing.

**STEP 6** Route the wiring towards the back of the grill and hold the grill in place; do not let the adhesive make contact with the fairing garnish at this point.

**STEP 7** Start the two included screws from the hardware kit.

**STEP 8** Press and hold the grill in place for one (1) minute, full bonding strength will occur in 24 hours.

**STEP 9** Tighten the screws from STEP 7.

**STEP 10** Carefully remove the clutch side fairing-molding piece shown in PIC. 3 starting at the bottom of the molding; pulling out to disengage the tabs, working your way up the piece.

**STEP 11** Open the clutch side fairing pocket lid, and remove the four trim clips by pushing in on the center pins, and then pulling the clips out. Set the trim clips aside, as they will be used to reinstall the fairing pocket. (PIC. 4)

**STEP 12** Remove the fairing pocket by pulling it straight up and out.

**STEP 13** Locate the accessory plug for the cigarette lighter inside the rubber sleeve towards the front of the pocket location as shown in PIC. 5.

**STEP 14** Plug the included y-adapter into the accessory plug.

**NOTE:** On Models that are equipped with a cigarette lighter you will need to disconnect the harness from the plug, install the adapter and plug the lighter harness into the other end of the adapter.

**STEP 15** Route the wire from the grille through the fairing towards the fairing pocket.

**ATTENTION!** Secure all wiring away from any moving parts, pinch points or extreme heat. Kuryakyn WILL NOT warranty any electrical component that fails due to pinched, crimped, broken, abraded, melted or frayed wires.

**STEP 16** Plug the wire from the grill into either one of the pigtailed from the Y-adapter.

**STEP 17** Turn the ignition to the on position and check to make sure that the lights are functioning.

**STEP 18** Reinstall the fairing pocket, making sure that the wires are tucked underneath the fairing pocket and are not being pinched. Secure with the four trim clips that were removed in STEP 11.

**STEP 19** Carefully install the fairing trim that was removed in STEP10; start at the top, inserting the front tab and working your way down the molding, being careful not to break the tabs.

**ATTENTION!** It is the installer's responsibility to ensure that all of the fasteners (including pre-assembled) are tightened before operation of the motorcycle. Kuryakyn will not warranty components lost due to improper installation. Periodic maintenance may be required.

PIC. 2

CLEAN THE AREA WITH THE INCLUDED ALCOHOL PAD




PIC. 3

REMOVE THE MOLDING BY PULLING UP AND BACK AT THE BOTTOM FIRST AND WORKING YOUR WAY UP




PIC. 4

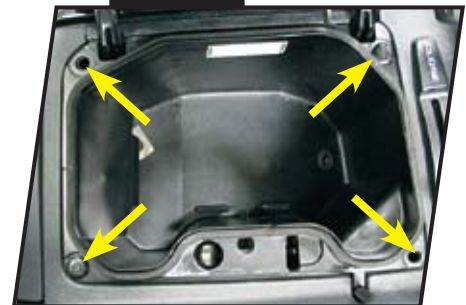

PIC. 5

ACCESSORY PLUG

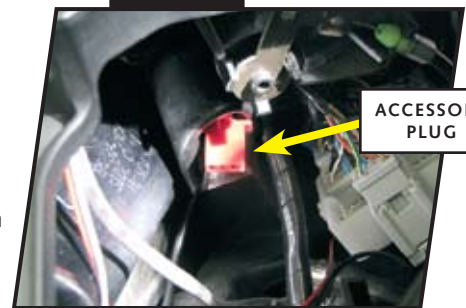

PAGE

2