



INSTALLATION

FAIRING SPEARS with L.E.D. ACCENT LIGHT/GL 1800 7337

PARTS INCLUDED

- 1 Left Fairing Spear with L.E.D. Accent
- 1 Right Fairing Spear with L.E.D. Accent
- 1 Hardware Kit Containing
 - 2 Alcohol Pads
 - 2 Y-Adapter Plugs—5-1/4" Long
- 1 Installation Instructions

Please read and understand entire instructions before starting installation.

THANK YOU FOR CHOOSING KÜRYAKYN!

IN ORDER TO PROTECT YOU AND OTHERS FROM POSSIBLE INJURY AND/OR PROPERTY DAMAGE OR LOSS, PLEASE PAY CLOSE ATTENTION TO ALL INSTRUCTIONS, WARNINGS, CAUTIONS AND ATTENTION NOTES REGARDING THE USE AND CARE OF THIS PRODUCT.

WARNING! THIS INDICATION ALERTS YOU TO THE FACT THAT IGNORING THE CONTENTS DESCRIBED HEREIN CAN RESULT IN POTENTIAL DEATH OR SERIOUS INJURY.

ATTENTION! This indication alerts you to the fact that ignoring the contents described herein may negatively affect product performance and functionality.

CAUTION! This indication alerts you to the fact that ignoring the contents described herein can result in potential injury or material damage.

TOOLS SUGGESTED

Phillips screwdriver, Center Punch, Set of Metric Hex Wrenches,

STRICTLY OBSERVE THE FOLLOWING GUIDELINES IN ORDER TO USE THE PRODUCT PROPERLY AND AVOID POTENTIALLY DANGEROUS ACCIDENTS.

STEP 1 Read and understand all steps in the instructions before starting the installation. Park the motorcycle on a hard, level surface and turn off the ignition.

NOTE: '06 to '10 models, that do not have existing Kuryakyn front accent lighting, require P/N 7300, Adapter Plug, (purchased separately) for Plug and Play wiring.

ATTENTION! A factory service manual may be helpful in performing this installation. Do not attempt to perform this installation if you are not confident in your ability to complete all steps in the procedure; consult a trained technician.

STEP 2 Remove any grease or debris from both sides of the outer fairing with soapy water and a clean rag; rinse and allow the area to dry completely PIC 1. Clean the area with the included alcohol cleaning pad to remove any residue; allow the area to dry completely.

CUSTOMER SERVICE

877.370.3604 (toll free)

INSTALLATION QUESTIONS

techsupport@kuryakyn.com
or call 715.247.2983

LIMITED WARRANTY

Küryakyn warrants that any Küryakyn products sold hereunder, shall be free of defects in materials and workmanship for a period of one (1) year from the date of purchase by the consumer excepting the following provisions:

- Küryakyn shall have no obligation in the event the customer is unable to provide a receipt showing the date the customer purchased the product(s).
 - The product must be properly installed, maintained and operated under normal conditions.
- Küryakyn makes no warranty, expressed or implied, with respect to any gold plated products.
 - Küryakyn shall not be liable for any consequential and incidental damages, including labor and paint, resulting from failure of a Küryakyn product, failure to deliver, delay in delivery, delivery in nonconforming condition, or for any breach of contract or duty between Küryakyn and a customer.
- Küryakyn products are often intended for use in specific applications. Küryakyn makes no warranty if a Küryakyn product is used in applications other than intended.
- Küryakyn electrical products are warranted for one (1) year from the date of purchase by the consumer. L.E.D.'S contained in components of Küryakyn products will be warranted for defects in materials and workmanship for 3 years from the date of purchase where as all other components shall be warranted for one(1) year. This includes, but is not limited to; control modules, wiring, chrome & other components.
 - Küryakyn makes no warranty of any kind in regard to other manufacturer's products distributed by Küryakyn. Küryakyn will pass on all warranties made by the manufacturer and where possible, will expedite the claim on behalf of the customer, but ultimately, responsibility for disposition of the warranty claim lies with the manufacturer.

ABOUT OUR CATALOG

For purchasing Küryakyn® products, you can receive a complete catalog free of charge. Send the Proof-of-Purchase below with your address to: Küryakyn, P.O. Box 339, Somerset, WI 54025. Please indicate either Accessories Catalog for Harley-Davidson® or GL & Metric Cruisers.

Be sure to ask your local dealer about other Küryakyn® products, the motorcycle parts and accessories designed for riders by riders.

©2005 Küryakyn USA® All Rights reserved.



kuryakyn.com

ATTENTION! Thoroughly clean the area of grease, oil, dirt, or other debris to ensure proper adhesion. Küryakyn WILL NOT warranty any parts lost due to improper installation.

STEP 3 Test fit the left Fairing Spear to the fairing. They will install just above the body line groove, not in the channel. Make any reference marks with a non-permanent marker or masking tape. PIC 1 as a starting point, the rear of the L.E.D. Fairing Spear will be about 1-1/4" above the deepest part of the body groove.

ATTENTION! The adhesive may not correctly bond if applied at temperatures less than 50°F. Do not attempt this installation in temperatures less than 50°F.

STEP 4 Rub the backing on the adhesive strip to activate the adhesive before applying. Remove the adhesive backing. Press the Fairing Spear to the left side of the fairing into place for 1 minute to ensure proper adhesion. Full bond strength will occur within 24 hours. PIC 1 Repeat for right side.

NOTE: If the bike be will ridden before the Fairing Spears have been installed for 24 hours, Kuryakyn recommends that you use masking tape over the Fairing Spears to ensure proper adhesion.




STEP 5 Locate the rubber boot at the base of each mirror. Carefully peel this boot back away from the fairing to expose the wire connections. Pay attention to how the boot joins with the fairing; this will aid in replacing the boot in its proper position during reassembly. PIC 3

STEP 6 Carefully remove the trim molding from each side as shown in PIC 4. The upper edge has a tab that fits into a slot under the fairing. PIC 5 You may find it helpful to start removing the trim at the bottom and work your way to the upper edge.

STEP 7 Remove the side compartments. Use a center punch to depress the locking mechanism in each of the plastic fasteners. PIC 6 The right side compartment (sitting on the bike) needs to be opened with a key, then remove two Phillips head screws and two of the locking plastic fasteners.

STEP 8 Thread the connector end of the wire harness under the front of the fairing, above the inside fairing vent, to behind the fairing up to the mirror joint, a piece of stiff wire or a straightened coat hanger with the connector of the wire harness taped to it, may ease threading this through the fairing. PIC 7 and PIC 8

ATTENTION! Secure all wiring away from any moving parts, pinch points or extreme heat. Küryakyn WILL NOT issue a warranty on any electrical component that fails due to pinched, crimped, broken, abraded, melted or frayed wires.

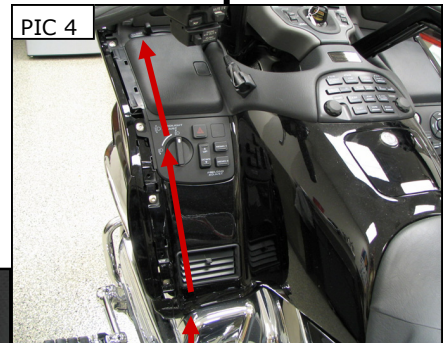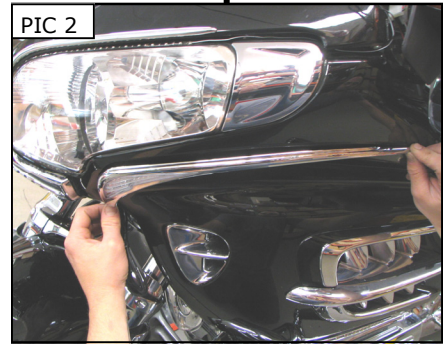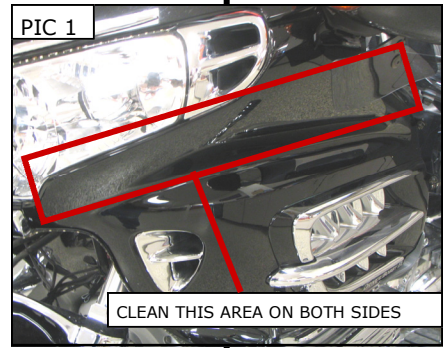

-cont.-

ATTENTION! Kuryakyn recommends the use of dielectric grease on electrical connections.

STEP 9 For '06-up models with P/N 7300 adapter: Apply dielectric grease to all the electrical connections. Connect the adapter to the wire harness, then to the turn signal harness.

For all other models: Apply dielectric grease to all the electrical connections. Connect the "Y" connector to the wire harness, then to the turn signal harness.

NOTE: If you have already installed additional Kuryakyn accessory lights on the front of the bike and you do not have an extra plug in you may use Kuryakyn P/N 7302, Multi-Plug and Play Connector, with the existing Kuryakyn wire adapter for additional plug-ins in place of the included wire adapter.

STEP 10 With the motorcycle running, test the Fairing Light, running lights, and turn signal for proper operation.







WARNING! ENSURE PROPER RUNNING LIGHT AND TURN SIGNAL OPERATION BEFORE RIDING THE MOTORCYCLE. VISIBILITY IS A MAJOR CONCERN FOR MOTORCYCLISTS. RUNNING LIGHT OR TURN SIGNAL MALFUNCTION COULD RESULT IN DEATH OR SERIOUS INJURY.

STEP 11 Tuck any excess wire harness behind the mirror joint. Roll the rubber boot back into position against the base of each mirror.

ATTENTION! Secure all wiring away from any moving parts, pinch points or extreme heat. Kuryakyn WILL NOT issue a warranty on any electrical component that fails due to pinched, crimped, broken, abraded, melted or frayed wires.

STEP 12 Replace each side compartment. To engage the plastic fasteners, first be sure the locking mechanism is in the raised position as shown in PIC 11. Place a fastener in each hole then press straight down on the locking mechanism to engage.

STEP 13 Replace each trim molding. Fit the lip at the top of the molding into the slot under the fairing then carefully snap the length of the molding into place.

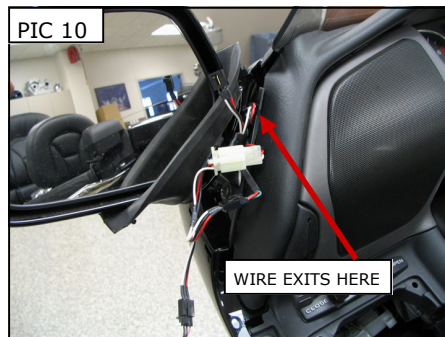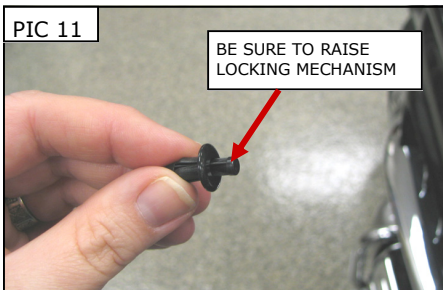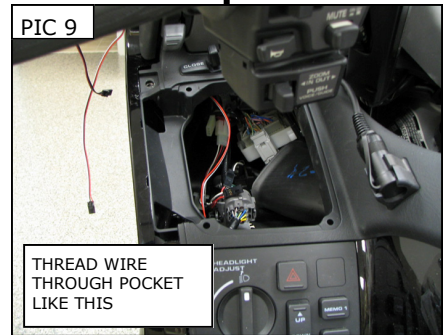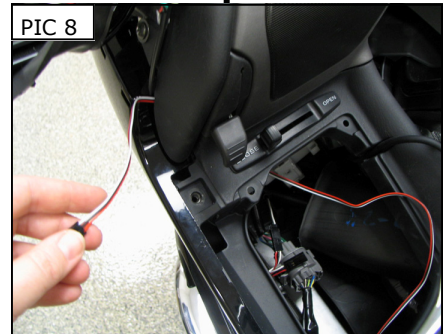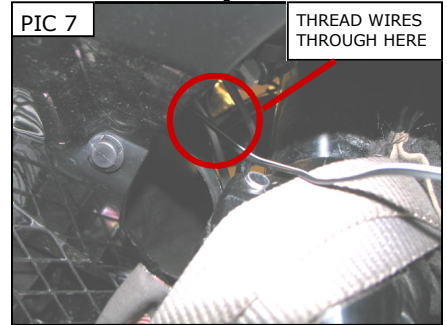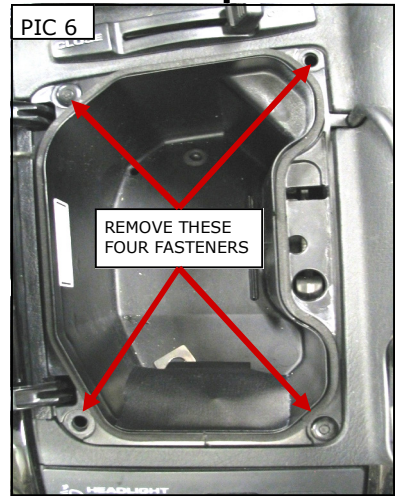

Ride On!