



INSTALLATION

CYLINDER BASE COVERS for VTX 1300 7703

PARTS INCLUDED

- 1 Right Cover
- 1 Left Base Cover Assembly
- 1 Right Rear Cover
- 1 Right Lower Cover
- 1 Left Front Cover
- 1 Hardware Kit
 - 3 M5 Flat Washers
 - 3 M5 x 0.8 x 16MM Button Socket Cap Screws (BSCS)
 - 1 Steel Tube
 - 1 M6 x 1.0 Shoulder Bolt
 - 12 Adhesive Strips
 - 2 Alcohol Pads
- 1 Installation Instructions

Please read and understand entire instructions before starting installation.

THANK YOU FOR CHOOSING KÜRYAKYN!

IN ORDER TO PROTECT YOU AND OTHERS FROM POSSIBLE INJURY AND/OR PROPERTY DAMAGE OR LOSS, PLEASE PAY CLOSE ATTENTION TO ALL INSTRUCTIONS, WARNINGS, CAUTIONS AND ATTENTION NOTES REGARDING THE USE AND CARE OF THIS PRODUCT.

WARNING! THIS INDICATION ALERTS YOU TO THE FACT THAT IGNORING THE CONTENTS DESCRIBED HEREIN CAN RESULT IN POTENTIAL DEATH OR SERIOUS INJURY

ATTENTION! This indication alerts you to the fact that ignoring the contents described herein may negatively affect product performance and functionality.

TOOLS SUGGESTED

Set of Metric Hex Wrenches , Set of Metric Combination Wrenches, Screwdriver

STRICTLY OBSERVE THE FOLLOWING GUIDELINES IN ORDER TO USE THE PRODUCT PROPERLY AND AVOID POTENTIALLY DANGEROUS ACCIDENTS.

STEP 1 Read and understand all steps in the instructions before starting the installation. Park the motorcycle on a hard, level surface and turn off the ignition. Let cool.

WARNING! YOU WILL BE WORKING AROUND THE ENGINE AND EXHAUST SYSTEM DURING INSTALLATION. ENSURE THAT THE ENGINE AND EXHAUST SYSTEM HAVE FULLY COOLED TO PREVENT INJURY.

ATTENTION! A factory service manual may be helpful in performing this installation. Do not attempt to perform this installation if you are not confident in your ability to complete all of the steps in the procedure; consult a trained technician.

CUSTOMER SERVICE

877.370.3604 (toll free)

INSTALLATION QUESTIONS

techsupport@kuryakyn.com
or call 715.247.2983

LIMITED WARRANTY

Kuryakyn warrants that any Kuryakyn products sold hereunder, shall be free of defects in materials and workmanship for a period of one (1) year from the date of purchase by the consumer excepting the following provisions:

- Kuryakyn shall have no obligation in the event the customer is unable to provide a receipt showing the date the customer purchased the product(s).
 - The product must be properly installed, maintained and operated under normal conditions.
 - Kuryakyn makes no warranty, expressed or implied, with respect to any gold plated products.
 - Kuryakyn shall not be liable for any consequential and incidental damages, including labor and paint, resulting from failure of a Kuryakyn product, failure to deliver, delay in delivery, delivery in nonconforming condition, or for any breach of contract or duty between Kuryakyn and a customer.
- Kuryakyn products are often intended for use in specific applications. Kuryakyn makes no warranty if a Kuryakyn product is used in applications other than intended.
- Kuryakyn electrical products are warranted for one (1) year from the date of purchase by the consumer. L.E.D.'S contained in components of Kuryakyn products will be warranted for defects in materials and workmanship for 3 years from the date of purchase where as all other components shall be warranted for one(1) year. This includes, but is not limited to; control modules, wiring, chrome & other components.
- Kuryakyn makes no warranty of any kind in regard to other manufacturer's products distributed by Kuryakyn. Kuryakyn will pass on all warranties made by the manufacturer and where possible, will expedite the claim on behalf of the customer, but ultimately, responsibility for disposition of the warranty claim lies with the manufacturer.

ABOUT OUR CATALOG

For purchasing Kuryakyn® products, you can receive a complete catalog free of charge. Send the Proof-of-Purchase below with your address to: Kuryakyn, P.O. Box 339, Somerset, WI 54025. Please indicate either Accessories Catalog for Harley-Davidson® or GL & Metric Cruisers.

Be sure to ask your local dealer about other Kuryakyn® products, the motorcycle parts and accessories designed for riders by riders.

©2005 Kuryakyn USA® All Rights reserved.



kuryakyn.com

STEP 2 Thoroughly clean the front left engine case with soapy water, dry completely. Wipe the area off with one of the included alcohol pads to remove any residue.

ATTENTION! Ensure the area of installation is free of grease, oil, dirt or other debris to ensure proper adhesion. Küryakyn WILL NOT issue a warranty on any parts lost due to improper installation

ATTENTION! The adhesive will not bond correctly if applied at temperatures less than 50°F. Do not attempt this installation in temperatures less than 50°F.

NOTE: It will be helpful to “dry test” the front left cover’s position before removing the adhesive backing.

ATTENTION! Due to manufacturing and assembly variances, some adjustments may be necessary after the initial installation to achieve proper fit and/or function. Küryakyn recommends “mocking up” components secured with non-removable fastening devices, such as double-sided tape or silicone, before full installation.

STEP 3 Rub adhesive backing with your fingernail to activate adhesive. Remove the adhesive backing on one side of four pieces of double-sided tape; apply the tape to the backside of the left front piece as seen in PIC.1.

STEP 4 Rub adhesive backing with your fingernail to activate adhesive. Remove the adhesive backing on the left front piece and position on the front of the engine case; press into place for at least 60 seconds for optimum adhesion. See PIC.2.

STEP 5 Remove the socket head fastener that holds the clutch cable bracket; save the fastener for later use. See PIC.3.

STEP 6 While securing the plate with one hand, thread the new M6 x 1.0 Shoulder Bolt fastener into the hole, see PIC.3; tighten fastener.

STEP 7 Remove the socket head fastener that is 3rd forward from the dipstick, shown in PIC.3 and PIC.4; save for later use.







STEP 8 Position left side cover over the clutch cable and engine case; pull the cable down and locate it in the recess in the front of the cover. See PIC.5.

STEP 9 Secure the front of the cover with the stock fastener removed in STEP 7; finger-tighten at this time.

STEP 10 Secure the rear of the cover with the stock fastener. It may be necessary to remove the oil filler cap to gain access to the bolt for tightening; stuff a clean rag into the oil filler hole if cap is removed. Replace oil filler cap when finished.

STEP 11 From the right side of the bike, slide the threaded tube through the engine “V”. Secure to the left side cover with an M5 x .8 x 16mm fastener and flat washer. See PIC.6.

-cont.-

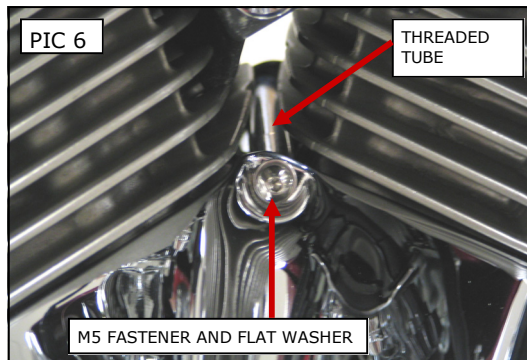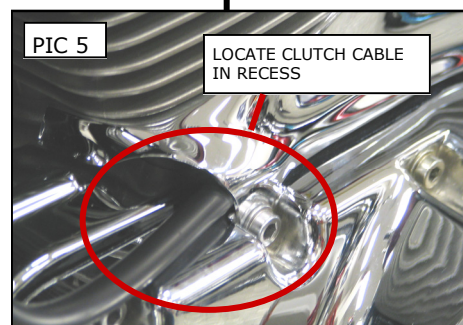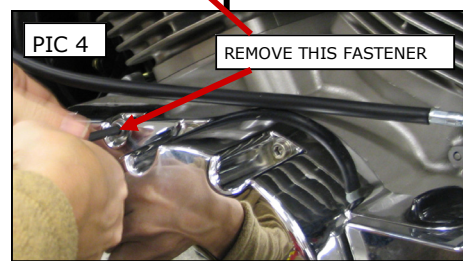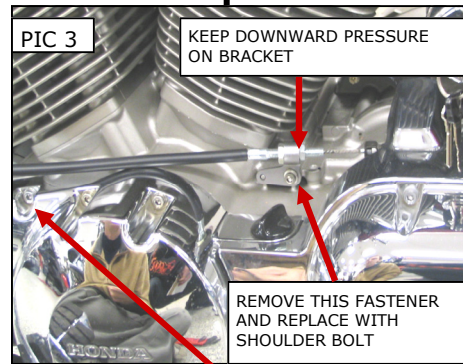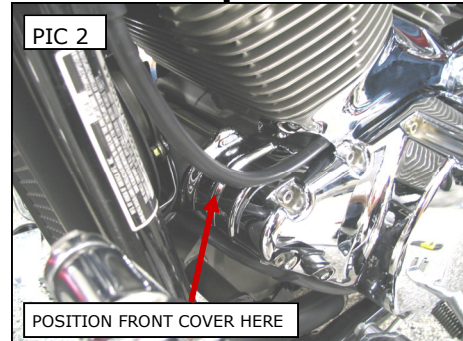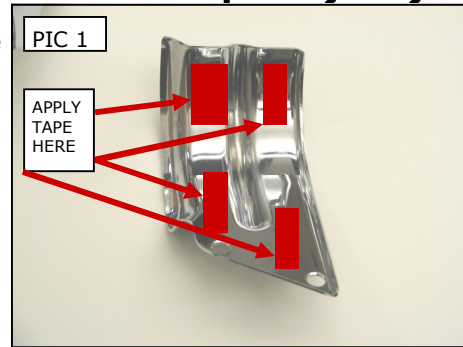

STEP 12 On the right side of the motorcycle, remove the top four bolts in the front engine case. See PIC.7. It may be necessary to loosen the exhaust heat shields in order to fit the right side cover into place. Ensure that the exhaust system has cooled off enough to prevent personal injury.

STEP 13 Thoroughly clean the engine case area shown in PIC.7.

ATTENTION! Ensure the area of installation is free of grease, oil, dirt or other debris to ensure proper adhesion. Küryakyn WILL NOT issue a warranty on any parts lost due to improper installation

ATTENTION! The adhesive will not bond correctly if applied at temperatures less than 50°F. Do not attempt this installation in temperatures less than 50°F.

NOTE: It will be helpful to “dry test” the right rear cover’s position before removing the adhesive backing.

STEP 14 Rub adhesive backing with your fingernail to activate adhesive. Remove one side of the adhesive backing of six pieces of double-sided tape; affix the tape to the backside of the right rear cover, see PIC.8.

STEP 15 Rub adhesive backing with your fingernail to activate adhesive. Remove the adhesive backing on the right rear cover and position it over the lump in the engine case and evenly spaced away from the rear cylinder; press down for at least 60 seconds for optimum adhesion. See PIC.7.

STEP 16 Rub adhesive backing with your fingernail to activate adhesive. Remove the adhesive backing and affix the double-sided tape to the backside of the lower cover. See PIC.9.

STEP 17 Attach the lower cover to the upper cover with an M5 x .8 x 16mm fastener and flat washer; finger-tighten at this time. See PIC.10.

STEP 18 Place front right cover into place and secure with the stock fasteners. See PIC.10.

STEP 19 Install M5 x .8 x 16mm fastener and flat washer into the top of the right side cover and then into the threaded tube.

STEP 20 Tighten all of the right side fasteners at this time.

STEP 21 Rub adhesive backing with your fingernail to activate adhesive. Remove the adhesive backing from the lower cover and press the right lower cover onto the bike for at least 60 seconds for optimum adhesion.

STEP 22 Tighten all of the remaining fasteners on the left and right side of the bike (don't forget the exhaust shield if it was loosened).

ATTENTION! It is the installer’s responsibility to ensure that all of the fasteners (including pre-assembled) are tightened before operation of the motorcycle. Küryakyn will not issue a warranty on components lost due to improper installation. Periodic maintenance may be required.

