



INSTALLATION

V-SHIELD COVER KIT FOR VTX1800 7715

FITS: ALL VTX1800

PART#	INCLUDED
408128	1 V-Shield Cover
907715	1 7715 Mounting Hardware Kit Including the Following:
407715	1 Upper Bracket – Chrome
407715L	1 Lower Bracket – Chrome
200333	2 5/16"–24 Acorn Nuts – Chrome
201071	2 5/16" Internal Tooth Washers – Stainless Steel
200281	2 5/16" Flat Washers – Chrome
201072	1 5/16"–24 X 5/8" H.H.C.S. – Chrome
200347	1 5/16"–24 X 1/2" H.H.C.S. – Chrome
807715	1 Instruction Sheet

TOOLS SUGGESTED

1/2" wrench, a 1/2" socket and a 10mm socket.

PROCEDURE AVERAGE TIME: 30 MINUTES


STEP 1 INSTALLING THE LOWER BRACKET

Remove the bolt holding the throttle stop screw bracket to the front cylinder head. (See PIC.1.) Install lower bracket under the enricher bracket. (See PIC.2.) Re-use stock bolt and tighten fully.

PIC.1



PIC.2

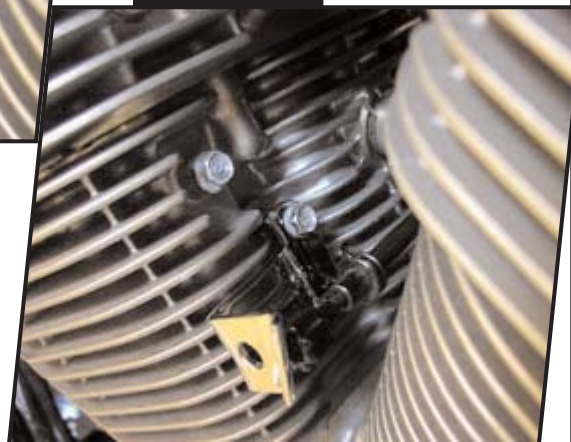

-cont.-

E-MAIL

techsupport@kuryakyn.com
or call 715.247.2983

WARRANTY

Kuryakyn™ warrants that any Kuryakyn product sold hereunder, if properly installed, maintained and operated under normal conditions, shall be free from any defects in materials and workmanship for a period of one (1) year from the date the Kuryakyn products are sold to the customer.


CONSEQUENTIAL DAMAGES:
Kuryakyn shall not be liable for any consequential or incidental damages.

ABOUT OUR CATALOG

You'll find all our innovations for H-D, GL and Metric Cruisers in our annual catalogs. Order online today—select the "CATALOGS" icon. Each Kuryakyn™ product comes with a Proof-of-Purchase good for a complimentary catalog. Details in packaging.

Be sure to ask your local dealer about other Kuryakyn products, the motorcycle parts and accessories designed for riders by riders.

©2003 Kuryakyn USA™ All Rights reserved.

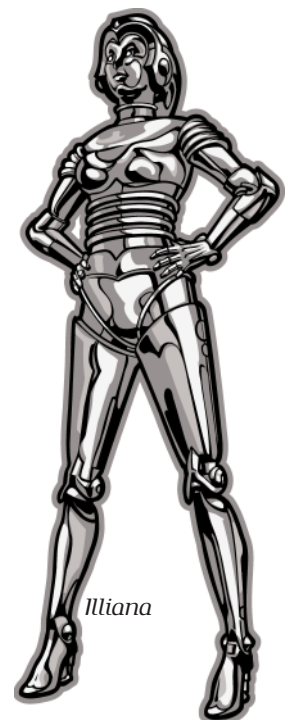

Illiana

STEP 2 INSTALLING THE UPPER BRACKET

Use the 5/16"-24 X 1/2" H.H.C.S. and a flat washer. Install the bolt and washer from the back-side of the lower bracket through the upper bracket. (See PIC.3.) Use a 5/16" internal tooth washer then a 5/16" acorn nut on the outside of the upper bracket and tighten fully.

STEP 3 INSTALLING THE COVER

Use the 5/16"-24 X 5/8" H.H.C.S. and a flat washer. Install the bolt through the back-side of the upper bracket and through the hole at the top of the cover. Use the remaining 5/16" internal tooth lock washer and the remaining 5/16" acorn nut on the outside of the horn cover. Tighten fully. (See PIC.4.)

Ride On!

PIC.3



PIC.4

