



INSTALLATION

TAPPET BLOCK COVERS FOR ROADSTAR 7728

FITS ALL ROAD STAR 1600 & 1700 MODELS (EX. WARRIOR)

PARTS INCLUDED

- 1 Rear Tappet Cover, Chrome
- 1 Front Tappet Cover, Chrome
- 1 IGN Cover, Chrome
- 1 Cylinder Base Cover Support Bracket (for use with Hypercharger)
- 1 Rear Tappet Base Bracket (1600 models only)
- 1 Front Tappet Base Bracket (1600 models only)
- 1 Hardware Kit, including:
 - 2 M6 x 1.0 x 25mm SHCS 18-8 Fastener
 - 4 0.700 x 0.450 x 0.060" Double-Sided Foam Tape
 - 2 1/2" x 1" x 0.120" Double-Sided Foam Tape
 - 2 Alcohol Pads
 - 1 Mounting Clip
 - 1 Installation Instructions

Please read and understand entire instructions before starting installation.

THANK YOU FOR CHOOSING KÜRYAKYN!

PLEASE NOTE

It is the installers' responsibility to make sure all fasteners (including pre-assembled) are tightened before operation of motorcycle. Kuryakyn will not warranty components that are lost due to improper installation. Periodic maintenance may be required.

TOOLS SUGGESTED

Allen wrenches

ATTENTION! A factory service manual may be helpful in performing this installation. Do not attempt to perform this installation if you are not confident in your ability to complete all steps in the procedure; consult a trained technician.


CAUTION! BE SURE ALL FASTENERS ARE SECURE AND THAT THE NEW COMPONENTS DO NOT INTERFERE WITH THE SAFE AND PROPER OPERATION OF THE MOTORCYCLE.

PROCEDURE

STEP 1 Remove the paper backing from the two 1/2" x 1" x 0.120" tape strips and press the tape onto the inside of the IGN cover. See PIC.1.

STEP 2 Use one of the supplied alcohol pads to clean the ignition module. Be sure to remove any grease or dirt from the top surface of the ignition module.

-cont.-

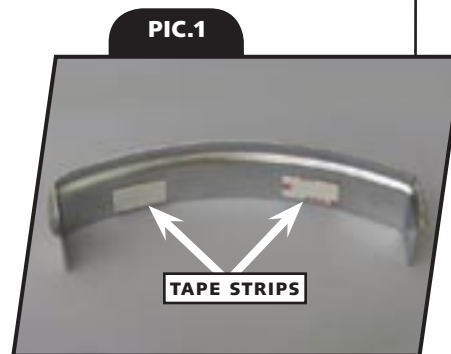

CUSTOMER SERVICE

877.370.3604 (toll free)

INSTALLATION QUESTIONS

techsupport@kuryakyn.com
or call 715.247.2983

LIMITED WARRANTY

Kuryakyn warrants that any Kuryakyn products sold hereunder, shall be free of defects in materials and workmanship for a period of one (1) year from the date of purchase by the consumer excepting the following provisions:

· Kuryakyn shall have no obligation in the event the customer is unable to provide a receipt showing the date the customer purchased the product(s).

· The product must be properly installed, maintained and operated under normal conditions.

· Kuryakyn makes no warranty, expressed or implied, with respect to any gold plated products.

· Kuryakyn shall not be liable for any consequential and incidental damages, including labor and paint, resulting from failure of a Kuryakyn product, failure to deliver, delay in delivery, delivery in nonconforming condition, or for any breach of contract or duty between Kuryakyn and a customer.

· Kuryakyn products are often intended for use in specific applications. Kuryakyn makes no warranty if a Kuryakyn product is used in applications other than intended.

· Kuryakyn electrical products are warranted for one (1) year from the date of purchase by the consumer. Components of Kuryakyn products containing L.E.D.s will be warranted for defects in materials and workmanship for 3 years from the date of purchase.

· Kuryakyn makes no warranty of any kind in regard to other manufacturer's products distributed by Kuryakyn. Kuryakyn will pass on all warranties made by the manufacturer and where possible, will expedite the claim on behalf of the customer, but ultimately, responsibility for disposition of the warranty claim lies with the manufacturer.

ABOUT OUR CATALOG

You'll find all our innovations for H-D, GL and Metric Cruisers in our annual catalogs. Order online today—select the "CATALOGS" icon. Each Kuryakyn product comes with a Proof-of-Purchase good for a complimentary catalog. Details in packaging.

Be sure to ask your local dealer about other Kuryakyn products, the motorcycle parts and accessories designed for riders by riders.

©2005 Kuryakyn USA All Rights reserved.



STEP 3 Remove the paper backing from the tape. Center the IGN cover over the top surface of the ignition module and press down to seat. See [PIC.2](#). Hold for one minute to ensure proper adhesion. Full bond strength will occur within 24 hours.

STEP 4 FOR 1600 MODELS ONLY: Remove the paper backing from the four 0.700 x 0.450 x 0.060 tape strips and install a strip of tape on the inner surface of both the front and rear base bracket. See [PIC.3](#). Use one of the supplied alcohol pads to clean the tappet block base. Be sure to remove any grease or other debris. Install the front and rear base brackets over the base of the tappet blocks, centering the holes over the fasteners. See [PIC.4](#). Press down to seat and hold for one minute to ensure proper adhesion. Full bond strength will occur within 24 hours.

STEP 5 Install the front and rear tappet covers. Use the supplied fasteners to secure the covers. See [PIC.5](#).

STEP 6 FOR BIKES WITH HYPERCHARGERS ONLY: Remove the existing support bracket; save the hardware. Install the supplied support bracket using the saved hardware. See [PIC.6](#).


STEP 7 FOR BIKES WITH STOCK AIR BOX ONLY: Install the idle adjustment cable into the supplied plastic mounting clip. Use a supplied alcohol pad to clean the stock air box. Be sure to remove any grease or debris. Remove the paper backing from the adhesive tape on the mounting clip. Press the mounting clip into location on the back of the stock air box and hold for 1 minute. Full bond strength will occur within 24 hours..

Ride On!

PIC.2



PIC.3

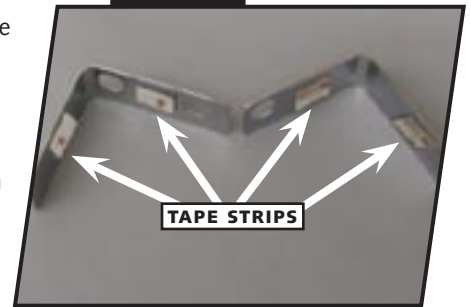

PIC.4



PIC.5



PIC.6

