

INSTALLATION

SWINGARM TUBE COVERS

7818

FITS: ALL '08 SOFTAIL

PARTS INCLUDED

- 1 Upper Left Swingarm Cover
- 1 Lower Left Swingarm Cover
- 1 Upper Right Swingarm Cover
- 1 Lower Right Swingarm Cover
- 1 Alcohol Pad
- 1 Installation Instructions

Please read and understand entire instructions before starting installation.

THANK YOU FOR CHOOSING KÜRYAKYN!

IN ORDER TO PROTECT YOU AND OTHERS FROM POSSIBLE INJURY AND/OR PROPERTY DAMAGE OR LOSS, PLEASE PAY CLOSE ATTENTION TO ALL INSTRUCTIONS, WARNINGS, CAUTIONS AND ATTENTION NOTES REGARDING THE USE AND CARE OF THIS PRODUCT.

WARNING! THIS INDICATION ALERTS YOU TO THE FACT THAT IGNORING THE

CONTENTS DESCRIBED HEREIN CAN RESULT IN POTENTIAL DEATH OR

SERIOUS INJURY.

CAUTION! This indication alerts you to the fact that ignoring the contents described herein

can result in potential injury or material damage.

ATTENTION! This indication alerts you to the fact that ignoring the contents described herein

may negatively affect product performance and functionality.

TOOLS SUGGESTED

Warm soapy water and clean rag.

STRICTLY OBSERVE THE FOLLOWING GUIDELINES IN ORDER TO USE THE PRODUCT PROPERLY AND AVOID POTENTIALLY DANGEROUS ACCIDENTS.

PROCEDURE

STEP 1 Read and understand all steps in the instructions before starting the installation. Park the motorcycle on a hard, level surface; turn off the ignition and allow the engine to cool.

WARNING! YOU WILL BE WORKING AROUND THE ENGINE AND EXHAUST SYSTEM
DURING INSTALLATION. ENSURE THAT THE ENGINE AND EXHAUST SYSTEM

LINE SHALL COOLED TO DESIGN THAT THE ENGINE AND EXHA

HAVE FULLY COOLED TO PREVENT INJURY.

STEP 2 Clean the swingarm tubes using warm soapy water and a clean rag and allow them to dry.

-cont.-

CUSTOMER SERVICE

877.370.3604 (toll free)

INSTALLATION QUESTIONS

techsupport@kuryakyn.com or call 715.247.2983

LIMITED WARRANTY

Küryakyn warrants that any Küryakyn products sold hereunder, shall be free of defects in materials and workmanship for a period of one (1) year from the date of purchase by the consumer excepting the following provisions:

 Küryakyn shall have no obligation in the event the customer is unable to provide a receipt showing the date the customer purchased the product(s).

• The product must be properly installed, maintained and operated under normal conditions.

· Küryakyn makes no warranty, expressed or implied, with respect to any gold plated products.

 Küryakyn shall not be liable for any consequential and incidental damages, including labor and paint, resulting from failure of a Küryakyn product, failure to deliver, delay in delivery, delivery in nonconforming condition, or for any breech of contract or duty between Küryakyn and a customer.

> Küryakyn products are often intended for use in specific applications. Küryakyn makes no warranty if a Küryakyn product is used in applications other than intended.

Küryakyn electrical products are warranted for one
(1) year from the date of purchase by the consumer.
Components of Küryakyn products containing L.E.D.s
will be warranted for defects in materials and
workmanship for 3 years from the date of purchase.

Küryakyn makes no warranty of any kind in regard to other manufacturer's products distributed by Küryakyn. Küryakyn will pass on all warranties made by the manufacturer and where possible, will expedite the claim on behalf of the customer, but ultimately, responsibility for disposition of the warranty claim lies with the manufacturer.

ABOUT OUR CATALOG

You'll find all our innovations for H-D, GL and Metric Cruisers in our annual catalogs. Order online today-select the "CATALOGS" icon. Each Küryakyn product comes with a Proof-of-Purchase good for a complimentary catalog. Details in packaging.

Be sure to ask your local dealer about other Küryakyn products, the motorcycle parts and accessories designed for riders by riders.

©2005 Küryakyn USA All Rights reserved



STEP 3 Referring to <u>PIC.1</u>, determine the upper and lower covers for the right and left sides.

NOTE When installing the covers on the right side it may be helpful to loosen the exhaust.

Küryakyn

STEP 4 Starting with the right side, test fit the upper and lower cover. They are designed to be placed so that the end of the cover is just above the weld as shown in PIC.2.

NOTE The covers should snap into place when they are installed, if they are loose, you may lightly squeeze the cover to achieve a tighter fit.

STEP 5 Clean the swingarms with the included alcohol-cleaning pad in the location where the adhesive inside the covers will sit, and allow the area to fully dry.

ATTENTION! Ensure the area of installation is free of grease, oil, dirt or other debris to ensure proper adhesion. Küryakyn WILL NOT warranty any parts lost due to improper installation.

ATTENTION! The adhesive will not bond correctly if applied at temperatures less than 50°F. Do not attempt this installation in temperatures less than 50°F.

STEP 6 Using the back of your fingernail, rub the backing of the adhesive pad on the upper cover to activate the catalyst, and remove the backing.

STEP 7 Install the upper cover and press and hold in place for one (1) minute, full bonding strength will occur in 24 hours.


STEP 8 Using the back of your fingernail, rub the backing of the adhesive pad on the lower cover to activate the catalyst, and remove the backing.


STEP 9 Install the lower cover and press and hold in place for one (1) minute, full bonding strength will occur in 24 hours

STEP 10 Repeat STEP 4 through STEP 9 for the left side.

CAUTION! Ensure that the installation of this product does not interfere with the proper operation of the motorcycle before riding.

Ride On!

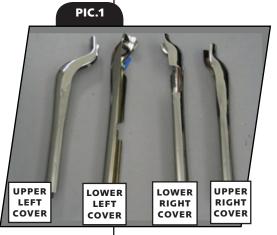

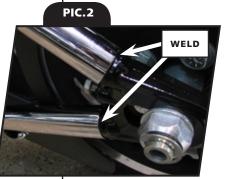

PAGE 2