



INSTALLATION

DELUXE NECK COVERS

7834

PARTS INCLUDED

- 1 Right Hand Neck Cover Assembly
- 1 Left Hand Neck Cover Assembly
- 2 Down Tube Covers
- 2 Down Tube Cover Clamps
- 1 Hardware Kit Including:
 - 4 3/8" x 1-1/2" Adhesive Foam Pads
 - 4 1/2" x 1-1/2" Adhesive Foam Pads
 - 2 5/16" Flat Washers
 - 4 #8-32 x 1/2" Socket Head Cap Screws
 - 2 5/16"-18 x 1-1/4" Button Head Cap Screws
 - 1 #10-32 x 5/8" Socket Head Cap Screw
 - 3 8" Black Cable Ties
 - 1 Alcohol Pad
- 1 Installation Instructions

Please read and understand entire instructions before starting installation.

THANK YOU FOR CHOOSING KÜRYAKYN!

IN ORDER TO PROTECT YOU AND OTHERS FROM POSSIBLE INJURY AND/OR PROPERTY DAMAGE OR LOSS, PLEASE PAY CLOSE ATTENTION TO ALL INSTRUCTIONS, WARNINGS, CAUTIONS AND NOTICES REGARDING THE USE AND CARE OF THIS PRODUCT.

WARNING

THIS INDICATION ALERTS YOU TO THE FACT THAT IGNORING THE CONTENTS DESCRIBED HEREIN CAN RESULT IN POTENTIAL DEATH OR SERIOUS INJURY.

NOTICE

This indication alerts you to the fact that ignoring the contents described herein may negatively affect product performance and functionality.

NOTICE

IF INSTALLING THIS PRODUCT FOR ANOTHER PARTY, PLEASE MAKE SURE THEY RECEIVE THIS COPY OF THE INSTALLATION INSTRUCTIONS SO THEY ARE AWARE OF THE IMPORTANT INFORMATION CONTAINED IN THEM.

TOOLS SUGGESTED

Set of Hex Wrenches, Combination Wrenches, Socket Set and Ratchet

STRICTLY OBSERVE THE FOLLOWING GUIDELINES IN ORDER TO USE THE PRODUCT PROPERLY AND AVOID POTENTIALLY DANGEROUS ACCIDENTS.

STEP 1

Read and understand all steps in the instructions before starting the installation. Park the motorcycle on a hard, level surface and turn off the ignition. Let cool.

WARNING

YOU WILL BE WORKING AROUND THE ENGINE AND EXHAUST SYSTEM DURING INSTALLATION. ENSURE THAT THE ENGINE AND EXHAUST SYSTEM HAVE FULLY COOLED TO PREVENT INJURY.

NOTICE

Avoid damage to the motorcycle. Protect painted surfaces with a soft cloth or blanket.

NOTE: Due to variations from motorcycle to motorcycle, some motorcycles may require a little extra pressure to engage the fork lock after installation of the neck covers.

CUSTOMER SERVICE

877.370.3604 (toll free)

INSTALLATION QUESTIONS

techsupport@kuryakyn.com
or call 715.247.2983

LIMITED WARRANTY

Kuryakyn warrants that any Kuryakyn products sold hereunder, shall be free of defects in materials and workmanship for a period of one (1) year from the date of purchase by the consumer excepting the following provisions:

- Kuryakyn shall have no obligation in the event the customer is unable to provide a receipt showing the date the customer purchased the product(s).
 - The product must be properly installed, maintained and operated under normal conditions.
 - Kuryakyn makes no warranty, expressed or implied, with respect to any gold plated products.
 - Kuryakyn shall not be liable for any consequential and incidental damages, including labor and paint, resulting from failure of a Kuryakyn product, failure to deliver, delay in delivery, delivery in nonconforming condition, or for any breach of contract or duty between Kuryakyn and a customer.
- Kuryakyn products are often intended for use in specific applications. Kuryakyn makes no warranty if a Kuryakyn product is used in applications other than intended.
- Kuryakyn electrical products are warranted for one (1) year from the date of purchase by the consumer. L.E.D.'S contained in components of Kuryakyn products will be warranted for defects in materials and workmanship for 3 years from the date of purchase where as all other components shall be warranted for one(1) year. This includes, but is not limited to; control modules, wiring, chrome & other components.
- Kuryakyn makes no warranty of any kind in regard to other manufacturer's products distributed by Kuryakyn. Kuryakyn will pass on all warranties made by the manufacturer and where possible, will expedite the claim on behalf of the customer, but ultimately, responsibility for disposition of the warranty claim lies with the manufacturer.

ABOUT OUR CATALOG

For purchasing Kuryakyn® products, you can receive a complete catalog free of charge. Send the Proof-of-Purchase below with your address to: Kuryakyn, P.O. Box 339, Somerset, WI 54025. Please indicate either Accessories Catalog for Harley-Davidson® or GL & Metric Cruisers.

Be sure to ask your local dealer about other Kuryakyn® products, the motorcycle parts and accessories designed for riders by riders.

©2005 Kuryakyn USA® All Rights reserved.



kuryakyn.com

- STEP 2** Cut the zip ties that secure the clutch cable to the down tube.
- STEP 3** Remove the wire loom clamp, rubber tank bolt cover, and the gas tank bolt from the right side (sitting on motorcycle) of the neck. PIC 1
- STEP 4** Remove the wire loom clamp, rubber tank bolt cover, outside air temp sensor (PIC 2) and gas tank bolt from the left side (sitting on motorcycle) of the neck. PIC 2

NOTE: Use one of the supplied cable ties to secure the outside air temp sensor up under the fairing out of harms way.

- STEP 5** Remove the reflectors from the down tubes, by moving them back and forth (they are held in place with double-sided adhesive).
- STEP 6** Snap the down tube covers into place; position them just below the weld line on the down tube.

NOTICE Ensure the area of installation is free of grease, oil, dirt or other debris including wax/polish products and bugs to ensure proper adhesion. Küryakyn WILL NOT issue a warranty on any parts lost due to improper installation.





NOTICE The adhesive will not bond correctly if applied at temperatures less than 50°F. Do not attempt this installation in temperatures less than 50°F.

- STEP 7** Install the smaller foam pads from the hardware kit on the inside of the clamp halves and the inside of the covers as shown in PIC. 3.
- STEP 8** Place the left cover on the motorcycle, and start a 5/16"-18 x 1-1/4" button socket cap screw and flat washer to secure the cover and the tank to the frame. Leave finger tight for now.
- STEP 9** Place the right cover on the motorcycle, and start a 5/16"-18 x 1-1/4" button socket cap screw and flat washer to secure the cover and the tank to the frame. Leave finger tight for now.
- STEP 10** Start the #10-32 x 5/8" socket head cap screw that secures the top of the neck covers together as shown in PIC 4.
- STEP 11** Start two 8-32 x 1/2" socket head cap screws, that secure the down tube cover clamps to the cover, on the left and right side as shown in PIC 5. Leave finger tight for now.
- STEP 12** Ensure that the wires are in the recessed area of the neck covers.

NOTICE Secure all wiring away from any moving parts, pinch points or extreme heat. Küryakyn WILL NOT issue a warranty on any electrical component that fails due to pinched, crimped, broken, abraded, melted or frayed wires.

- STEP 13** Tighten the 5/16"-18 x 1-1/4" screws that secure the covers and the tank.
- STEP 14** Tighten the #10-32 x 5/8" screw that secures the top halves of the covers together.
- STEP 15** Tighten the screws from STEP 11 that secure the down tube cover clamps to the covers.

-cont.-

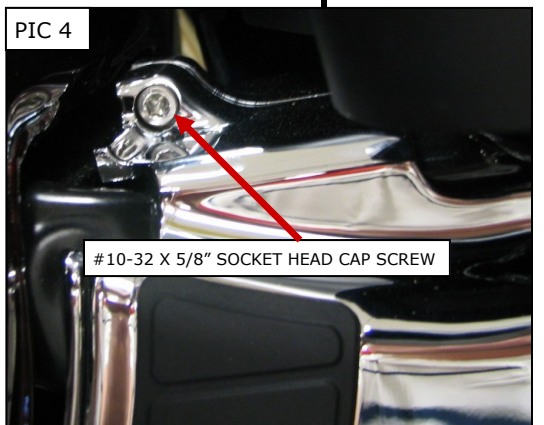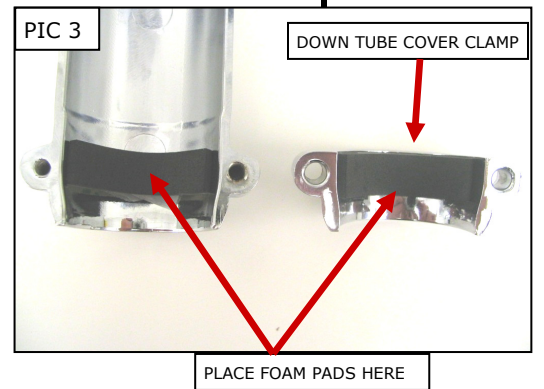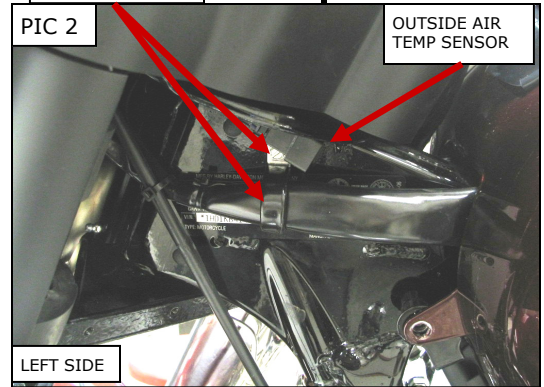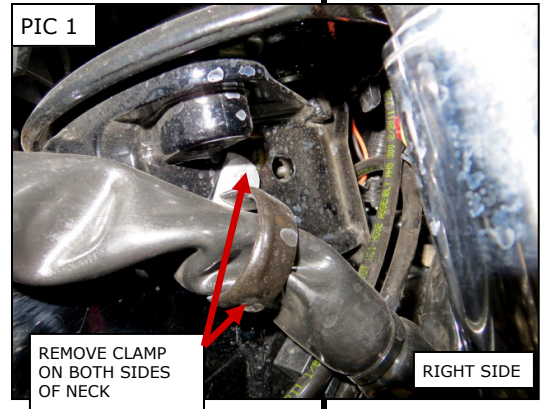

NOTE: On Road Kings STEP 16 is not performed because the clutch cable runs along the forks.

STEP 16 On the left side of the neck, secure the clutch cable to the wiring harness with an included cable tie so that the clutch cable is under the very front of the cover as shown in PIC 6.

NOTICE

When installing the neck covers on Road King models, you will need to slightly push down while tightening the top fastener. This will allow adequate clearance between the top of the neck covers and the headlight shroud when the bars are rotated all the way side to side.

STEP 17 Secure the clutch cable to the down tube in the same location that the cable tie that was removed in STEP 2 was located.

STEP 18 Slide the rubber stops on the forks as far down as they will go.

Step 19 through Step 22 are not necessary for Road King Models.

STEP 19 Clean the forks above the rubber stops with the included alcohol-cleaning pad and allow the area to dry.

NOTICE

Ensure the area of installation is free of grease, oil, dirt or other debris including wax/polish products and bugs to ensure proper adhesion. Küryakyn WILL NOT issue a warranty on any parts lost due to improper installation.

NOTICE

The adhesive will not bond correctly if applied at temperatures less than 50°F. Do not attempt this installation in temperatures less than 50°F.

STEP 20 Using the back of your fingernail, rub the adhesive backing on two of the foam pads to activate the catalyst.

NOTE: The additional foam pads are included in the hardware kit in case there are any other points of contact between the forks and neck cover when the handlebars are turned to their full stopping position.

STEP 21 Remove the adhesive backing, and place a foam pad on the right fork in the approximate location as shown in PIC. 7.

STEP 22 Remove the adhesive backing, and place a foam pad on the left fork in the approximate location as shown in PIC. 8.





STEP 23 Turn handlebars in both directions to their full stop position to make sure that the clutch cable, throttle cables, wiring or any other component of the motorcycle, is not stretched or pinched.

WARNING

ENSURE THAT THE CLUTCH CABLE, THROTTLE CABLES, WIRING OR ANY OTHER COMPONENT OF THE MOTORCYCLE IS NOT PINCHED OR STRETCHED AT ANY POINT WHEN THE HANDLEBARS ARE TURNED TO THEIR FULL STOP POSITION ON EITHER SIDE. STRETCHED OR PINCHED COMPONENTS CAN CAUSE LOSS OF CONTROL THAT COULD RESULT IN SERIOUS INJURY OR DEATH.

NOTICE

It is the installer's responsibility to ensure that all of the fasteners (including pre-assembled) are tightened before operation of the motorcycle. Küryakyn will not provide warranty coverage on products or components lost due to improper installation or lack of maintenance. Periodic inspection and maintenance are required on all fasteners.

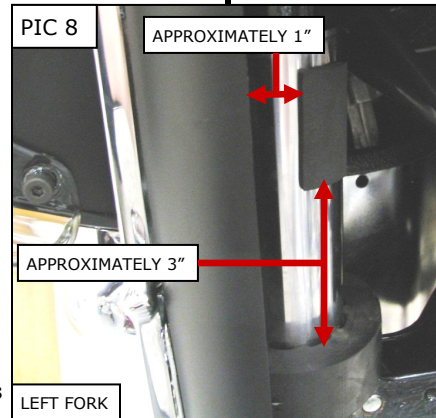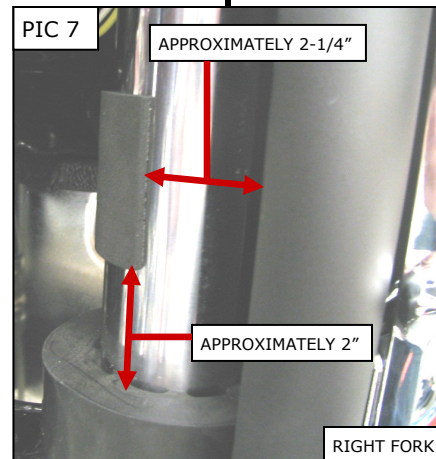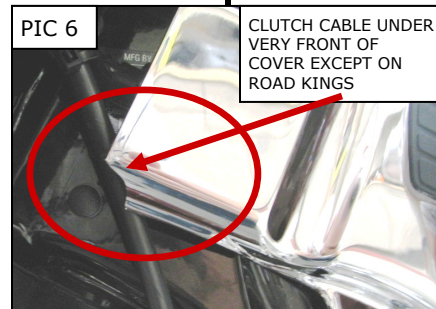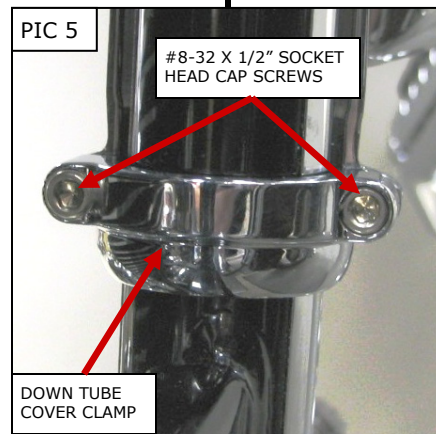

Ride On!