



INSTALLATION

NECK COVERS FOR DEUCE

7854

FITS: '00-UP DEUCE

PARTS INCLUDED

- 1 Right Neck Cover
- 1 Left Neck Cover
- 1 Hardware Kit, including:
 - 1 3/8-16 Tank Bolt (threaded on both ends)
 - 2 3/8 x .812 x .120 Spacer
 - 2 3/8-16 Acorn Nut
 - 2 3/8 Flat Washer
 - 2 #8 Lock Washer
 - 2 8-32 Acorn Nut
 - 2 Set Screw/Acorn Nut Assembly
- 1 Installation Instructions

Please read and understand entire instructions before starting installation.

THANK YOU FOR CHOOSING KÜRYAKYN!

IN ORDER TO PROTECT YOU AND OTHERS FROM POSSIBLE INJURY AND/OR PROPERTY DAMAGE OR LOSS, PLEASE PAY CLOSE ATTENTION TO ALL INSTRUCTIONS, WARNINGS, CAUTIONS AND ATTENTION NOTES REGARDING THE USE AND CARE OF THIS PRODUCT.

WARNING! THIS INDICATION ALERTS YOU TO THE FACT THAT IGNORING THE CONTENTS DESCRIBED HEREIN CAN RESULT IN POTENTIAL DEATH OR SERIOUS INJURY.

CAUTION! This indication alerts you to the fact that ignoring the contents described herein can result in potential injury or material damage.

ATTENTION! This indication alerts you to the fact that ignoring the contents described herein may negatively affect product performance and functionality.

TOOLS SUGGESTED

Set of hex wrenches, combination wrenches, socket set and ratchet

STRICTLY OBSERVE THE FOLLOWING GUIDELINES IN ORDER TO USE THE PRODUCT PROPERLY AND AVOID POTENTIALLY DANGEROUS ACCIDENTS.

PROCEDURE

STEP 1 Park the motorcycle on a hard, level surface; turn off the ignition and allow the engine to cool.

WARNING! YOU WILL BE WORKING AROUND THE ENGINE AND EXHAUST SYSTEM DURING INSTALLATION. ENSURE THAT THE ENGINE AND EXHAUST SYSTEM HAVE FULLY COOLED TO PREVENT INJURY.

-cont.-

CUSTOMER SERVICE

877.370.3604 (toll free)

INSTALLATION QUESTIONS

techsupport@kuryakyn.com
or call 715.247.2983

LIMITED WARRANTY

Kuryakyn warrants that any Kuryakyn products sold hereunder, shall be free of defects in materials and workmanship for a period of one (1) year from the date of purchase by the consumer excepting the following provisions:

- Kuryakyn shall have no obligation in the event the customer is unable to provide a receipt showing the date the customer purchased the product(s).
- The product must be properly installed, maintained and operated under normal conditions.
- Kuryakyn makes no warranty, expressed or implied, with respect to any gold plated products.
- Kuryakyn shall not be liable for any consequential and incidental damages, including labor and paint, resulting from failure of a Kuryakyn product, failure to deliver, delay in delivery, delivery in nonconforming condition, or for any breach of contract or duty between Kuryakyn and a customer.
- Kuryakyn products are often intended for use in specific applications. Kuryakyn makes no warranty if a Kuryakyn product is used in applications other than intended.
- Kuryakyn electrical products are warranted for one (1) year from the date of purchase by the consumer. Components of Kuryakyn products containing L.E.D.s will be warranted for defects in materials and workmanship for 3 years from the date of purchase.
- Kuryakyn makes no warranty of any kind in regard to other manufacturer's products distributed by Kuryakyn. Kuryakyn will pass on all warranties made by the manufacturer and where possible, will expedite the claim on behalf of the customer, but ultimately, responsibility for disposition of the warranty claim lies with the manufacturer.

ABOUT OUR CATALOG

You'll find all our innovations for H-D, GL and Metric Cruisers in our annual catalogs. Order online today—select the "CATALOGS" icon. Each Kuryakyn product comes with a Proof-of-Purchase good for a complimentary catalog. Details in packaging.

Be sure to ask your local dealer about other Kuryakyn products, the motorcycle parts and accessories designed for riders by riders.

©2005 Kuryakyn USA All Rights reserved.



STEP 2 Remove the stock bolt, washers and nut securing the front of the fuel tank to the frame. See FIG.1.

CAUTION! Avoid damage to the motorcycle. Protect painted surfaces with a soft cloth or blanket.

STEP 3 Insert the included tank bolt through the left tank flange, frame and right tank flange. Allow the fuel tank to rest on the new tank bolt for now.

STEP 4 Place one thick spacer on each of the protruding threaded ends of the tank bolt.

STEP 5 Hold the left side neck cover in place and place a thin flat washer over the threaded end of the tank bolt; loosely secure the cover with an included 3/8-16 acorn nut. Leave the acorn nut finger tight for now.

ATTENTION! Route the clutch and throttle cables on the outside of the neck covers. All other wiring will locate in the recess of the neck cover.

STEP 6 Repeat Step 5 for the right side.

STEP 7 Insert an acorn nut/set screw assembly through the top front hole in the neck covers.

STEP 8 Place a #8 lock washer over the protruding threads of the acorn nut/set screw assembly; loosely secure the covers with a #8 acorn nut. Leave the acorn nut finger tight for now.

STEP 9 Repeat STEP 7 and STEP 8 for the lower front hole in the neck covers.

STEP 10 Align the covers and tighten all of the fasteners.


ATTENTION! It is the installer's responsibility to ensure that all of the fasteners (including pre-assembled) are tightened before operation of the motorcycle. Kuryakyn will not warranty components lost due to improper installation. Periodic maintenance may be required.

STEP 11 Ensure proper clearance and operation before riding the motorcycle.

WARNING! ENSURE THAT THE CLUTCH AND THROTTLE CABLES ARE NOT PINCHED OR STRETCHED AT ANY POINT WHEN THE HANDLEBARS ARE TURNED TO THEIR FULL STOP POSITION ON EITHER SIDE. STRETCHED OR PINCHED CABLES CAN CAUSE LOSS OF CONTROL THAT COULD RESULT IN SEVERE INJURY OR DEATH.

Kuryakyn

FIG.1

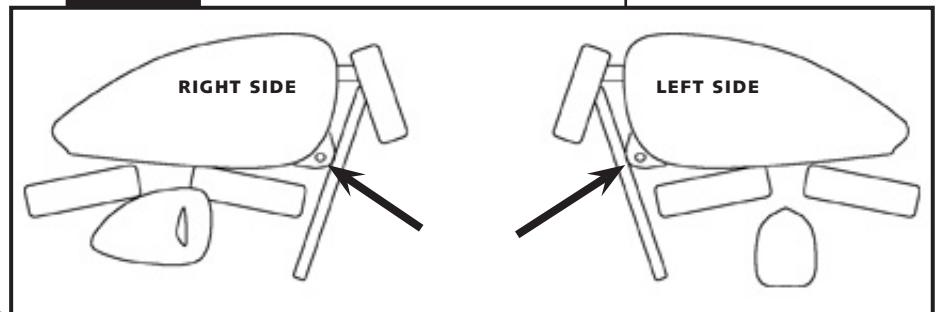

Ride On!