



NECK COVERS

8163

FOR HERITAGE, FAT BOY, AND DELUXE

FITS: '00-'06 HERITAGE, FAT BOY AND '05-'06 DELUXE

PARTS INCLUDED

- 1 Right Side Neck Cover with Pads
1 Left Side Neck Cover with Pads
1 Hardware Kit including the following:
1 Steel Hex Spacer, Chrome - Tapped #8-32
2 #8-32 x 7/16" Socket Head Cap Screw - Stainless
2 #8 Split Lock Washer - Chrome
2 3/8"-16 High Crown Acorn Nut
2 3/8" Flat Washer - Chrome
1 Tank Bolt, 3/8"-16 Thread on Both Ends
2 3/8" I.D. Tab Spacer
1 Installation Instructions

Please read and understand entire instructions before starting installation.

THANK YOU FOR CHOOSING KÜRYAKYN!

IN ORDER TO PROTECT YOU AND OTHERS FROM POSSIBLE INJURY AND/OR PROPERTY DAMAGE OR LOSS, PLEASE PAY CLOSE ATTENTION TO ALL INSTRUCTIONS, WARNINGS, CAUTIONS AND ATTENTION NOTES REGARDING THE USE AND CARE OF THIS PRODUCT.

WARNING! THIS INDICATION ALERTS YOU TO THE FACT THAT IGNORING THE CONTENTS DESCRIBED HEREIN CAN RESULT IN POTENTIAL DEATH OR SERIOUS INJURY.

CAUTION! This indication alerts you to the fact that ignoring the contents described herein can result in potential injury or material damage.

ATTENTION! This indication alerts you to the fact that ignoring the contents described herein may negatively affect product performance and functionality.

TOOLS SUGGESTED

Standard Combination Wrenches, Standard Socket Set, Standard Hex Keys, and Torque Wrench

STRICTLY OBSERVE THE FOLLOWING GUIDELINES IN ORDER TO USE THE PRODUCT PROPERLY AND AVOID POTENTIALLY DANGEROUS ACCIDENTS.

PROCEDURE

STEP 1 Remove the lower front O.E.M. tank mounting bolt, nut and washers.

STEP 2 Identify the left side cover. Insert a #8-32 socket head cap screw with a #8 split lock washer in the small hole near the top of the cover. Thread the hex spacer onto the screw, stopping just before it is tight against the inside of the cover.

CUSTOMER SERVICE
877.370.3604 (toll free)

INSTALLATION QUESTIONS
techsupport@kuryakyn.com
or call 715.247.2983

LIMITED WARRANTY

Kuryakyn warrants that any Kuryakyn products sold hereunder, shall be free of defects in materials and workmanship for a period of one (1) year from the date of purchase by the consumer excepting the following provisions:

- Kuryakyn shall have no obligation in the event the customer is unable to provide a receipt showing the date the customer purchased the product(s).
- The product must be properly installed, maintained and operated under normal conditions.
- Kuryakyn makes no warranty, expressed or implied, with respect to any gold plated products.
- Kuryakyn shall not be liable for any consequential and incidental damages, including labor and paint, resulting from failure of a Kuryakyn product, failure to deliver, delay in delivery, delivery in nonconforming condition, or for any breach of contract or duty between Kuryakyn and a customer.
- Kuryakyn products are often intended for use in specific applications. Kuryakyn makes no warranty if a Kuryakyn product is used in applications other than intended.
- Kuryakyn electrical products are warranted for one (1) year from the date of purchase by the consumer. Components of Kuryakyn products containing L.E.D.s will be warranted for defects in materials and workmanship for 3 years from the date of purchase.
- Kuryakyn makes no warranty of any kind in regard to other manufacturer's products distributed by Kuryakyn. Kuryakyn will pass on all warranties made by the manufacturer and where possible, will expedite the claim on behalf of the customer, but ultimately, responsibility for disposition of the warranty claim lies with the manufacturer.

ABOUT OUR CATALOG

You'll find all our innovations for H-D, GL and Metric Cruisers in our annual catalogs. Order online today-select the "CATALOGS" icon. Each Kuryakyn product comes with a Proof-of-Purchase good for a complimentary catalog. Details in packaging.

Be sure to ask your local dealer about other Kuryakyn products, the motorcycle parts and accessories designed for riders by riders.

©2005 Kuryakyn USA All Rights reserved.



STEP 3 Place a 3/8" flat washer on one end of the tank bolt and start a 3/8"-16 high crown acorn nut on the same end.

STEP 4 Slide the tank bolt with the flat washer and acorn nut through the larger mounting hole near the bottom of the left side cover then slide a 3/8" I.D. tab spacer onto the tank bolt until it comes to rest against the inside of the left side cover.

STEP 5 Maneuver the assembly into position, inserting the tank bolt through the fuel tank tabs and frame. Make sure any wires or fuel tank vent tubes are carefully routed through the channels or notches stamped into the covers.

STEP 6 Slide the remaining 3/8" I.D. tab spacer onto the exposed end of the tank bolt.


STEP 7 Maneuver the right side cover into position, making sure the throttle cables, fuel tank vent line, and wiring harness are routed neatly through the channels and notches stamped into the covers. Place a 3/8" flat washer on the end of the exposed tank bolt then start the remaining 3/8"-16 high crown acorn nut. Do not tighten fully at this time!

STEP 8 Install the remaining #8-32 socket head cap screw with #8 split lock washer in the small hole near the top of the right side cover. (Hint: Insert the hex key in the #8-32 screw on the left side and use it to align the hole in the hex spacer with the hole in the right side cover.)

STEP 9 Align the top edge of the covers as closely as possible then tighten both #8-32 socket head cap screws.

STEP 10 Double check to make sure all wiring, fuel tank vent lines, and throttle cables are correctly routed, then tighten the acorn nuts securing the lower front fuel tank mounts. Torque them to 18-22 ft-lbs.

FIG.1

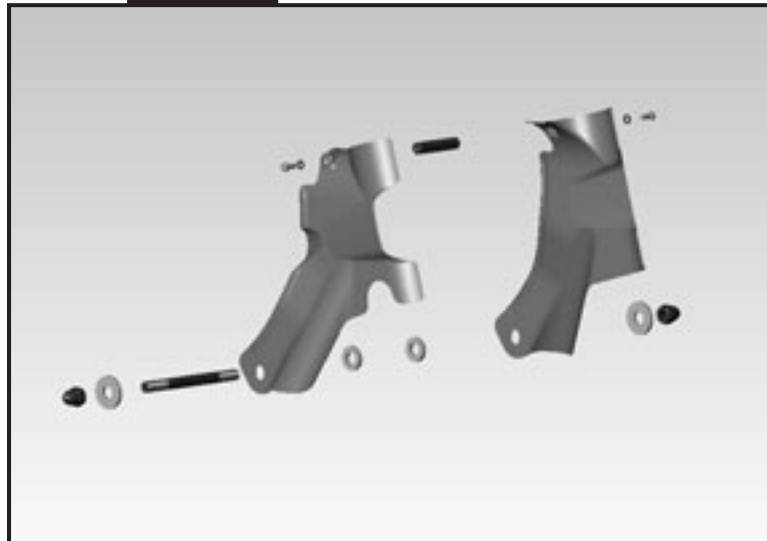

Ride On!