

INSTALLATION

DELUXE INNER PRIMARY COVER 8292

FITS '91-'05 DYNA MODELS WITH STANDARD CONTROLS

PARTS INCLUDED

- 1 Chrome Inner Primary Cover
- 1 Hardware Kit Including:
 - 2 "L" Bracket
 - 1 "Z" Bracket
 - 4 6-32 x 1/4" Slotted Pan head Screw Zinc
 - 1 1/4"-20 x 1/2" Socket Head Cap Screw Chrome
 - 1 5/16"–18 x 7/8" Hex Head Cap Screw Chrome
 - 1 5/16"-18 NTE Thin Nylock Nut Chrome
 - 1 1/4"–20 High Crown Acorn Nut
 - 2 1/4"-20 SAE Flat Washer Chrome
 - 1 1/4" Hi-Collar Lock Washer Chrome
 - 1 1/4" Medium Lock Washer, 18-8 Stainless Steel
 - 1 5/16"-18: 1/4"-20 Stand Off Stud
- 1 Installation Instructions

Please read and understand entire instructions before starting installation.

THANK YOU FOR CHOOSING KÜRYAKYN!

IN ORDER TO PROTECT YOU AND OTHERS FROM POSSIBLE INJURY AND/ OR PROPERTY DAMAGE OR LOSS, PLEASE PAY CLOSE ATTENTION TO ALL INSTRUCTIONS, WARNINGS, CAUTIONS AND ATTENTION NOTES REGARDING THE USE AND CARE OF THIS PRODUCT.

- WARNING! THIS INDICATION ALERTS YOU TO THE FACT THAT IGNORING THE CONTENTS DESCRIBED HEREIN CAN RESULT IN POTENTIAL DEATH OR SERIOUS INJURY.
- CAUTION! This indication alerts you to the fact that ignoring the contents described herein can result in potential injury or material damage.
- ATTENTION! This indication alerts you to the fact that ignoring the contents described herein may negatively affect product performance and functionality.

TOOLS SUGGESTED

3/16" Allen Socket, 7/16" Socket, 1/2" Socket, Inch and Foot Pound Torque Wrench, Flat Tip Screw Driver

STRICTLY OBSERVE THE FOLLOWING GUIDELINES IN ORDER TO USE THE PRODUCT PROPERLY AND AVOID POTENTIALLY DANGEROUS ACCIDENTS.

NOTE Not recommended for use on bikes with rear suspension lowering kits. The belt may contact the cover under heavy load or when going over bumps.

-cont.-

CUSTOMER SERVICE

. .

877.370.3604 (toll free)

INSTALLATION QUESTIONS

techsupport@kuryakyn.com or call 715.247.2983

LIMITED WARRANTY

Küryakyn warrants that any Küryakyn products sold hereunder, shall be free of defects in materials and workmanship for a period of one (1) year from the date of purchase by the consumer excepting the following provisions:

 Küryakyn shall have no obligation in the event the customer is unable to provide a receipt showing the date the customer purchased the product(s).

• The product must be properly installed, maintained and operated under normal conditions.

• Küryakyn makes no warranty, expressed or implied, with respect to any gold plated products.

 Küryakyn shall not be liable for any consequential and incidental damages, including labor and paint, resulting from failure of a Küryakyn product, failure to deliver, delay in delivery, delivery in nonconforming condition, or for any breech of contract or duty between Küryakyn and a customer.

> Küryakyn products are often intended for use in specific applications. Küryakyn makes no warranty if a Küryakyn product is used in applications other than intended.

 Küryakyn electrical products are warranted for one (1) year from the date of purchase by the consumer. Components of Küryakyn products containing L.E.D.s will be warranted for defects in materials and workmanship for 3 years from the date of purchase.

 Küryakyn makes no warranty of any kind in regard to other manufacturer's products distributed by Küryakyn. Küryakyn will pass on all warranties made by the manufacturer and where possible, will expedite the claim on behalf of the customer, but ultimately, responsibility for disposition of the warranty claim lies with the manufacturer.

ABOUT OUR CATALOG

You'll find all our innovations for H-D, GL and Metric Cruisers in our annual catalogs. Order online today-select the "CATALOGS" icon. Each Küryakyn product comes with a Proof-of-Purchase good for a complimentary catalog. Details in packaging.

Be sure to ask your local dealer about other Küryakyn products, the motorcycle parts and accessories designed for riders by riders.

©2005 Küryakyn USA All Rights reserved.



PROCEDURE

STEP 1 Fasten the "L" Brackets to the chrome cover using the four $6-32 \times 1/4$ " slotted pan head screws as shown in <u>PIC.1</u>. Then affix the "Z" bracket to the chrome cover using the 1/4"- $20 \times 1/2$ " Allen bolt, lock and flat washer as shown on the right hand side of <u>PIC.2</u> and a close up of the finished installation in <u>PIC.3</u> on the next page.

STEP 2 Remove the four fasteners from the primary cover as indicated by the arrows in <u>PIC.4</u>.

STEP 3 Install 5/16"-18 mounting stud with the stock flat washer in the location indicated by the arrow on the far left side of <u>PIC.4</u>. Torque this stud to 17 foot pounds.

STEP 4 Set Cover in place. For mounting the front edge use a flat washer, lock washer and 1/4" acorn nut. Reuse stock Allen bolts for "L" and "Z" brackets and torque to 90 inch pounds.

STEP 5 Replace the fastener at the front of the stock shift linkage with the $5/16"-18 \times 7/8"$ hex bolt and thin NTE Nylock nut. This provides additional clearance for your new inner primary cover.

ATTENTION! It is the installers' responsibility to make sure all fasteners (including pre-assembled) are tightened before operation of motorcycle. Küryakyn will not warranty components that are lost due to improper installation. Periodic maintenance may be required.

Ride On!







PIC.1

PIC.2



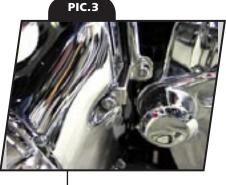

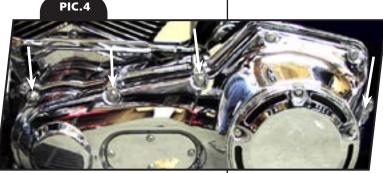



DELUXE INNER PRIMARY COVER INSTALLATION