



FRAME TRIM FOR VTX1300 8305

FITS ALL VTX1300 MODELS

PARTS INCLUDED

- 1 Right Frame Trim Assembly
- 1 Left Frame Trim Assembly
- 2 Alcohol Pad
- 1 Installation Instructions

Please read and understand entire instructions before starting installation.

THANK YOU FOR CHOOSING KÜRYAKYN!

PLEASE NOTE

It is the installers' responsibility to make sure all fasteners (including pre-assembled) are tightened before operation of motorcycle. Kuryakyn will not warranty components that are lost due to improper installation. Periodic maintenance may be required.

TOOLS SUGGESTED

Socket set and ratchet, combination wrench.



PROCEDURE — LEFT SIDE FRAME TRIM

STEP 1 Test fit the left frame trim on the bike. The hole on the trim should be centered over the chrome cap; be sure there is an even gap between the frame trim and the stock chrome engine cover. Also, pay attention to how the trim fits over the welds on the side of the frame, see PIC.1 and PIC.2.

STEP 2 Gently flex the outer edges of the frame trim to fit over the welds, if necessary. See PIC.3. Test fit the frame trim again and adjust, if necessary.

STEP 3 Use one of the supplied alcohol pads to clean the frame. Be sure to remove any grease or debris from the frame.

-cont.-

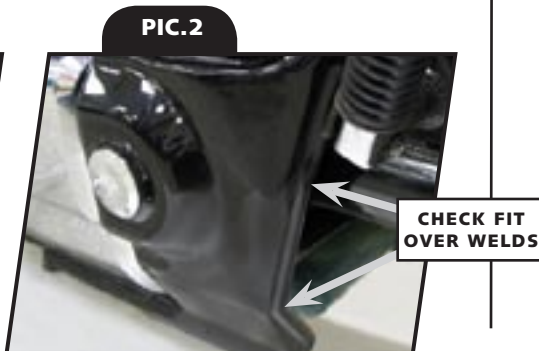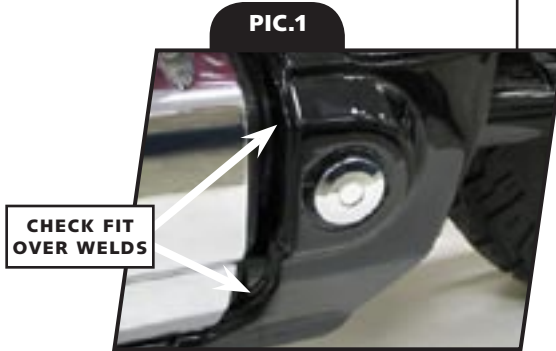

CUSTOMER SERVICE

877.370.3604 (toll free)

INSTALLATION QUESTIONS

techsupport@kuryakyn.com
or call 715.247.2983

LIMITED WARRANTY

Kuryakyn warrants that any Kuryakyn products sold hereunder, shall be free of defects in materials and workmanship for a period of one (1) year from the date of purchase by the consumer excepting the following provisions:

- Kuryakyn shall have no obligation in the event the customer is unable to provide a receipt showing the date the customer purchased the product(s).
- The product must be properly installed, maintained and operated under normal conditions.
- Kuryakyn makes no warranty, expressed or implied, with respect to any gold plated products.
- Kuryakyn shall not be liable for any consequential and incidental damages, including labor and paint, resulting from failure of a Kuryakyn product, failure to deliver, delay in delivery, delivery in nonconforming condition, or for any breach of contract or duty between Kuryakyn and a customer.
- Kuryakyn products are often intended for use in specific applications. Kuryakyn makes no warranty if a Kuryakyn product is used in applications other than intended.
- Kuryakyn electrical products are warranted for one (1) year from the date of purchase by the consumer. Components of Kuryakyn products containing L.E.D.s will be warranted for defects in materials and workmanship for 3 years from the date of purchase.
- Kuryakyn makes no warranty of any kind in regard to other manufacturer's products distributed by Kuryakyn. Kuryakyn will pass on all warranties made by the manufacturer and where possible, will expedite the claim on behalf of the customer, but ultimately, responsibility for disposition of the warranty claim lies with the manufacturer.

ABOUT OUR CATALOG

You'll find all our innovations for H-D, GL and Metric Cruisers in our annual catalogs. Order online today—select the "CATALOGS" icon. Each Kuryakyn product comes with a Proof-of-Purchase good for a complimentary catalog. Details in packaging.

Be sure to ask your local dealer about other Kuryakyn products, the motorcycle parts and accessories designed for riders by riders.

©2005 Kuryakyn USA All Rights reserved.



STEP 4 Peel the paper backing off the self-adhesive tape and press the frame trim into place. See [PIC.4](#). The tape is very sticky; be sure the hole is centered over the chrome cap and that the frame trim fits well before attempting to permanently install it. Hold the frame trim in place for 1 minute to ensure proper adhesion. Full bond strength will occur within 24 hours.

PROCEDURE — RIGHT SIDE FRAME TRIM

STEP 5 Remove the right side panel.

STEP 6 Remove the lower exhaust fasteners. See [PIC.5](#). Place a small block of wood or other non-abrasive material between the exhaust pipe and the frame. The extra space will allow you easily slide the right frame trim between the exhaust pipes and frame for installation. Be sure not to flex the exhaust pipes too far; an inch or two should give you enough clearance to install the frame trim.

STEP 7 Slide the frame trim between the exhaust pipes and up into position. See [PIC.6](#).

STEP 8 Test fit the trim against the frame. The hole in the trim should be centered over the chrome cap. Remove the frame trim and flex the edges to fit, if necessary. Check the fit again and adjust, if necessary.

STEP 9 Use one of the supplied alcohol pads to clean the frame. Be sure to remove any grease or debris from the frame.

STEP 10 Peel the paper backing off the self-adhesive tape and press the frame trim into place. See [PIC.7](#). The tape is very sticky; be sure the hole is centered over the chrome cap and that the frame trim fits well before attempting to permanently install it. Hold the frame trim in place for one minute to ensure proper adhesion. Full bond strength will occur within 24 hours.

STEP 11 Replace the right side panel on the bike. Remove the block from between the exhaust pipe and frame, then reinstall the lower exhaust fasteners. Tighten the fasteners.


Ride On!

Kuryakyn


PIC.4



PIC.5

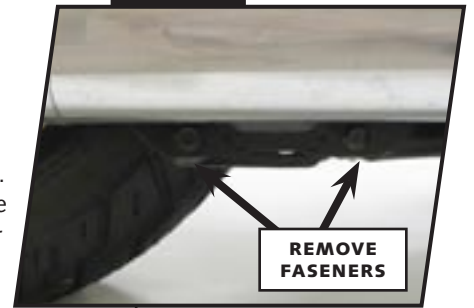

PIC.6

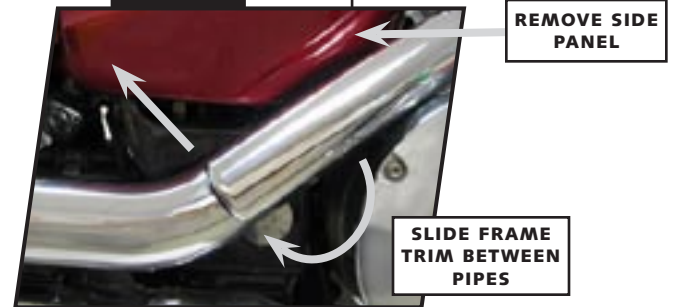

PIC.7



PAGE

2

FRAME TRIM FOR VTX1300

INSTALLATION