



MID-FRAME COVERS 8609

FITS: '09-UP ELECTRA GLIDES, ROAD GLIDES, STREET GLIDES, AND ROAD KINGS

PARTS INCLUDED

- 1 Right Hand Upper Mid-Frame Cover
1 Right Hand Lower Mid-Frame Cover
1 Left Hand Upper Mid-Frame Cover
1 Left Hand Lower Mid-Frame Cover
1 Hardware Kit Including:
2 Side Cover Grommets
4 Spacers
4 8" Cable Ties
2 Alcohol Pads
1 Installation Instructions

Please read and understand entire instructions before starting installation.

THANK YOU FOR CHOOSING KURYAKYN!

IN ORDER TO PROTECT YOU AND OTHERS FROM POSSIBLE INJURY AND/OR PROPERTY DAMAGE OR LOSS, PLEASE PAY CLOSE ATTENTION TO ALL INSTRUCTIONS, WARNINGS, CAUTIONS AND ATTENTION NOTES REGARDING THE USE AND CARE OF THIS PRODUCT.

WARNING! THIS INDICATION ALERTS YOU TO THE FACT THAT IGNORING THE CONTENTS DESCRIBED HEREIN CAN RESULT IN POTENTIAL DEATH OR SERIOUS INJURY.

ATTENTION! This indication alerts you to the fact that ignoring the contents described herein may negatively affect product performance and functionality.

TOOLS SUGGESTED

Set of Hex Wrenches, Combination Wrenches, Socket Set and Ratchet

STRICTLY OBSERVE THE FOLLOWING GUIDELINES IN ORDER TO USE THE PRODUCT PROPERLY AND AVOID POTENTIALLY DANGEROUS ACCIDENTS.

PROCEDURE

STEP 1 Read and understand all steps in the instructions before starting the installation. Park the motorcycle on a hard, level surface; turn off the ignition and allow the engine to cool.

WARNING! YOU WILL BE WORKING AROUND THE ENGINE AND EXHAUST SYSTEM DURING INSTALLATION. ENSURE THAT THE ENGINE AND EXHAUST SYSTEM HAVE FULLY COOLED TO PREVENT INJURY.

STEP 2 Remove the left and right saddlebags, and set them on a soft, clean and stable surface.

STEP 3 Remove both the left and right side-covers.

NOTE If your bike is equipped with H-D Mid Frame Air Deflectors (P/N 58002-09), remove them now and save all hardware for reinstallation.

-cont.-

CUSTOMER SERVICE 877.370.3604 (toll free)

INSTALLATION QUESTIONS techsupport@kuryakyn.com or call 715.247.2983

LIMITED WARRANTY Kuryakyn warrants that any Kuryakyn products sold hereunder, shall be free of defects in materials and workmanship for a period of one (1) year from the date of purchase by the consumer...

- Kuryakyn shall have no obligation in the event the customer is unable to provide a receipt showing the date the customer purchased the product(s).
• The product must be properly installed, maintained and operated under normal conditions.
• Kuryakyn makes no warranty, expressed or implied, with respect to any gold plated products.
• Kuryakyn shall not be liable for any consequential and incidental damages, including labor and paint, resulting from failure of a Kuryakyn product, failure to deliver, delay in delivery, delivery in nonconforming condition, or for any breach of contract or duty between Kuryakyn and a customer.
• Kuryakyn products are often intended for use in specific applications. Kuryakyn makes no warranty if a Kuryakyn product is used in applications other than intended.
• Kuryakyn electrical products are warranted for one (1) year from the date of purchase by the consumer. Components of Kuryakyn products containing L.E.D.s will be warranted for defects in materials and workmanship for 3 years from the date of purchase.
• Kuryakyn makes no warranty of any kind in regard to other manufacturer's products distributed by Kuryakyn. Kuryakyn will pass on all warranties made by the manufacturer and where possible, will expedite the claim on behalf of the customer, but ultimately, responsibility for disposition of the warranty claim lies with the manufacturer.

ABOUT OUR CATALOG

You'll find all our innovations for H-D, GL and Metric Cruisers in our annual catalogs. Order online today-select the "CATALOGS" icon. Each Kuryakyn® product comes with a Proof-of-Purchase good for a complimentary catalog. Details in packaging.

Be sure to ask your local dealer about other Kuryakyn® products, the motorcycle parts and accessories designed for riders by riders.

©2005 Kuryakyn USA® All Rights reserved.



STEP 4 Remove the left and right passenger floorboard/peg mounts from frame and set aside for reinstallation.

STEP 5 If excessively dirty, clean the mounting area with soapy water and a rag (shown in PIC 1) where the mid-frame covers will be installed. Rinse and allow the area to dry.

STEP 6 Clean the frame in the same areas with the included alcohol-cleaning pads and allow the area to dry.

STEP 7 Take the lower right mid-frame cover and dry fit it to the bike. Make any temporary light marks to make sure that you have something that you will be able to line up with when you apply the cover to your bike.

ATTENTION! Ensure the area of installation is free of grease, oil, dirt or other debris to ensure proper adhesion. Kuryakyn WILL NOT warranty any parts lost due to improper installation.

ATTENTION! The adhesive will not bond correctly if applied at temperatures less than 50°F. Do not attempt this installation in temperatures less than 50°F.

STEP 8 Using the back of your fingernail, rub the backing of the adhesive strips inside the right lower cover to activate the catalyst.

STEP 9 Remove the adhesive backing from the double-sided tape.

STEP 10 Line up the holes for the rear floorboard mount and any mark that was made and press firmly into place. Make sure you apply even pressure to achieve full contact to the frame. If needed, you can place the rear passenger board mount back on and tighten.

STEP 11 Once the lower mid-frame is in place, dry fit the top cover to find the best fitting location. Note: the top cover will over lap the bottom cover.

STEP 12 Using the back of your fingernail, rub the backing of the adhesive strips inside the right top cover to activate the catalyst.

STEP 13 Remove the adhesive backing from the double-sided tape.

STEP 14 Place the top cover on the frame; be sure to press firmly to ensure that the entire adhesive has made contact with the frame.

STEP 15 Replace the front grommet for the side cover with the new supplied grommet. (See Pic 1) This allows proper clearance for the side cover to clear the new mid-frame covers.


STEP 16 Repeat steps 2 through 15 on the left hand side.

STEP 17 If applicable, replace the H-D Mid Frame Air Deflectors removed previously. The four (4) included spacers are to be used between the Air Deflectors and the frame. Tighten with the stock hardware.

STEP 18 When all the mid-frame covers are on the bike, you can replace the side covers and the saddlebags.

ATTENTION! It is the installer's responsibility to ensure that all of the fasteners (including pre-assembled) are tightened before operation of the motorcycle. Kuryakyn will not issue a warranty on components lost due to improper installation. Periodic maintenance may be required.

PIC. 1

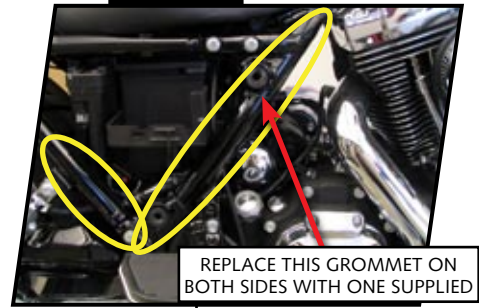

Ride On!

PAGE

2