

# INSTALLATION

### **UPPER FORK SLIDER COVERS**

8635

FITS: '96 & UP FLHT ELECTRA GLIDE STANDARD, FLHTC ELECTRA GLIDE CLASSIC, FLHTCU ULTRA CLASSIC ELECTRA GLIDE, FLHX STREET GLIDE

NOTE: Will not fit Screamin' Eagle Models

### **PARTS INCLUDED**

- 2 Upper Fork Covers with Slots
- 2 Upper Fork Covers with Studs
- 2 Fork Slider Cover Center Side Trims
- 2 Alcohol Pads
- 1 Cardboard Shim
- Installation Instructions

Please read and understand entire instructions before starting installation.

### THANK YOU FOR CHOOSING KÜRYAKYN!


IN ORDER TO PROTECT YOU AND OTHERS FROM POSSIBLE INJURY AND/OR PROPERTY DAMAGE OR LOSS, PLEASE PAY CLOSE ATTENTION TO ALL INSTRUCTIONS, WARNINGS, CAUTIONS AND ATTENTION NOTES REGARDING THE USE AND CARE OF THIS PRODUCT.

ATTENTION! This indication alerts you to the fact that ignoring the contents described herein may negatively affect product performance and functionality.

## STRICTLY OBSERVE THE FOLLOWING GUIDELINES IN ORDER TO USE THE PRODUCT PROPERLY AND AVOID POTENTIALLY DANGEROUS ACCIDENTS.

### **PROCEDURE**

- STEP 1 Read and understand all steps in the instructions before starting the installation. Park the motorcycle on a hard, level surface and turn off the ignition.
- **STEP 2** Identify each "Upper Fork Cover" half by the stud or slot. See <u>PIC. 1</u>.
- STEP 3 Taking one of each, note how they fit together in a "dry fit" on the fork. Install by mating the two halves, inserting the stud into the slot, then closing the halves together "hinging" on the stud as shown in PIC. 2. The seam with the slot & stud will be on the inside of the fork, toward the wheel, and you will wrap the covers around the fork leg toward yourself.
- STEP 4 While fitting, make sure to center the opening left by the two halves front-to-back on the fork leg. You should be able to feel when they are properly located. Holding the front cover in position, remove the rear cover and make a mark where the edge of the front cover is located so you can properly re-position it during final placement.

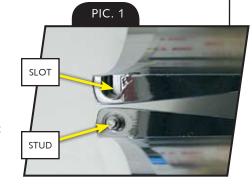

**CUSTOMER SERVICE** 

877.370.3604 (toll free)

### **INSTALLATION QUESTIONS**

techsupport@kuryakyn.com or call 715.247.2983

#### **LIMITED WARRANTY**

Küryakyn warrants that any Küryakyn products sold hereunder, shall be free of defects in materials and workmanship for a period of one (1) year from the date of purchase by the consumer excepting the following provisions:

- Küryakyn shall have no obligation in the event the customer is unable to provide a receipt showing the date the customer purchased the product(s).
  - The product must be properly installed, naintained and operated under normal conditions.
- Küryakyn makes no warranty, expressed or implied, with respect to any gold plated products.
- Küryakyn shall not be liable for any consequential and incidental damages, including labor and paint, resulting from failure of a Küryakyn product, failure to deliver, delay in delivery, delivery in nonconforming condition, or for any breech of contract or duty between Küryakyn and a customer.
  - Küryakyn products are often intended for use in specific applications. Küryakyn makes no warranty if a Küryakyn product is used in applications other than intended.
- Küryakyn electrical products are warranted for one (1) year from the date of purchase by the consumer. Components of Küryakyn products containing LE.D.s will be warranted for defects in materials and workmanship for 3 years from the date of purchase.
- Küryakyn makes no warranty of any kind in regard to other manufacturer's products distributed by Küryakyn. Küryakyn will pass on all warranties made by the manufacturer and where possible, will expedite the claim on behalf of the customer, but ultimately, responsibility for disposition of the warranty claim lies with the manufacturer.

### **ABOUT OUR CATALOG**

You'll find all our innovations for H-D, GL and Metric Cruisers in our annual catalogs. Order online today-select the "CATALOGS" icon. Each Küryakyn® product comes with a Proof-of-Purchase good for a complimentary catalog. Details in packaging.

Be sure to ask your local dealer about other Küryakyn® products, the motorcycle parts and accessories designed for riders by riders.

©2005 Küryakyn USA® All Rights reserved



-cont.-

STEP 5 Use the cardboard shim as a spacer by setting it on top of the forward half of your new covers and the lower edge of the outer fairing skirt. See PIC. 3.




OUTER

**FAIRING** SKIRT

- STEP 6 Prep mounting area with a supplied alcohol pad.
- STEP 7 Using the back of your fingernail, rub the back of the double-sided tape to activate the catalyst, and to help release the backing.
- STEP 8 Remove the tape backing from the adhesive strip. Carefully align the covers edge with the mark you made in STEP 4 and press firmly for 60 seconds, adhesive will fully cure in 24 hours.
- STEP 9 Prep mounting area with a supplied alcohol pad.
- **STEP 10** Using the back of your fingernail, rub the back of the double-sided tape to activate the catalyst, and to help release the backing.
- STEP 11 Remove the tape backing from the adhesive strip. Carefully re-align the stud & slot and "hinge" the piece forward into place, pressing firmly for 60 seconds, adhesive will fully cure in 24 hours.

ATTENTION! The adhesive will not bond correctly if applied at temperatures less than 50°F. Do not attempt this installation in temperatures less than 50°F.

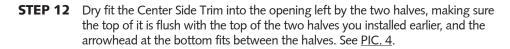

**STEP 13** Using the back of your fingernail, rub the back of the double-sided tape to activate the catalyst, and to help release the backing.


**STEP 14** Remove the tape backing press firmly into place holding for 60 seconds, adhesive will fully cure in 24 hours.

ATTENTION! The adhesive will not bond correctly if applied at temperatures less than 50°F. Do not attempt this installation in temperatures less than 50°F. FLUSH WITH

**STEP 15** Repeat all steps for other side.

Ride On!



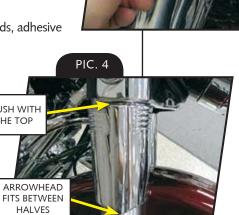

PIC. 3

THE TOP