



REAR CYLINDER BASE COVER 8656

FOR '07-UP SOFTAIL

FITS: '07-UP SOFTAIL MODELS (EXCEPT FLSTSC SOFTAIL SPRINGER CLASSIC WITH THE STOCK HEAD PIPES)

PARTS INCLUDED

- 1 Rear Cylinder Base Cover
1 Lower Post Cover
1 Upper Post Cover
1 Bracket
1 Hardware Kit, Including:
1 1/4-20 x 1 1/2" Socket Head Cap Screw
1 1/4" Flat Washer
2 10-24 x 3/8" Button Head Cap Screw
2 Alcohol Pads
1 Installation Instructions

Please read and understand entire instructions before starting installation.

THANK YOU FOR CHOOSING KÜRYAKYN!

IN ORDER TO PROTECT YOU AND OTHERS FROM POSSIBLE INJURY AND/OR PROPERTY DAMAGE OR LOSS, PLEASE PAY CLOSE ATTENTION TO ALL INSTRUCTIONS, WARNINGS, CAUTIONS AND ATTENTION NOTES REGARDING THE USE AND CARE OF THIS PRODUCT.

WARNING! THIS INDICATION ALERTS YOU TO THE FACT THAT IGNORING THE CONTENTS DESCRIBED HEREIN CAN RESULT IN POTENTIAL DEATH OR SERIOUS INJURY.

CAUTION! This indication alerts you to the fact that ignoring the contents described herein can result in potential injury or material damage.

ATTENTION! This indication alerts you to the fact that ignoring the contents described herein may negatively affect product performance and functionality.

TOOLS SUGGESTED

Set of hex wrenches

STRICTLY OBSERVE THE FOLLOWING GUIDELINES IN ORDER TO USE THE PRODUCT PROPERLY AND AVOID POTENTIALLY DANGEROUS ACCIDENTS.

PROCEDURE

STEP 1 Read and understand all steps in the instructions before starting installation. Park the motorcycle on a hard, level surface; turn off the ignition and allow the engine to cool.

WARNING! YOU WILL BE WORKING AROUND THE ENGINE AND EXHAUST SYSTEM DURING INSTALLATION. ENSURE THAT THE ENGINE AND EXHAUST SYSTEM HAVE FULLY COOLED TO PREVENT INJURY.

-cont.-

CUSTOMER SERVICE
877.370.3604 (toll free)

INSTALLATION QUESTIONS
techsupport@kuryakyn.com
or call 715.247.2983

LIMITED WARRANTY

Kuryakyn warrants that any Kuryakyn products sold hereunder, shall be free of defects in materials and workmanship for a period of one (1) year from the date of purchase by the consumer excepting the following provisions:

- Kuryakyn shall have no obligation in the event the customer is unable to provide a receipt showing the date the customer purchased the product(s).
• The product must be properly installed, maintained and operated under normal conditions.
• Kuryakyn makes no warranty, expressed or implied, with respect to any gold plated products.
• Kuryakyn shall not be liable for any consequential and incidental damages, including labor and paint, resulting from failure of a Kuryakyn product, failure to deliver, delay in delivery, delivery in non-conforming condition, or for any breach of contract or duty between Kuryakyn and a customer.
• Kuryakyn products are often intended for use in specific applications. Kuryakyn makes no warranty if a Kuryakyn product is used in applications other than intended.
• Kuryakyn electrical products are warranted for one (1) year from the date of purchase by the consumer. Components of Kuryakyn products containing L.E.D.s will be warranted for defects in materials and workmanship for 3 years from the date of purchase.
• Kuryakyn makes no warranty of any kind in regard to other manufacturer's products distributed by Kuryakyn. Kuryakyn will pass on all warranties made by the manufacturer and where possible, will expedite the claim on behalf of the customer, but ultimately, responsibility for disposition of the warranty claim lies with the manufacturer.

ABOUT OUR CATALOG

You'll find all our innovations for H-D, GL and Metric Cruisers in our annual catalogs. Order online today--select the "CATALOGS" icon. Each Kuryakyn® product comes with a Proof-of-Purchase good for a complimentary catalog. Details in packaging.

Be sure to ask your local dealer about other Kuryakyn® products, the motorcycle parts and accessories designed for riders by riders.

©2005 Kuryakyn USA® All Rights reserved.



STEP 2 Clean the area around the bottom of the support post. (See [PIC.2](#))

CAUTION! Clean only with warm water and a mild, non-abrasive soap. Some cleaning products contain harsh chemicals that can severely damage product and void warranty.

ATTENTION! Ensure the area of installation is free of grease, oil, dirt or other debris to ensure proper adhesion. Küryakyn WILL NOT issue a warranty on any parts lost due to improper installation.

STEP 3 Remove the stock hardware on the bottom of the support post. It will not be reused.

STEP 4 Using the back of your fingernail, rub the backing of the adhesive pad on the bracket to activate the catalyst, and then remove the backing.

STEP 5 Set the bracket on the bottom of the support post with the notch to the back of the bike. Press down on the bracket to ensure a snug fit. Start the 1/4-20 x 1 1/2" Socket Head Cap Screw with washer but do not fully tighten. (See [PIC. 3](#))

ATTENTION! The adhesive will not bond correctly if applied at temperatures less than 50°F. Do not attempt this installation in temperatures less than 50°F.

STEP 6 Clean the front of the support post with the provided alcohol pads.

STEP 7 Using the back of your fingernail, rub the backing of the adhesive pad on the back of the lower post cover to activate the catalyst, and then remove the backing.

ATTENTION! The adhesive will not bond correctly if applied at temperatures less than 50°F. Do not attempt this installation in temperatures less than 50°F.

STEP 8 Slide the bottom of the post cover to the inside of the bracket on the socket head cap screw started in step 4. Apply pressure to the cover securing it to the post. Tighten the cap screw after the post cover is secure.

CAUTION! Cover will have to slide behind the O2 sensor wire. Use caution when moving the wires to prevent any damage to the wire or casing.

STEP 9 Clean the top of the post with the alcohol pad.

STEP 10 Using the back of your fingernail, rub the backing of the adhesive pad to activate the catalyst, and then remove the backing.




STEP 11 Slide cover on to the post with the bottom rib resting just on top of the lower post cover. Press firmly until the cover is secure.

STEP 12 With both post covers securely on, you can install the rear cylinder base cover. Slide the cover into place with the rear held slightly higher to ensure proper clearance.

STEP 13 Use the two 10-24 x 3/8" Button Head Cap Screws to secure the base cover.

ATTENTION! It is the installer's responsibility to ensure that all of the fasteners (including pre-assembled) are tightened before operation of the motorcycle. Küryakyn will not warranty components lost due to improper installation. Periodic maintenance may be required.

Küryakyn[®]

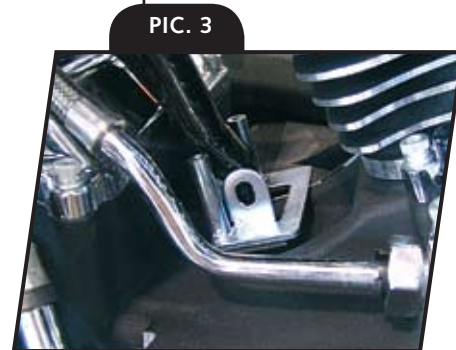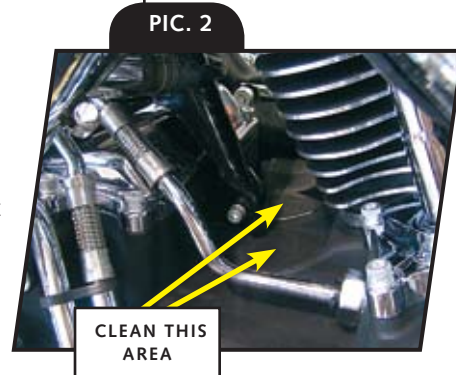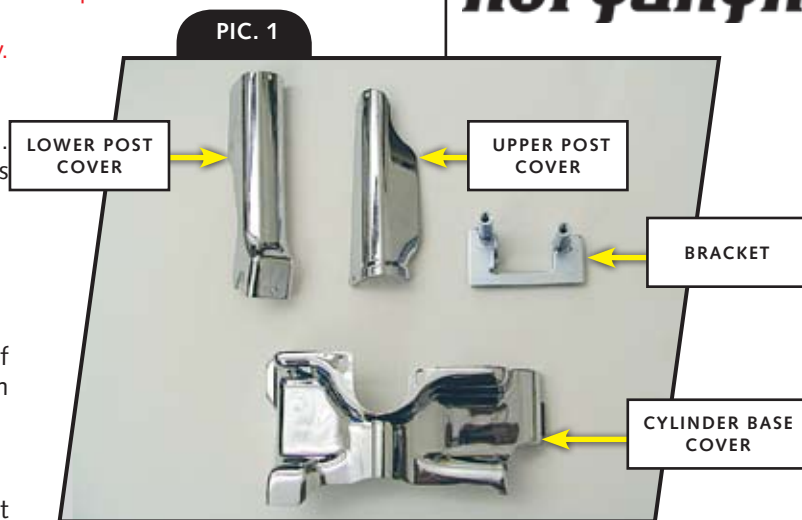

PAGE

2

Ride On!

REAR CYLINDER BASE COVER

INSTALLATION