



FOOTPEG ADAPTERS 8802

FOR CRUISERS AND SPORT BIKES

FITS: METRIC CRUISER MODELS

REAR MOUNTS

HONDA: '02-UP VTX 1800 (ALL MODELS), '97-'04 VALKYRIE, '03-UP VTX 1300 (ALL MODELS), '99-'02 1100 AERO, '97-'03 1100 ACE TOURER, 1100 SHADOW (VT1100C), '00-UP 750 SPIRIT/ACE, '04-UP 750 AERO, '96-'04 750 MAGNA, '96-'07 600 VLX, '96-'07 600 VLX DELUXE

SUZUKI: '01-'04 VOLUSIA 800

FRONT MOUNTS

YAMAHA: '08-UP RAIDER

SPORT BIKE MODELS

YAMAHA: '99-UP YZF R-6/R-6S/600R '00-UP, YZF R-1/1000R '01-UP, FZ-1/1000

PARTS INCLUDED

- 2 Peg Adapters
1 Hardware Kit, Including:
2 10-32 x 3/8 Set Screws
2 5/16-18 x 1 1/2 Button Head Cap Screws
2 5/16-18 Nylon Inserts
2 .245 x .325 x .75 Spacers
6 "D" Spring Washers
1 Installation Instructions

Please read and understand entire instructions before starting installation.

THANK YOU FOR CHOOSING KÜRYAKYN!

IN ORDER TO PROTECT YOU AND OTHERS FROM POSSIBLE INJURY AND/OR PROPERTY DAMAGE OR LOSS, PLEASE PAY CLOSE ATTENTION TO ALL INSTRUCTIONS, WARNINGS, CAUTIONS AND ATTENTION NOTES REGARDING THE USE AND CARE OF THIS PRODUCT.

CAUTION! This indication alerts you to the fact that ignoring the contents described herein can result in potential injury or material damage.

ATTENTION! This indication alerts you to the fact that ignoring the contents described herein may negatively affect product performance and functionality.

TOOLS SUGGESTED FOR CRUISERS

Set of hex wrenches, and a set of combination wrenches.

TOOLS SUGGESTED FOR SPORT BIKES

Set of hex wrenches, combination wrenches, locking pliers, drill, 1/4" drill bit, safety glasses.

STRICTLY OBSERVE THE FOLLOWING GUIDELINES IN ORDER TO USE THE PRODUCT PROPERLY AND AVOID POTENTIALLY DANGEROUS ACCIDENTS.

-cont.-



CUSTOMER SERVICE
877.370.3604 (toll free)

INSTALLATION QUESTIONS
techsupport@kuryakyn.com
or call 715.247.2983

LIMITED WARRANTY

Kuryakyn warrants that any Kuryakyn products sold hereunder, shall be free of defects in materials and workmanship for a period of one (1) year from the date of purchase by the consumer excepting the following provisions:

- Kuryakyn shall have no obligation in the event the customer is unable to provide a receipt showing the date the customer purchased the product(s).
• The product must be properly installed, maintained and operated under normal conditions.
• Kuryakyn makes no warranty, expressed or implied, with respect to any gold plated products.
• Kuryakyn shall not be liable for any consequential and incidental damages, including labor and paint, resulting from failure of a Kuryakyn product, failure to deliver, delay in delivery, delivery in nonconforming condition, or for any breach of contract or duty between Kuryakyn and a customer.
• Kuryakyn products are often intended for use in specific applications. Kuryakyn makes no warranty if a Kuryakyn product is used in applications other than intended.
• Kuryakyn electrical products are warranted for one (1) year from the date of purchase by the consumer. Components of Kuryakyn products containing L.E.D.s will be warranted for defects in materials and workmanship for 3 years from the date of purchase.
• Kuryakyn makes no warranty of any kind in regard to other manufacturer's products distributed by Kuryakyn. Kuryakyn will pass on all warranties made by the manufacturer and where possible, will expedite the claim on behalf of the customer, but ultimately, responsibility for disposition of the warranty claim lies with the manufacturer.

ABOUT OUR CATALOG

You'll find all our innovations for H-D, GL and Metric Cruisers in our annual catalogs. Order online today--select the "CATALOGS" icon. Each Kuryakyn® product comes with a Proof-of-Purchase good for a complimentary catalog. Details in packaging.

Be sure to ask your local dealer about other Kuryakyn® products, the motorcycle parts and accessories designed for riders by riders.

©2005 Kuryakyn USA® All Rights reserved.



PROCEDURE FOR METRIC CRUISERS

- STEP 1** Read and understand all steps in the instructions before starting the installation. Park the motorcycle on a hard, level surface and turn off the ignition.
- STEP 2** Remove the hardware that is securing the stock peg on to the bike. Remove the stock peg. Set aside the stock hardware, it may be reused depending on the application.
- STEP 3** Take the new peg adapter and determine if you will need to use the supplied spacer (see [PIC. 3](#)) to prevent excessive slack in the peg adapter. If you use the spacer (see [PIC. 3](#)), you will need to reuse your stock mounting hardware.
- STEP 4** Some applications you will not need to use the spacer. If the spacer is not reused you can use the provided 5/16-18 x 1 1/2 Button Head Cap Screw mounting hardware.
- STEP 5** Once you have determined the proper mounting hardware, put the 10-32 x 3/8 Setscrew in the back of the peg adapter.
- STEP 6** Reinstall peg adapter on the bike and use the supplied "D" Spring Washer(s) to take up the remaining slack and to make the peg snug when put in an upright position.
- STEP 7** Once on the bike you can turn-out the setscrew to raise the peg or turn-in the setscrew to lower the peg angle.

ATTENTION! It is the installer's responsibility to ensure that all of the fasteners (including pre-assembled) are tightened before operation of the motorcycle. Kuryakyn will not issue a warranty on components lost due to improper installation. Periodic maintenance may be required.

PROCEDURE FOR YAMAHA SPORT BIKES

- STEP 1** Read and understand all steps in the instructions before starting the installation. Park the motorcycle on a hard, level surface and turn off the ignition.


CAUTION! Larger footpegs may limit cornering clearance.

- STEP 2** Locate the area of the peg that needs to be drilled. See [PIC. 1](#).
- STEP 3** Wearing your safety glasses, use the drill and 1/4" drill bit to drill the rivet head off. See [PIC. 2](#).
- NOTE:** You may need to hold the top side of the rivet with locking pliers to prevent the rivet from spinning.
- STEP 4** With the rivet drilled out, remove the pin and slide the peg out of the mount.
- STEP 5** Install the new Footpeg Adapter with the provided hardware. Refer to [PIC. 3](#) for location of hardware.
- STEP 6** When you have the adapter tight, you can set the height of the peg by turning-in or turning-out the setscrew.

ATTENTION! It is the installer's responsibility to ensure that all of the fasteners (including pre-assembled) are tightened before operation of the motorcycle. Kuryakyn will not issue a warranty on components lost due to improper installation. Periodic maintenance may be required.

Kuryakyn®


PIC. 1

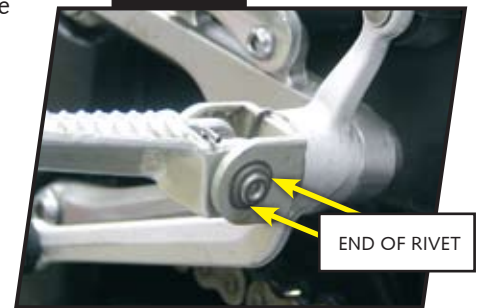

PIC. 2



PIC. 3

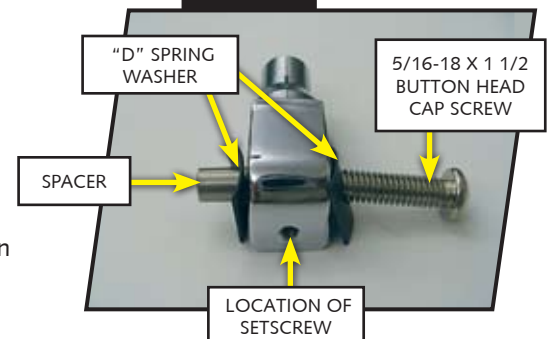

Ride On!

PAGE

2