



REAR PEG ADAPTER

8823

FITS: REAR APPLICATIONS FOR ALL SUZUKI '05-UP BOULEVARD C50 AND M50

PARTS INCLUDED

- 2 Peg Adapters
- 2 Spacers
- 4 D-Spring Washers
- 2 #10-32 x 1/2" Stainless Steel Screws
- 1 Installation Instructions

Please read and understand entire instructions before starting installation.

THANK YOU FOR CHOOSING KÜRYAKYN!

IN ORDER TO PROTECT YOU AND OTHERS FROM POSSIBLE INJURY AND/OR PROPERTY DAMAGE OR LOSS, PLEASE PAY CLOSE ATTENTION TO ALL INSTRUCTIONS, WARNINGS, CAUTIONS AND ATTENTION NOTES REGARDING THE USE AND CARE OF THIS PRODUCT.

WARNING! THIS INDICATION ALERTS YOU TO THE FACT THAT IGNORING THE CONTENTS DESCRIBED HEREIN CAN RESULT IN POTENTIAL DEATH OR SERIOUS INJURY.

CAUTION! This indication alerts you to the fact that ignoring the contents described herein can result in potential injury or material damage.

ATTENTION! This indication alerts you to the fact that ignoring the contents described herein may negatively affect product performance and functionality.

TOOLS SUGGESTED

Set of hex wrenches, pliers.

STRICTLY OBSERVE THE FOLLOWING GUIDELINES IN ORDER TO USE THE PRODUCT PROPERLY AND AVOID POTENTIALLY DANGEROUS ACCIDENTS.

PROCEDURE

STEP 1 Park the motorcycle on a hard, level surface; turn off the ignition and allow the engine to cool.

WARNING! YOU WILL BE WORKING AROUND THE ENGINE AND EXHAUST SYSTEM DURING INSTALLATION. ENSURE THAT THE ENGINE AND EXHAUST SYSTEM HAVE FULLY COOLED TO PREVENT INJURY.

STEP 2 Remove the hardware securing the footpeg to the footpeg mount; set it aside, it will be re-used.

STEP 3 Remove the existing footpegs from the mounts and set them aside, they will not be re-used.

-cont.-

8823-11MC-1007

CUSTOMER SERVICE

877.370.3604 (toll free)

INSTALLATION QUESTIONS

techsupport@kuryakyn.com
or call 715.247.2983

LIMITED WARRANTY

Kuryakyn warrants that any Kuryakyn products sold hereunder, shall be free of defects in materials and workmanship for a period of one (1) year from the date of purchase by the consumer excepting the following provisions:

- Kuryakyn shall have no obligation in the event the customer is unable to provide a receipt showing the date the customer purchased the product(s).
- The product must be properly installed, maintained and operated under normal conditions.
- Kuryakyn makes no warranty, expressed or implied, with respect to any gold plated products.
- Kuryakyn shall not be liable for any consequential and incidental damages, including labor and paint, resulting from failure of a Kuryakyn product, failure to deliver, delay in delivery, delivery in nonconforming condition, or for any breach of contract or duty between Kuryakyn and a customer.
- Kuryakyn products are often intended for use in specific applications. Kuryakyn makes no warranty if a Kuryakyn product is used in applications other than intended.
- Kuryakyn electrical products are warranted for one (1) year from the date of purchase by the consumer. Components of Kuryakyn products containing L.E.D.s will be warranted for defects in materials and workmanship for 3 years from the date of purchase.
- Kuryakyn makes no warranty of any kind in regard to other manufacturer's products distributed by Kuryakyn. Kuryakyn will pass on all warranties made by the manufacturer and where possible, will expedite the claim on behalf of the customer, but ultimately, responsibility for disposition of the warranty claim lies with the manufacturer.

ABOUT OUR CATALOG

You'll find all our innovations for H-D, GL and Metric Cruisers in our annual catalogs. Order online today—select the "CATALOGS" icon. Each Kuryakyn product comes with a Proof-of-Purchase good for a complimentary catalog. Details in packaging.

Be sure to ask your local dealer about other Kuryakyn products, the motorcycle parts and accessories designed for riders by riders.

©2005 Kuryakyn USA All Rights reserved.



STEP 4 Test fit the tube spacer over the removed OEM footpeg mounting pin.

NOTE The spacer may not be needed in some applications.

STEP 5 If the spacer fits over the mounting pin, insert an included spacer in one of the Splined Adapter Mounts as shown in PIC.1. The spacer is press fit.

STEP 6 Thread a #10-32 x 1/2 SSS into the hole in the Adapter mount as shown in PIC.1. Install flush with the back of the adapter.

NOTE The four "D" Spring Washers have been included to take up excessive freeplay and add tension for folding pegs in the "up position". Install the "D" Spring Washers on either side of the Splined Adapter Mount with the flat of the "D" facing inboard.

STEP 7 Install the Adapter Mount in the footpeg or floorboard mount on the motorcycle using the hardware removed in STEP 2.

STEP 8 Adjust the angle of the adapter mount. Turn the set screw counterclockwise for a high angle and clockwise for a flatter angle.

STEP 9 Install the new footpeg on the Adapter Mount. Refer to the instructions included with the new footpegs for more information.

ATTENTION! The serrations on the adapter will "bite" into the footpeg. Test fit and fold up the footpeg before tightening.

ATTENTION! It is the installer's responsibility to ensure that all of the fasteners (including pre-assembled) are tightened before operation of the motorcycle. Kuryakyn will not warranty components lost due to improper installation. Periodic maintenance may be required.


STEP 10 Repeat STEP 2 through STEP 9 for the other side.

CAUTION! Ensure that the installation of this product does not interfere with the proper operation of the motorcycle before riding.

WARNING! IMPROPER INSTALLATION OR USE OF THIS PRODUCT COULD RESULT IN SERIOUS INJURY OR DEATH.

Ride On!

Kuryakyn

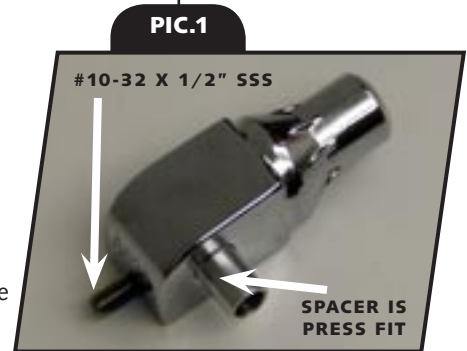

PAGE

2

REAR PEG ADAPTER INSTALLATION