

INSTALLATION

BRAKE PEDAL COVER

8858

PARTS INCLUDED

1 Brake Pedal Cover Assembly Including:

1 Top Cage

1 Bottom Cage

1 Top Rubber

4 #10-24 x 1/2 Button Socket Cap Screw with Patch

1 Double Sided Adhesive Tape

1 Installation Instructions

Please read and understand entire instructions before starting installation.

THANK YOU FOR CHOOSING KÜRYAKYN!

IN ORDER TO PROTECT YOU AND OTHERS FROM POSSIBLE INJURY AND/OR PROPERTY DAMAGE OR LOSS, PLEASE PAY CLOSE ATTENTION TO ALL INSTRUCTIONS, WARNINGS, CAUTIONS AND ATTENTION NOTES REGARDING THE USE AND CARE OF THIS PRODUCT.

WARNING! THIS INDICATION ALERTS YOU TO THE FACT THAT IGNORING

THE CONTENTS DESCRIBED HEREIN CAN RESULT IN

POTENTIAL DEATH OR SERIOUS INJURY.

ATTENTION! This indication alerts you to the fact that ignoring the contents

described herein may negatively affect product performance and

functionality.

CAUTION! This indication alerts you to the fact that ignoring the contents

described herein can result in potential injury or material

damage.

TOOLS SUGGESTED

Set of Hex Wrenches

STRICTLY OBSERVE THE FOLLOWING GUIDELINES IN ORDER TO USE THE PRODUCT PROPERLY AND AVOID POTENTIALLY DANGEROUS ACCIDENTS.

STEP 1 Read and understand all steps in the instructions before starting the

installation. Park the motorcycle on a hard, level surface and turn off the

ignition. Let cool.

WARNING! YOU WILL BE WORKING AROUND THE ENGINE AND EXHAUST

SYSTEM DURING INSTALLATION. ENSURE THAT THE ENGINE

AND EXHAUST SYSTEM HAVE FULLY COOLED TO PREVENT

INJURY.

CAUTION! Ensure that the installation of this product does not interfere

with the proper operation of the motorcycle before riding.

CUSTOMER SERVICE

877.370.3604 (toll free)

INSTALLATION QUESTIONS

techsupport@kuryakyn.com or call 715.247.2983

LIMITED WARRANTY

Küryakyn warrants that any Küryakyn products sold hereunder, shall be free of defects in materials and workmanship for a period of one (1) year from the date of purchase by the consumer excepting the following provisions:

- Küryakyn shall have no obligation in the event the customer is unable to provide a receipt showing the date the customer purchased the product(s).
 - •The product must be properly installed, maintained and operated under normal conditions.
 - Küryakyn makes no warranty, expressed or implied, with respect to any gold plated products.
- •Küryakyn shall not be liable for any consequential and incidental damages, including labor and paint, resulting from failure of a Küryakyn product, failure to deliver, delay in delivery, delivery in nonconforming condition, or for any breech of contract or duty between Küryakyn and a customer.
- Küryakyn products are often intended for use in specific applications. Küryakyn makes no warranty if a Küryakyn product is used in applications other than intended.
- •Küryakyn electrical products are warranted for one (1) year from the date of purchase by the consumer. L.E.D.'S contained in components of Küryakyn products will be warranted for defects in materials and workmanship for 3 years from the date of purchase where as all other components shall be warranted for one(1) year. This includes, but is not limited to; control modules, wiring, chrome & other components.
- •Küryakyn makes no warranty of any kind in regard to other manufacturer¹s products distributed by Küryakyn. Küryakyn will pass on all warranties made by the manufacturer and where possible, will expedite the claim on behalf of the customer, but ultimately, responsibility for disposition of the warranty claim lies with the manufacturer.

ABOUT OUR CATALOG

For purchasing Küryakyn® products, you can receive a complete catalog free of charge.

Send the Proof-of-Purchase below with your address to: Küryakyn, P.O. Box 339, Somerset, WI 54025.

Please indicate either Accessories Catalog for Harley-Davidson® or GL & Metric Cruisers.

Be sure to ask your local dealer about other Küryakyn® products, the motorcycle parts and accessories designed for riders by riders.

©2005 Küryakyn USA® All Rights reserved.






- STEP 2 Peel back and remove the OEM rubber brake pad.
- STEP 3 Thoroughly clean the brake pedal with an ammonia based cleaner such as window cleaner. Let dry completely. Place adhesive tape centered on OEM brake pedal. See PIC.1.
- ATTENTION! Ensure the area of installation is free of grease, oil, dirt or other debris to ensure proper adhesion. Küryakyn WILL NOT issue a warranty on any parts lost due to improper installation.



ATTENTION! The adhesive will not bond correctly if applied at temperatures less than 50°F. Do not attempt this installation in temperatures less than 50°F.

- STEP 4 Remove protective coating from tape so rubber pad will adhere to it.
- STEP 5 Place bottom cover in place. Fold pedal up and slide bottom cover back and forth to see where it needs to be so contact will not occur with brake arm.

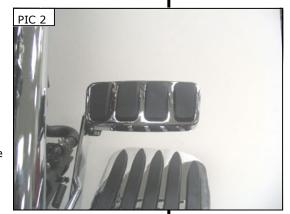

- STEP 6 Place rubber pad in place so it is lined up with bottom cover. Do not press down on rubber pad. It may need to be able to move slightly.
- STEP 7 Place top cover over rubber insert then secure with the supplied four #10-24 x 1/2" Button Socket Cap Screws.

ATTENTION! It is the installer's responsibility to ensure that all of the fasteners (including pre-assembled) are tightened before operation of the motorcycle. Küryakyn will not issue a warranty on components lost due to improper installation. Periodic maintenance may be required.

Ride On!

PAGE