



**INSTALLATION INSTRUCTIONS**  
 For Assorted Footrest Bracket BAGS used to install  
 Footrests to the National Cycle Comfort Bars,  
 P4015-002 Steel with Ecoat and Black Powder Finish  
 P4014-003 Stainless Steel with Electropolish Finish


Thank you for purchasing a National Cycle product. Read these instructions carefully and thoroughly before beginning work. Dealers, if installing this wind-screen for a customer, please give them this manual upon completion. It contains information needed to properly maintain and use this product.

Please check the contents of this Kit with the Parts List. Report any discrepancies to National Cycle, Inc. Please include the date on the outside of the package, and your place of purchase. Thank you.

	<b>Attention:</b> Special notes and cautionary measures which can prevent damage to the accessory or motorcycle.		<b>Note:</b> Tips for facilitation of operation, control and adjustment, as well as maintenance work.
--	---	--	--

**CONTENTS OF BAGS**

ITEM	PART NUMBER BAG#4015-76mm	PART NUMBER BAG#4015-38mm	DESCRIPTION <u>Black</u>	QTY.	TOOLS / NOTES
1	37-374377-000	37-374376-000	Bracket, <b>Black</b>	2	
2	51-517222-000	51-517222-000	Screw M12 x 25	2	6mm Hex Wrench
3	49-490464-000	49-490464-000	Washer, Flat	2	
4	49-491502-000	49-491502-000	Washer, Split	2	
	PART NUMBER BAG#4014-76mm	PART NUMBER BAG#4014-38mm	DESCRIPTION <u>Silver Electropolish</u>	QTY.	TOOLS / NOTES
5	37-374373-000	37-374372-000	Bracket, <b>Silver Electropolish</b>	2	
2	51-517222-000	51-517222-000	Screw M12 x 25	2	6mm Hex Wrench
3	49-490464-000	49-490464-000	Washer, Flat	2	
4	49-491502-000	49-491502-000	Washer, Split	2	

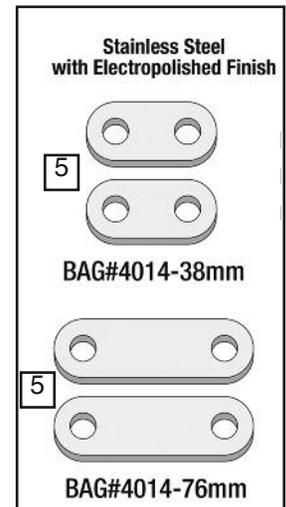

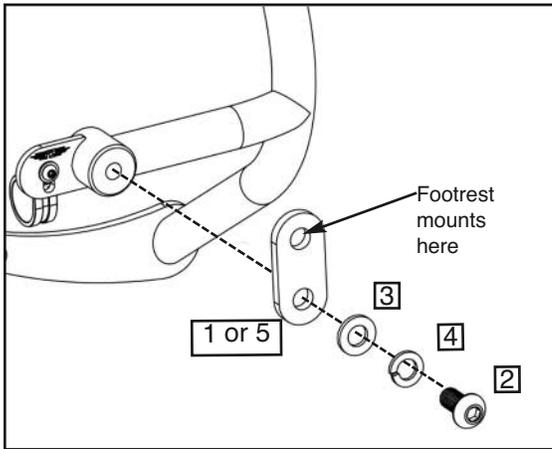


Figure 1

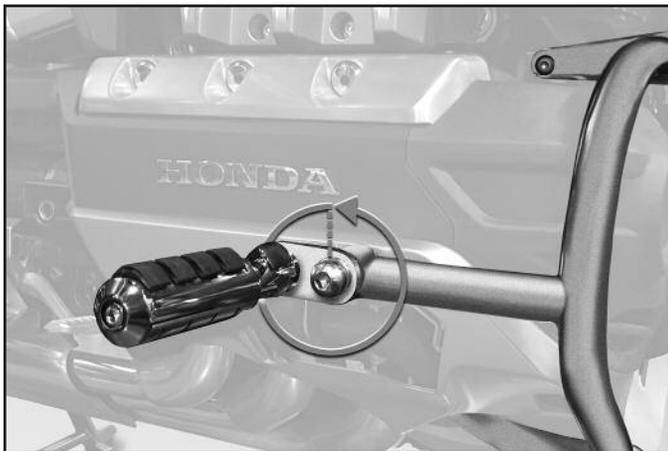


Figure 2

## PREPARATION

1. Position motorcycle securely on its center stand or lift.

## INSTALLATION

1. Use the fasteners included with your Footrest(s) to install the pair to the National Cycle Bracket(s) (1) or (5). When finished, you will have left and right assemblies.

2. Use the fasteners included in the supplied BAG to install the left and right Footrest assemblies to the Comfort Bar at your desired position. **(6mm Hex Wrench) Figure 1 and 2**

## Additional GL1800 Accessories National Cycle VSTREAM® Windscreens

- Made from tough 4.5mm Quantum® hardcoated polycarbonate
- Outstanding clarity, unbeatable impact strength and unsurpassed scratch resistance

### Part No.

N20022, Low, Light Tint  
Height, 17.75" (45.1cm)

N20023, Mid, Clear  
Height, 19.75" (50.1cm)

N20024, Tall, Clear  
Height, 21.75" (55.2cm)

All polycarbonate windscreens from National Cycle are made in the U.S.A. and protected by a 3-Year Warranty against breakage.

Contact your Honda Dealer or National Cycle,  
[www.nationalcycle.com](http://www.nationalcycle.com) • [info@nationalcycle.com](mailto:info@nationalcycle.com)

