


# SHAD

## SUZUKI V-STROM 650 '17-'18

SOVS68IF

**3P**  
SYSTEM

DESIGNED IN  
BARCELONA

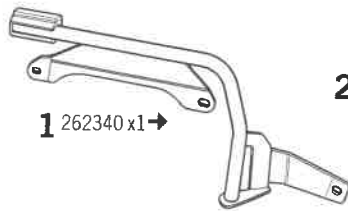

1 262340 x1 →



2 260821 x4  
Ø14 Ø9 x 22




3 304221 x4  
M6 x 45 Din 7380



4 303017 x4  
Ø6



6 260648 x2  
Ø15 Ø9 x 5

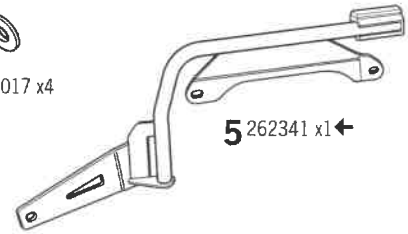

5 262341 x1 ←

### ! WARNING!


**(B)** Do not fully tighten the screws until it is ensured that the KIT is correctly attached and aligned.

**(E)** No apretar los tornillos de todo hasta asegurarse que el KIT está correctamente colocado y alineado.

**(D)** Ziehen Sie die Schrauben nicht ganz fest, bevor Sie sich nicht vergewissert haben, daß der Bausatz korrekt eingestellt und ausgerichtet ist.

**(I)** Non stringere del tutto le viti fin tanto non si è sicuri che il kit è collocato correttamente e allineato.

**(F)** Ne pas serrer les vis avant d'être sûr que le KIT est correctement monté et ajusté.

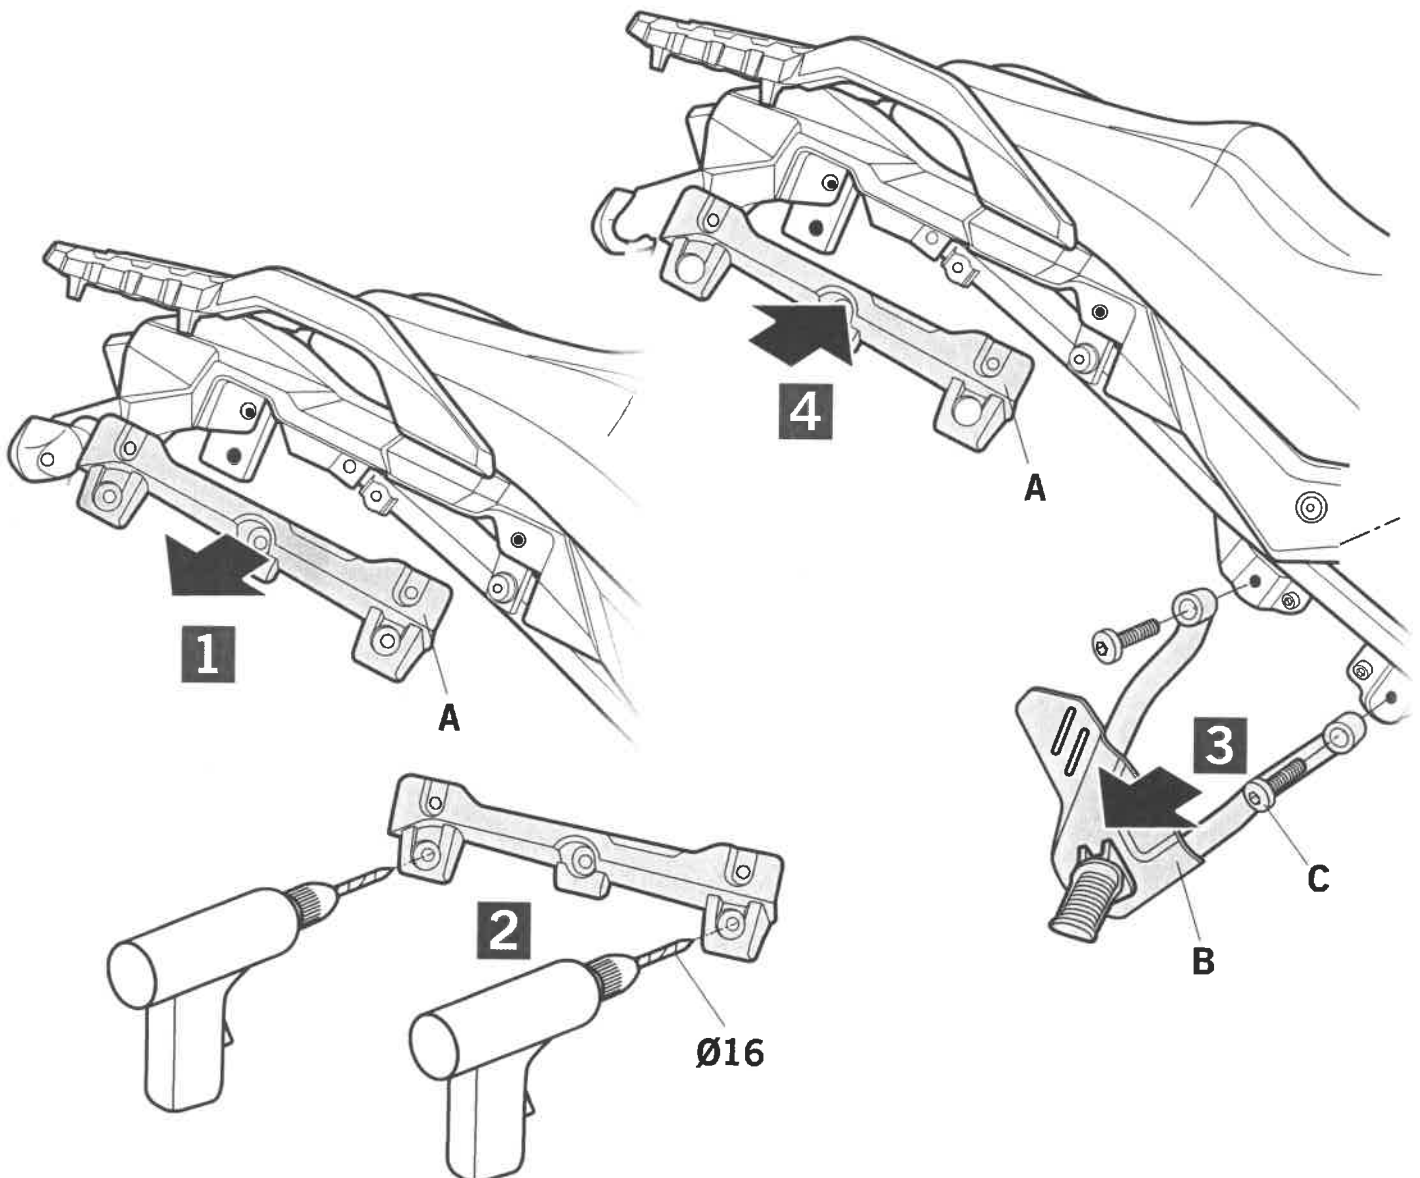

**IMPORTANT:** Based on European models.  
For compatibility with models in other continents, check [www.shad.es](http://www.shad.es)

