


SHAD

YAMAHA MT 10 '16 KIT TOP YOMT16ST

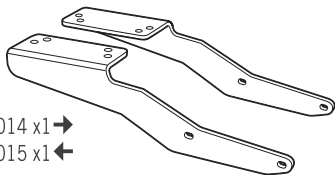

1 262014 x1 →
262015 x1 ←



2 260648 x2
Ø16 Ø9 x5



3 303045 x4
Ø8



4 304036 x2
M8 x 45 Din 7380



5 260523 x2
Ø16 Ø9 x25



6 304170 x2
M8 x 60 Din 7380

! WARNING!

GB

Do not fully tighten the screws until it is ensured that the KIT is correctly attached and aligned.

E

No apretar los tornillos del todo hasta asegurarse que el KIT está correctamente colocado y alineado.

D

Ziehen Sie die Schrauben nicht ganz fest, bevor Sie sich nicht vergewissert haben, daß der Bausatz korrekt eingestellt und ausgerichtet ist.

I

Non stringere del tutto le viti fin tanto non si è sicuri che il kit è collocato correttamente e allineato.

F

Ne pas serrer les vis avant d'être sûr que le KIT est correctement monté et ajusté.

ATTENTION: For a full equip assembly, mount the Top Master system before the 3P system.

