

INSTALLATION INSTRUCTIONS

SWITCH HOUSINGS FOR TOURING & TRIKE, CHROME

1748

THANK YOU FOR CHOOSING KURYAKYN!

Protect yourself and others from possible injury and property damage or loss. Pay close attention to all instructions, warnings, cautions, and notices regarding the installation, use, and care of this product.

WARNING THIS INDICATION ALERTS YOU TO THE FACT THAT IGNORING THE CONTENTS DESCRIBED HEREIN CAN RESULT IN POTENTIAL DEATH OR SERIOUS INJURY.

CAUTION THIS INDICATION ALERTS YOU TO THE FACT THAT IGNORING THE CONTENTS DESCRIBED HEREIN CAN RESULT IN MINOR OR MODERATE POTENTIAL INJURY.

NOTICE THIS INDICATION ALERTS YOU TO THE FACT THAT IGNORING THE CONTENTS DESCRIBED HEREIN MAY NEGATIVELY AFFECT PRODUCT PERFORMANCE AND FUNCTIONALITY OR DAMAGE THE PRODUCT ITSELF OR THE PRODUCT TO WHICH IT IS BEING ATTACHED.

ENSURE THAT THE FOLLOWING PARTS HAVE BEEN INCLUDED IN THE KIT:

- 1 Right Switch Housing Assembly
- 1 Left Switch Housing Assembly

YOU WILL ALSO NEED:

Set of torx wrenches, set of torx bit sockets, and in-lbs (Nm) torque wrench

NOTICE THESE INSTALLATION INSTRUCTIONS CONTAIN IMPORTANT INFORMATION. ENSURE THE END USER RECEIVES THIS COPY AND IS AWARE OF ITS IMPORTANCE FOR FUTURE USE.

WARNING A FACTORY SERVICE MANUAL WILL BE HELPFUL IN PERFORMING THIS INSTALLATION. DO NOT ATTEMPT TO PERFORM THIS INSTALLATION IF YOU ARE NOT CONFIDENT IN YOUR ABILITY TO COMPLETE ALL OF THE STEPS IN THE PROCEDURE; CONSULT A TRAINED TECHNICIAN. IMPROPER INSTALLATION COULD RESULT IN SERIOUS INJURY OR DEATH.

WARNING ACCIDENTAL VEHICLE START-UP COULD CAUSE DEATH OR SERIOUS INJURY, REMOVE THE MAIN FUSE BEFORE PROCEEDING.



STEP 1 Read and understand all steps in the instructions before starting the installation. Park the motorcycle on a hard, level surface and turn off the ignition. Let motorcycle cool. Remove main fuse.

STEP 2 Refer to PIC 3. Locate the provided Left and Right Switch Housing Assemblies. Dismantle the assemblies and set all the pieces aside on a flat clean surface.

Note: The rear switch housing pieces have an "L" for Left and "R" for Right stamped into them.

CLUTCH (LEFT) SIDE INSTALLATION

STEP 3 Refer to PIC 4 and 5. Remove the handlebar control module by removing the two (2) screws connecting the clamp to the handlebar control assembly. Remove the clamp and handlebar control assembly. Set hardware and assembly aside, they will be reused later.

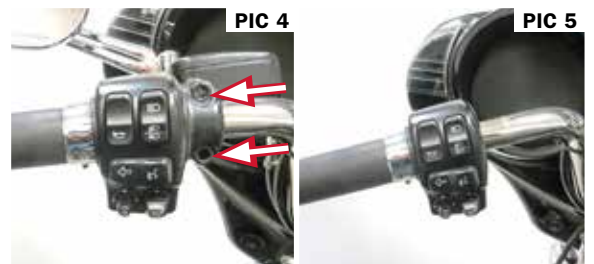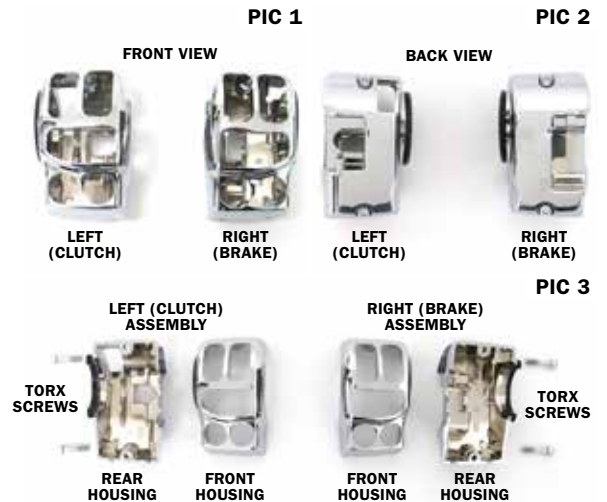

KURYAKYN.COM

866 277 9598 | INFO@KURYAKYN.COM
454 COUNTY ROAD VV SOMERSET, WI 54025

INSTALLATION INSTRUCTIONS

SWITCH HOUSINGS FOR TOURING & TRIKE, CHROME

1748

-CONTINUED-

- STEP 4** Refer to PIC 6 and 7. Carefully remove the trigger finger switch cap from the clutch switch housing. Set it aside, it will be reused.

Note: Refer to your motorcycle's service manual for assistance.



- STEP 5** Refer to PIC 8. Remove the two (2) screws securing the existing switch housing together. Carefully remove the switch housings from the assembly. Set hardware and housing aside, they will NOT be reused.

Note: Refer to PIC 9. Verify that the shield is in the correct position on the outward side of the switch assembly.



- STEP 6** Refer to PIC 10 and 11. Locate the provided Left Switch Housing Assembly and hardware. Properly align and place the front switch housing over the switch assembly buttons. Align and place the rear switch housing, and fasten to the front housing using the provided torx screws (that were dismantled from the assembly in Step 2). Loosely tighten hardware.



- STEP 7** Reinstall trigger finger switch cap.

- STEP 8** Refer to PIC 12. Reinstall the clutch hand control lever assembly in the reverse order that it was taken apart, using the hardware and clamp removed in Step 3. Do not fully tighten the two (2) fasteners.

- STEP 9** Adjust the Switch Housing and handlebar control module to desired riding position. Fully tighten the two (2) screws on the back of the switch housing assembly, and the two (2) screws on the front of the handlebar control module.



TORQUE VALUE FOR SWITCH HOUSING SCREWS:
35-45 IN-LBS (4-5 NM)

TORQUE VALUE FOR HAND CONTROL CLAMP SCREWS:
72-108 IN-LBS (8.1-12.2 NM)

INSTALLATION INSTRUCTIONS

SWITCH HOUSINGS FOR TOURING & TRIKE, CHROME

1748

-CONTINUED-

BRAKE (RIGHT) SIDE INSTALLATION

STEP 10 Refer to PIC 13. Remove the handlebar control module by removing the two (2) screws connecting the clamp to the handlebar control assembly. Remove the clamp and handlebar control assembly. Set hardware and assembly aside, they will be reused later.



STEP 11 Refer to PIC 14. Remove the two (2) screws securing the existing switch housing together. Carefully remove the switch housings from the assembly. Set hardware and housing aside, they will NOT be reused.

Note: Refer to PIC 15. Verify that the shield is in the correct position on the outward side of the switch assembly.



STEP 12 Refer to PIC 16 and 17. Locate the provided Right Switch Housing Assembly and hardware. Properly align and place the front switch housing over the switch assembly buttons. Align and place the rear switch housing, and fasten to the front housing using the provided torx screws (that were dismantled from the assembly in Step 2). Loosely tighten hardware.



STEP 13 Refer to PIC 18. Reinstall the brake hand control lever assembly in the reverse order that it was taken apart, using the hardware and clamp removed in Step 3. Do not fully tighten the two (2) fasteners.

STEP 14 Adjust the Switch Housing and handlebar control module to desired riding position. Fully tighten the two (2) screws on the back of the switch housing assembly, and the two (2) screws on the front of the handlebar control module.

TORQUE VALUE FOR SWITCH HOUSING SCREWS:
35-45 IN-LBS (4-5 NM)

TORQUE VALUE FOR HAND CONTROL CLAMP SCREWS:
72-108 IN-LBS (8.1-12.2 NM)

STEP 15 Reinstall the main fuse as outlined in the service manual and test all switches and levers (clutch-brake) for proper function.



INSTALLATION INSTRUCTIONS

SWITCH HOUSINGS FOR TOURING & TRIKE, CHROME

1748

-CONTINUED-

⚠ WARNING ENSURE PROPER SWITCH AND LIGHT OPERATION BEFORE RIDING THE MOTORCYCLE. VISIBILITY AND PROPER SWITCH FUNCTION ARE A MAJOR CONCERN FOR MOTORCYCLISTS. A SWITCH OR LIGHTING MALFUNCTION COULD RESULT IN DEATH OR SERIOUS INJURY.

⚠ WARNING ENSURE THAT THE CLUTCH CABLE, THROTTLE CABLES AND WIRING ARE NOT PINCHED OR STRETCHED AT ANY POINT WHEN THE HANDLEBARS ARE TURNED TO THEIR FULL STOP POSITION ON EITHER SIDE. STRETCHED OR PINCHED CABLES OR WIRES CAN CAUSE LOSS OF CONTROL THAT COULD RESULT IN SEVERE INJURY OR DEATH.

NOTICE IT IS THE INSTALLER'S RESPONSIBILITY TO ENSURE THAT ALL OF THE FASTENERS (INCLUDING PRE-ASSEMBLED) ARE TIGHTENED BEFORE OPERATION OF THE MOTORCYCLE. KURYAKYN WILL NOT PROVIDE WARRANTY COVERAGE ON PRODUCTS OR COMPONENTS LOST DUE TO IMPROPER INSTALLATION OR LACK OF MAINTENANCE. PERIODIC INSPECTION AND MAINTENANCE ARE REQUIRED ON ALL FASTENERS.

LIMITED WARRANTY

Kuryakyn warrants that any Kuryakyn products sold hereunder, shall be free of defects in materials & workmanship for a period of one (1) year from the date of purchase by the consumer excepting the following provisions:

1. Kuryakyn shall have no obligation in the event the customer is unable to provide a receipt showing the date the customer purchased the product(s).
2. The product must be properly installed, maintained & operated under normal conditions.
3. Kuryakyn shall not be liable for any consequential & incidental damages, including labor & paint, resulting from failure of a Kuryakyn product, failure to deliver, delay in delivery, delivery in nonconforming condition, or for any breach of contract or duty between Kuryakyn & a customer.
4. Kuryakyn products are often intended for use in specific applications. Kuryakyn makes no warranty if a Kuryakyn product is used in applications other than intended.
5. Kuryakyn electrical products are warranted for one (1) year from the date of purchase by the consumer. L.E.D.'s contained in components of Kuryakyn products will be warranted for defects in materials & workmanship for 3 years from the date of purchase whereas all other components shall be warranted for one (1) year.
6. All warranty claims must be directed to the place of purchase. Merchandise sold through internet auction sites or any other unauthorized reseller shall not carry a Kuryakyn warranty. If unsure, please contact the place of purchase to verify they are an authorized Kuryakyn reseller.

RETURN POLICY

Merchandise determined to be defective may be returned up to one year from the date of purchase. Returns must be processed through original seller. Returned merchandise for any other reason other than warranty claims must be in like new condition & subject to a 20% restocking fee. All returns are subject to inspection for determination of full or partial credit. Any returned part that shows evidence of being used or installed contrary to manufacturer's instructions, &/or subjected to improper handling, packaging or return shipping by the customer, will not be eligible for exchange, refund or warranty consideration. All returned electrical items will be inspected & tested. If electrical item is deemed functional, no credit will be issued & item will be returned. All sales are final on discontinued or closeout merchandise.

©2015 KURYAKYN HOLDINGS, LLC ALL RIGHTS RESERVED

KURYAKYN, KURYAKYN K logo and the marks appearing on this instruction sheet are registered and common law trademarks of Kuryakyn Holdings except noted third-party trademarks. A full listing of trademarks and trademark registrations owned by Kuryakyn Holdings can be found at www.kuryakyn.com/legal-notice.

Emissions Notice: The California Air Resources Board (CARB) does not permit the use of aftermarket emission-related parts(s) that alter the performance of OEM emission-related devices unless CARB has issued an Executive Order, other than on racing vehicles on closed courses. Check your local laws and manufacturer's information.

Listed Manufacturers and product model names are for reference only. All product and company names are trademarks or registered trademarks of their respective holders. Use of them does not imply any affiliation with or endorsement by them. All specifications are subject to change without notice.

For additional information on third-party product and company names, please consult our Web page at www.kuryakyn.com/legal-notice

KURYAKYN.COM

866 277 9598 | INFO@KURYAKYN.COM

454 COUNTY ROAD VV SOMERSET, WI 54025