

INSTALLATION

UNIVERSAL DRINK HOLDER

PARTS INCLUDED

1

1

1

- Drink Holder Basket 1
- 1 Perch Mount Arm 1

2

2

1

- Anti-Seize Packet
 - Perch Mount Kit Containing: 2
 - 1/4"-20 x 2" Button Socket Cap Screws
 - 1/4"-20 x 2-1/4" Button Socket Cap Screws
 - M6 x 1.0 x 55mm Button Socket Cap Screws
 - 2 Washers
 - Spacers 2
 - Hardware Kit Containing:
 - 2 Shims
 - 1 Thumb Nut
 - 5/16" Split Lock Washer
 - Installation Instructions

Please read and understand entire instructions before starting installation.

THANK YOU FOR CHOOSING KÜRYAKYN!

IN ORDER TO PROTECT YOU AND OTHERS FROM POSSIBLE INJURY AND/OR PROPERTY DAMAGE OR LOSS, PLEASE PAY CLOSE ATTENTION TO ALL **INSTRUCTIONS, WARNINGS, CAUTIONS AND NOTICES REGARDING THE USE** AND CARE OF THIS PRODUCT.

WARNING	THIS INDICATION ALERTS YOU TO THE FACT THAT IGNORING THE CONTENTS DESCRIBED HEREIN CAN RESULT IN POTENTIAL DEATH OR SERIOUS INJURY.
NOTICE	This indication alerts you to the fact that ignoring the contents described herein may negatively affect product performance and functionality or damage the product itself or the product it is being attached to.
A CAUTION	This indication alerts you to the fact that ignoring the contents described herein can result in minor or moderate potential injury.

TOOLS SUGGESTED

Set of Combination Wrenches, Set of Hex Wrenches, Set of Torx Wrenches, Adjustable Wrench

STRICTLY OBSERVE THE FOLLOWING GUIDELINES IN ORDER TO USE THE PRODUCT PROPERLY AND AVOID POTENTIALLY DANGEROUS ACCIDENTS.

IF INSTALLING THIS PRODUCT FOR ANOTHER PARTY, NOTICE PLEASE MAKE SURE THEY RECEIVE THIS COPY OF THE **INSTALLATION INSTRUCTIONS SO THEY ARE AWARE OF** THE IMPORTANT INFORMATION CONTAINED IN THEM.

STEP 1 Read and understand all steps in the instructions before starting the installation. Park the motorcycle on a hard, level surface and turn off the ignition.

NOTE: Universal fitment for Clutch or Brake Perch Mounting Bolts vertical spacing center to center at 1-1/8" to 1-11/16" apart. Universal Basket Holder will accept most average sized cups, cans, bottles, and mugs with a 2" to 3-1/2" diameter.

1462

CUSTOMER SERVICE

877.370.3604 (toll free)

INSTALLATION QUESTIONS

techsupport@kuryakyn.com or call 715.247.2983

LIMITED WARRANTY

Küryakyn warrants that any Küryakyn products sold hereunder, shall be free of defects in materials and workmanship for a period of one (1) year from the date of purchase by the consumer excepting the following provisions:

 Küryakyn shall have no obligation in the event the customer is unable to provide a receipt showing the date the customer purchased the product(s).

> •The product must be properly installed, maintained and operated under normal conditions.

•Kürvakvn makes no warranty, expressed or implied, with respect to any gold plated products.

•Küryakyn shall not be liable for any consequential and incidental damages, including labor and paint, resulting from failure of a Küryakyn product, failure to deliver, delay in delivery, delivery in nonconforming condition, or for any breech of contract or duty between Kürvakvn and a customer.

Küryakyn products are often intended for use in specific applications. Küryakyn makes no warranty if a Küryakyn product is used in applications other than intended.

•Küryakyn electrical products are warranted for one (1) year from the date of purchase by the consumer. L.E.D.'S contained in components of Küryakyn products will be warranted for defects in materials and workmanship for 3 years from the date of purchase where as all other components shall be warranted for one(1) year. This includes, but is not limited to: control modules, wiring, chrome & other components.

•Küryakyn makes no warranty of any kind in regard to other manufacturer1s products distributed by Küryakyn. Küryakyn will pass on all warranties made by the manufacturer and where possible, will expedite the claim on behalf of the customer, but ultimately, responsibility for disposition of the warranty claim lies with the manufacturer.

ABOUT OUR CATALOG

For purchasing Küryakyn® products, you can receive a complete catalog free of charge. Send the Proof-of-Purchase below with your address to: Küryakyn, P.O. Box 339, Somerset, WI 54025.

Please indicate either Accessories Catalog for Harley-Davidson® or GL & Metric Cruisers.

Be sure to ask your local dealer about other Küryakyn® products, the motorcycle parts and accessories designed for riders by riders.

©2005 Küryakyn USA® All Rights reserved



kuryakyn.con



Ensure that the installation of this product does not interfere with the **CAUTION** proper operation of the motorcycle before riding.

Küryakyn



Avoid damage to the motorcycle. Protect painted surfaces with a soft cloth or blanket.



It is the installer's responsibility to ensure that there is adequate clearance between the Drink Holder and any painted surfaces. Küryakyn is not responsible for any damage due to inadequate clearance.



Be aware of any cables/wires that could potentially be pinched or crushed while using this product.

- **STEP 2** Place a clean, soft blanket over the gas tank to protect the paint.
- STEP 3 Select either the clutch or brake perch for mounting the arm. The arm will usually point towards the center of the bike. Remove the bottom screw securing the clutch or brake perch halves as shown in PIC 1; this will not be used again.
- STEP 4 Identify the correct screw, either the metric or standard, by comparing threads on the included screws to the threads from the screws that were removed. The $1/4''-20 \ge 2-1/4''$ screws are generally used on older H-D motorcycles, the 1/4"-20 X 2" screws on newer Harleys and the M6 X 1.0 X 55mm on Metric bikes.





Use the supplied anti-seize for fasteners; this will prevent galling and make future removal of fasteners easier.


- **STEP 5** As shown in PIC 2, place the washer over the screw, then insert through the perch mount arm and place the spacer over the screw then add a dab of anti-seize to the screw end.
- **STEP 6** As shown in PIC 3, place the arm, screw, washer and spacer on the perch and start the screw, finger tighten the screw.
- **STEP 7** Remove the upper screw securing the perch mounting halves; it will not be used again. PIC 3
- STEP 8 Rotate the arm up into position and install the screw, washer, and spacer, while using a dab of anti-seize as in STEP 5. PIC 3
- STEP 9 Tighten both of the screws securely.
- **STEP 10** To mount the Universal Drink Holder, place the stud through the mounting arm, place one of the shims and the flat washer over the protruding end (PIC 4). Apply anti-seize to the threaded portion of the stud and secure with the thumb nut.

-cont.-



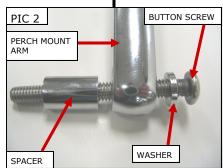

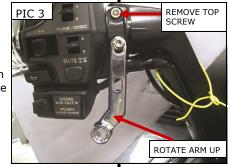


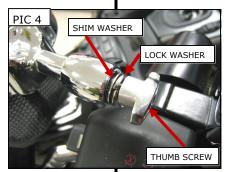



UNIVERSAL DRINK HOLDER

PAGE

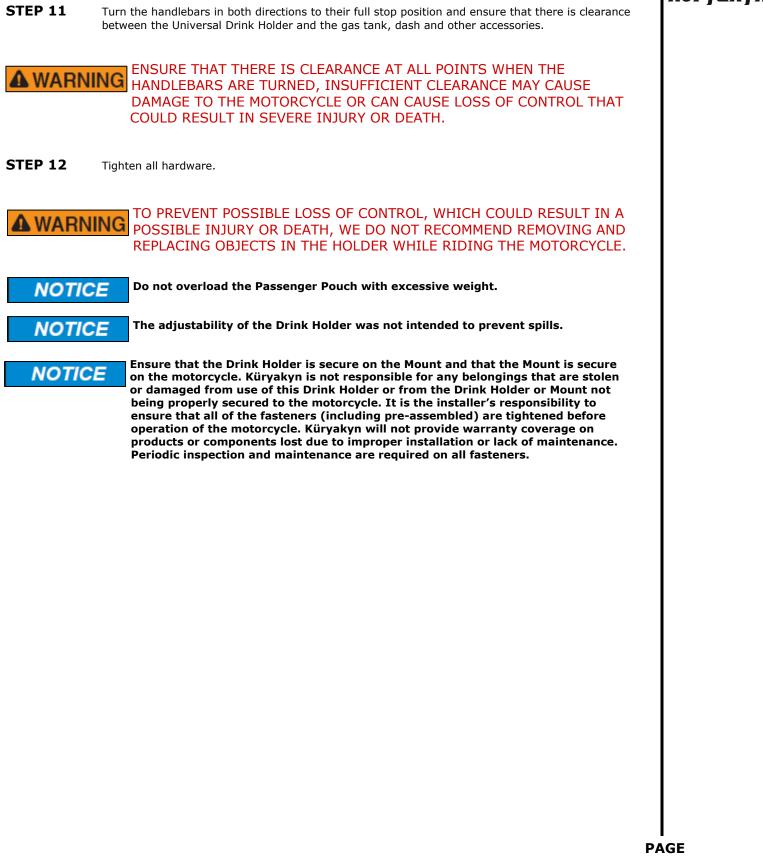

Ride On!

INSTALLATION

B

UNIVERSAL DRINK HOLDER

Küryakyn